

FT800 Series Programmer Guide

Version 2.1

Issue Date: 2016-09-19

This document is a programmer guide for the FT800 series chip. This guide details the chip features and procedures for use. For FT801 specific features and procedures, please see the chapter FT801.

Table of Content

1	Introduction	9
1.1	Overview	9
1.2	Scope	9
1.3	API reference definitions.....	9
2	Programming Model	11
2.1	General Software architecture	11
2.2	Display configuration and initialization	12
2.2.1	Horizontal timing.....	13
2.2.2	Vertical timing	14
2.2.3	Signals updating timing control	14
2.2.4	Timing example: 480x272 at 60Hz	15
2.2.5	Initialization Sequence	16
2.3	Sound Synthesizer.....	17
2.4	Audio playback.....	18
2.5	Graphics routines	19
2.5.1	Getting started.....	19
2.5.2	Coordinate Plane	20
2.5.3	Drawing pattern	21
2.5.4	Writing display lists	26
2.5.5	Bitmap transformation matrix	27
2.5.6	Color and transparency	27
2.5.7	VERTEX2II and VERTEX2F	28
2.5.8	Screenshot	30
2.5.9	Performance	30
3	Register Description	32
3.1	Graphics Engine Registers.....	32

3.2	Touch Engine Registers (FT800 only)	47
3.3	Audio Engine Registers	62
3.4	Co-processor Engine Registers	68
3.5	Miscellaneous Registers	70
4	Display list commands	81
4.1	Graphics State	81
4.2	Command encoding	82
4.3	Command groups	83
4.3.1	Setting Graphics state.....	83
4.3.2	Drawing actions	84
4.3.3	Execution control.....	84
4.4	ALPHA_FUNC	85
4.5	BEGIN	86
4.6	BITMAP_HANDLE	88
4.7	BITMAP_LAYOUT	89
4.8	BITMAP_SIZE	94
4.9	BITMAP_SOURCE	97
4.10	BITMAP_TRANSFORM_A	99
4.11	BITMAP_TRANSFORM_B	101
4.12	BITMAP_TRANSFORM_C	102
4.13	BITMAP_TRANSFORM_D	103
4.14	BITMAP_TRANSFORM_E	104
4.15	BITMAP_TRANSFORM_F	106
4.16	BLEND_FUNC	107
4.17	CALL	110
4.18	CELL	111
4.19	CLEAR	112

4.20	CLEAR_COLOR_A	114
4.21	CLEAR_COLOR_RGB	115
4.22	CLEAR_STENCIL.....	117
4.23	CLEAR_TAG	118
4.24	COLOR_A	119
4.25	COLOR_MASK.....	120
4.26	COLOR_RGB	122
4.27	DISPLAY	123
4.28	END.....	124
4.29	JUMP.....	125
4.30	LINE_WIDTH	126
4.31	MACRO.....	127
4.32	POINT_SIZE.....	128
4.33	RESTORE_CONTEXT	129
4.34	RETURN	130
4.35	SAVE CONTEXT	131
4.36	SCISSOR_SIZE	132
4.37	SCISSOR_XY	134
4.38	STENCIL_FUNC	135
4.39	STENCIL_MASK.....	137
4.40	STENCIL_OP	138
4.41	TAG.....	140
4.42	TAG_MASK.....	141
4.43	VERTEX2F	142
4.44	VERTEX2II.....	143
5	Co-Processor Engine commands	144

5.1	Co-processor handling of Display list commands.....	146
5.2	Synchronization	146
5.3	ROM and RAM Fonts	147
5.4	Cautions	148
5.5	Fault Scenarios.....	149
5.6	widgets physical dimension.....	149
5.7	widgets color settings	149
5.8	Co-processor engine graphics state	150
5.9	Definition of parameter OPTION.....	151
5.10	Co-processor engine resources	153
5.11	Command groups.....	153
5.12	CMD_DLSTART - start a new display list	155
5.13	CMD_SWAP - swap the current display list	156
5.14	CMD_COLDSTART - set co-processor engine state to default values	156
5.15	CMD_INTERRUPT - trigger interrupt INT_CMDFLAG.....	158
5.16	CMD_APPEND - append memory to display list.....	159
5.17	CMD_REGREAD - read a register value.....	160
5.18	CMD_MEMWRITE - write bytes into memory.....	161
5.19	CMD_INFLATE - decompress data into memory	163
5.20	CMD_LOADIMAGE - load a JPEG image	164
5.21	CMD_MEMCRC - compute a CRC-32 for memory.....	166
5.22	CMD_MEMZERO - write zero to a block of memory.....	167
5.23	CMD_MEMSET - fill memory with a byte value	168
5.24	CMD_MEMCPY - copy a block of memory.....	169
5.25	CMD_BUTTON - draw a button	170
5.26	CMD_CLOCK - draw an analog clock.....	173

5.27	CMD_FGCOLOR - set the foreground color	178
5.28	CMD_BGCOLOR - set the background color	179
5.29	CMD_GRADCOLOR - set the 3D button highlight color ..	181
5.30	CMD_GAUGE - draw a gauge	183
5.31	CMD_GRADIENT - draw a smooth color gradient	190
5.32	CMD_KEYS - draw a row of keys	194
5.33	CMD_PROGRESS - draw a progress bar.....	199
5.34	CMD_SCROLLBAR - draw a scroll bar.....	202
5.35	CMD_SLIDER - draw a slider	205
5.36	CMD_DIAL - draw a rotary dial control.....	208
5.37	CMD_TOGGLE - draw a toggle switch	211
5.38	CMD_TEXT - draw text	214
5.39	CMD_NUMBER - draw a decimal number	218
5.40	CMD_SETMATRIX - write the current matrix to the display list	221
5.41	CMD_GETMATRIX - retrieves the current matrix coefficients	221
5.42	CMD_GETPTR - get the end memory address of inflated data	223
5.43	CMD_GETPROPS - get the image properties decompressed by CMD_LOADIMAGE.....	224
5.44	CMD_SCALE - apply a scale to the current matrix	224
5.45	CMD_ROTATE - apply a rotation to the current matrix ..	227
5.46	CMD_TRANSLATE - apply a translation to the current matrix	229
5.47	CMD_CALIBRATE - execute the touch screen calibration routine	231
5.48	CMD_SPINNER - start an animated spinner	232

5.49	CMD_SCREENSAVER - start an animated screensaver ...	236
5.50	CMD_SKETCH - start a continuous sketch update	237
5.51	CMD_STOP - stop any of spinner, screensaver or sketch	239
5.52	CMD_SETFONT - set up a custom font.....	240
5.53	CMD_TRACK - track touches for a graphics object	241
5.54	CMD_SNAPSHOT - take a snapshot of the current screen	245
5.55	CMD_LOGO - play FTDI logo animation	246
6	FT801 operation	247
6.1	FT801 introduction	247
6.2	FT801 touch engine.....	247
6.3	FT801 touch registers	247
6.4	Register summary	253
6.5	Calibration.....	253
6.6	CMD_CSKETCH – Capacitive touch specific sketch	254
7	Contact Information	256
	Appendix A – References	257
	Document References	257
	Acronyms & Abbreviations	257
	Appendix B – List of Figures & Tables	258
	List of Figures	258
	List of Tables.....	258
	Appendix C – Memory Map	259
	Appendix D - List of Code Snippet	260
	Appendix E - List of Registers	261

Appendix F – Revision History 263

1 Introduction

This document captures programming details of FT800 series chips including graphics commands, widget commands and configurations to control FT800 series chips for smooth and vibrant screen effects.

The FT800 series chips are graphics controllers with add-on features such as audio playback and touch capabilities. They consist of a rich set of graphics objects (primitive and widgets) that can be used for displaying various menus and screen shots for a range of products including home appliances, toys, industrial machinery, home automation, elevators, and many more.

1.1 Overview

This document will be useful to understand the command set and demonstrate the ease of usage in the examples given for each specific instruction. In addition, it also covers various power modes, audio, and touch features as well as their usage.

Information on pin settings, hardware model and hardware configuration can be found in the FT800 data sheet ([DS_FT800 Embedded Video Engine](#)) or FT801 datasheet (DS_FT801).

1.2 Scope

This document is targeted for software programmers and system designers to develop graphical user interface (GUI) applications on any system processor with either an SPI or I²C master port.

1.3 API reference definitions

Functionality and nomenclature of the APIs used in this document.

wr8() – write 8 bits to intended address location

wr16() – write 16 bits to intended address location

wr32() – write 32 bits to intended address location

wr8s() – write 8 bits string to intended address location

rd8() – read 8 bits from intended address location

rd16() – read 16 bits from intended address location

rd32() – read 32 bits from intended address location

rd8s() – read 8 bits string from intended address location

cmd() – write 32 bits command to co-processor engine FIFO RAM_CMD

cmd_*() – Write 32 bits co-processor engine command with its necessary parameters to the co-processor engine FIFO (RAM_CMD).

dl() – Write the specified 32 bits display list command to RAM_DL. Refer to section 2.5.4 Writing display lists for more information.

host_command() – send host command to FT800. Refer to the FT800 data sheet for more information.

2 Programming Model

The FT800 appears to the host MCU as a memory-mapped SPI or I²C device. The host communicates with the FT800 using Read or Write to 8MB address space.

Within this document, endianness of DL commands, co-processor engine commands, register values read/write, input RGB bitmap data and ADPCM input data are in '*Little Endian*' format.

2.1 General Software architecture

The software architecture can be broadly classified into layers such as custom applications, graphics/GUI manager, video manger, audio manager, drivers etc. FT800 higher level graphics engine commands and co-processor engine widget commands are part of the graphics/GUI manager. Control & data paths of video and audio are part of video manager and audio manager. Communication between graphics/GUI manager and the hardware is via the SPI or I²C driver.

Typically the display screen shot is constructed by the custom application based on the framework exposed by the graphics/GUI manager.

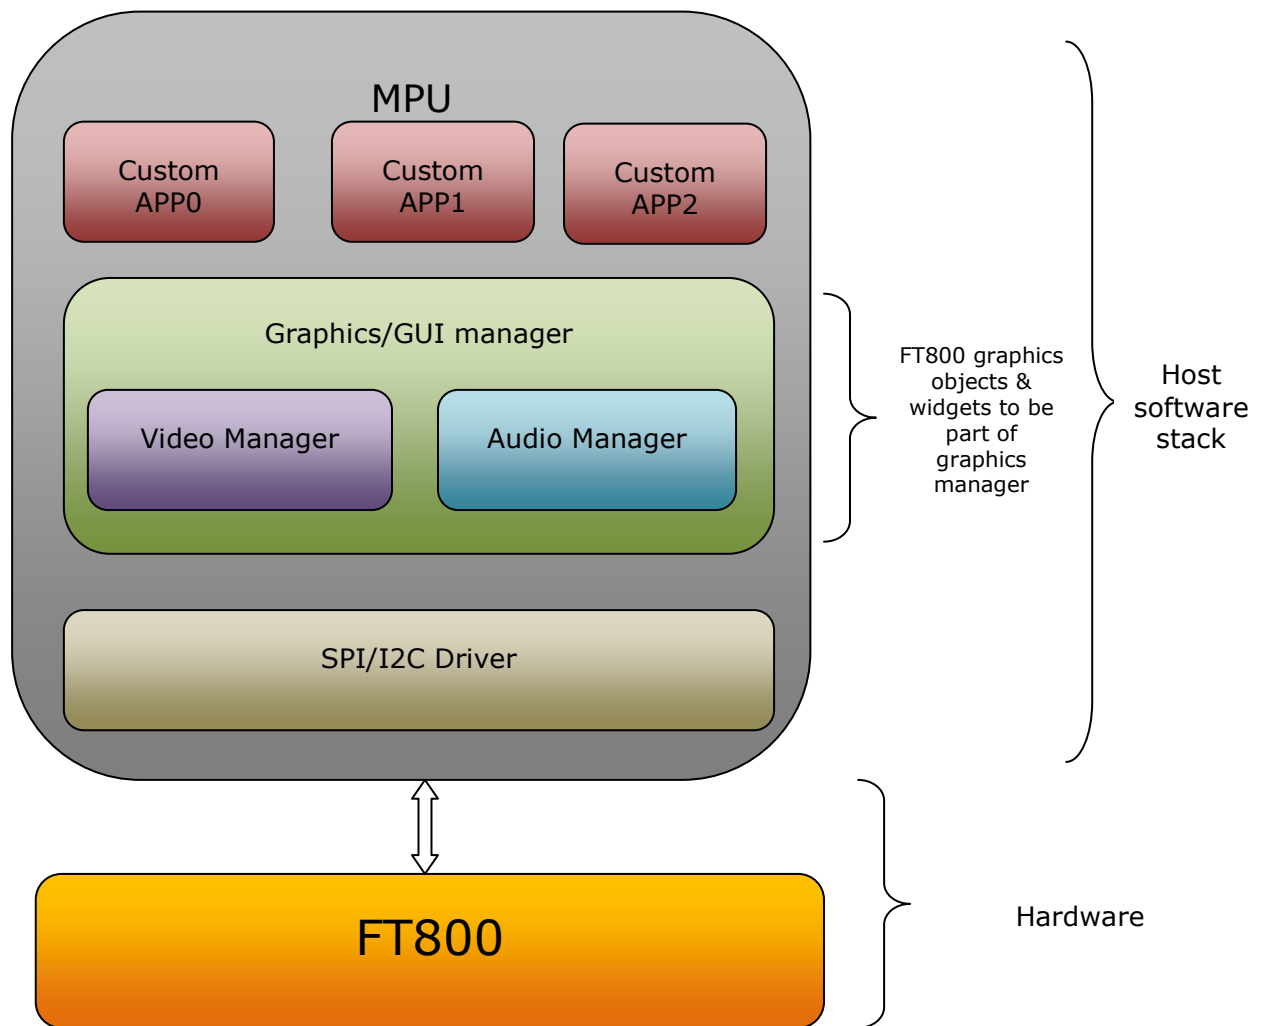


Figure 1: Software Architecture

2.2 Display configuration and initialization

To configure the display, load the timing control registers with values for the particular display. These registers control horizontal timing:

- REG_PCLK
- REG_PCLK_POL
- REG_HCYCLE
- REG_HOFFSET
- REG_HSIZE
- REG_HSYNC0
- REG_HSYNC1

These registers control vertical timing:

- REG_VCYCLE
- REG_VOFFSET
- REG_VSIZE
- REG_VSYNCO
- REG_VSYNC1

And the REG_CSPREAD register changes color clock timing to reduce system noise.

GPIO bit 7 is used for the display enable pin of the LCD module. By setting the direction of the GPIO bit to out direction, the display can be enabled by writing value of 1 into GPIO bit 7 or the display can be disabled by writing a value of 0 into GPIO bit 7. By default GPIO bit 7 direction is output and the value is 0.

Note: Refer to FT800 data sheet for information on display register set.

2.2.1 Horizontal timing

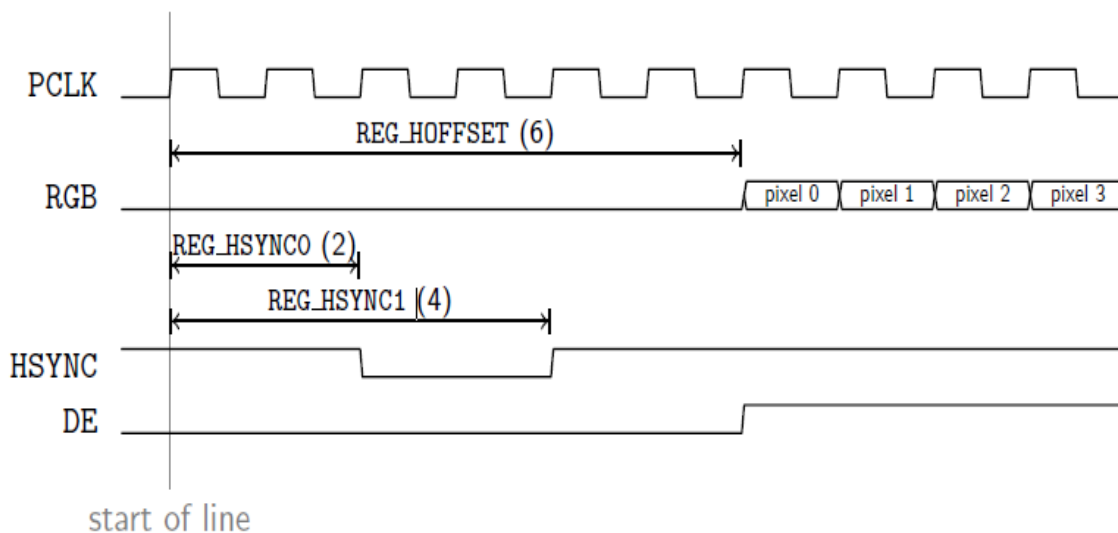


Figure 2: Horizontal Timing

REG_PCLK controls the frequency of PCLK. The register specifies a divisor for the main 48 MHz clock, so a value of 4 gives a 12 MHz PCLK. If REG_PCLK is zero, then all display output is suspended. REG_PCLK_POL controls the polarity of PCLK. Zero means that display data is clocked out on the rising edge of PCLK. One means data is clocked on the falling edge.

The total number of PCLKs in a horizontal line is REG_HCYCLE. Within this horizontal line are the scanned out pixels, REG_HSIZE in total. They start after REG_HOFFSET cycles. Signal DE is high while pixels are being scanned out.

Horizontal sync timing on signal HSYNC is controlled by REG_HSYNCO and REG_HSYNC1. They specify the time at which HSYNC falls and rises respectively.

2.2.4 Timing example: 480x272 at 60Hz

For a display updating at 60Hz, there are $48000000/60 = 800000$ fast clocks per frame. Setting the PCLK divisor REG_PCLK to 5 gives a PCLK frequency of 9.6 MHz and

$$800000/5 = 160000 \text{ PCLKs per frame.}$$

For a 480 x 272 display, the typical horizontal period is 525 clocks, and vertical period is 286 lines. A little searching shows that a 548 x 292 size gives a period of 160016 clocks, very close to the target. So with a REG_HCYCLE=548 and REG_VCYCLE=292 the display frequency is almost exactly 60Hz. The other register settings can be set directly from the display panel datasheet.

2.2.5 Initialization Sequence

This section describes the initialization sequence in the different scenario.

- Initialization Sequence during the boot up:
 1. Use MCU SPI clock not more than 11MHz
 2. Send Host command "CLKEXT" to FT800
 3. Send Host command "ACTIVE" to enable clock to FT800.
 4. Configure video timing registers, except REG_PCLK
 5. Write first display list
 6. Write REG_DLSWAP, FT800 swaps display list immediately
 7. Enable back light control for display
 8. Write REG_PCLK, video output begins with the first display list
 9. Use MCU SPI clock not more than 30MHz

```
MCU_SPI_CLK_Freq(<11MHz); //use the MCU SPI clock less than 11MHz

host_command(CLKEXT); //send command to "CLKEXT" to FT800
host_command(ACTIVE); //send host command "ACTIVE" to FT800

/* Configure display registers - demonstration for WQVGA resolution */
wr16(REG_HCYCLE, 548);
wr16(REG_HOFFSET, 43);
wr16(REG_HSYNC0, 0);
wr16(REG_HSYNC1, 41);
wr16(REG_VCYCLE, 292);
wr16(REG_VOFFSET, 12);
wr16(REG_VSYNC0, 0);
wr16(REG_VSYNC1, 10);
wr8(REG_SWIZZLE, 0);
wr8(REG_PCLK_POL, 1);
wr8(REG_CSPREAD, 1);
wr16(REG_HSIZE, 480);
wr16(REG_VSIZE, 272);

/* write first display list */
wr32(RAM_DL+0, CLEAR_COLOR_RGB(0,0,0));
wr32(RAM_DL+4, CLEAR(1,1,1));
wr32(RAM_DL+8, DISPLAY());

wr8(REG_DLSWAP, DLSWAP_FRAME); //display list swap

wr8(REG_GPIO_DIR, 0x80 | Ft_Gpu_Hal_Rd8(phost, REG_GPIO_DIR));
wr8(REG_GPIO, 0x080 | Ft_Gpu_Hal_Rd8(phost, REG_GPIO)); //enable display bit

wr8(REG_PCLK, 5); //after this display is visible on the LCD

MCU_SPI_CLK_Freq(<30Mhz); //use the MCU SPI clock upto 30MHz
```

Code snippet 1 Initialization sequence

- Initialization Sequence from Power Down using PD_N pin:

1. Drive the PD_N pin high
 2. Wait for at least 20ms
 3. Execute "Initialization Sequence during the Boot UP" from steps 1 to 9
- Initialization Sequence from Sleep Mode:
 1. Send Host command "ACTIVE" to enable clock to FT800
 2. Wait for at least 20ms
 3. Execute "Initialization Sequence during Boot Up" from steps 5 to 8
 - Initialization sequence from standby mode:

Execute all the steps mentioned in "Initialization Sequence from Sleep Mode" except waiting for at least 20ms in step 2.

Note: Refer to FT800 data sheet for information on power modes. Follow section 2.3 for audio management during power down and reset operations.

2.3 Sound Synthesizer

Sample code to play C8 on the xylophone:

```
wr8(REG_VOL_SOUND,0xFF); //set the volume to maximum
wr16(REG_SOUND, (0x6C<< 8) | 0x41); // C8 MIDI note on xylophone
wr8(REG_PLAY, 1); // play the sound
```

Code snippet 2 sound synthesizer play C8 on the xylophone

Sample code to check the status of sound play:

```
Sound_status = rd8(REG_PLAY); //1-play is going on, 0-play has finished
```

Code snippet 3 sound synthesizer check the status of sound playing

Sample code to stop sound play:

```
wr16(REG_SOUND,0x0); //configure silence as sound to be played
wr8(REG_PLAY,1); //play sound
Sound_status = rd8(REG_PLAY); //1-play is going on, 0-play has finished
```

Code snippet 4 sound synthesizer stop playing sound

To avoid an audio pop sound on reset or power state change, trigger a "mute" sound, and wait for it to complete (completion of sound play is when REG_PLAY contains a value of 0). This sets the output value to 0 level. On reboot, the audio engine plays back the "unmute" sound to drive the output to the half way level.

Note: Refer to FT800 data sheet for more information on sound synthesizer and audio playback.

2.4 Audio playback

FT800 supports three types of audio format: 4 Bit IMA ADPCM, 8 Bit signed PCM, 8 Bit u-Law. For IMA ADPCM format, please note the byte order: within one byte, first sample (4 bits) shall locate from bit 0 to bit 3, while the second sample (4 bits) shall locate from bit 4 to bit 7.

For the audio data in FT800 RAM to play, FT800 requires the start address in REG_PLAYBACK_START to be 64 bit (8 Bytes) aligned. In addition, the length of audio data specified by REG_PLAYBACK_LENGTH is required to be 64 bit (8 Bytes) aligned.

To learn how to play back the audio data, please check the sample code below:

```
wr8 (REG_VOL_PB,0xFF); //configure audio playback volume
wr32 (REG_PLAYBACK_START,0); //configure audio buffer starting address
wr32 (REG_PLAYBACK_LENGTH,100*1024); //configure audio buffer length
wr16 (REG_PLAYBACK_FREQ,44100); //configure audio sampling frequency
wr8 (REG_PLAYBACK_FORMAT,ULAW_SAMPLES); //configure audio format
wr8 (REG_PLAYBACK_LOOP,0); //configure once or continuous playback
wr8 (REG_PLAYBACK_PLAY,1); //start the audio playback
```

Code snippet 5 Audio playback

```
AudioPlay_Status = rd8 (REG_PLAYBACK_PLAY); //1-audio playback is going on,
0-audio playback has finished
```

Code snippet 6 Check the status of audio playback

```
wr32 (REG_PLAYBACK_LENGTH,0); //configure the playback length to 0
wr8 (REG_PLAYBACK_PLAY,1); //start audio playback
```

Code snippet 7 Stop the audio playback

2.5 Graphics routines

This section describes graphics features and captures a few of examples.

2.5.1 Getting started

This short example creates a screen with the text "FTDI" on it, with a red dot.



Figure 6: Getting Start Example Image

The code to draw the screen is:

```

wr32 (RAM_DL + 0, CLEAR(1, 1, 1)); // clear screen
wr32 (RAM_DL + 4, BEGIN(BITMAPS)); // start drawing bitmaps
wr32 (RAM_DL + 8, VERTEX2II(220, 110, 31, 'F')); // ascii F in font 31
wr32 (RAM_DL + 12, VERTEX2II(244, 110, 31, 'T')); // ascii T
wr32 (RAM_DL + 16, VERTEX2II(270, 110, 31, 'D')); // ascii D
wr32 (RAM_DL + 20, VERTEX2II(299, 110, 31, 'I')); // ascii I
wr32 (RAM_DL + 24, END());
wr32 (RAM_DL + 28, COLOR_RGB(160, 22, 22)); // change color to red
wr32 (RAM_DL + 32, POINT_SIZE(320)); // set point size to 20 pixels in
radius
wr32 (RAM_DL + 36, BEGIN(POINTS)); // start drawing points
wr32 (RAM_DL + 40, VERTEX2II(192, 133, 0, 0)); // red point
wr32 (RAM_DL + 44, END());
wr32 (RAM_DL + 48, DISPLAY()); // display the image

```

Code snippet 8 Getting Started

After the above drawing commands are loaded into display list RAM, register REG_DLSWAP is required to be set to 0x02 in order to make the new display list active on the next frame refresh.

Note:

- The display list always starts at address RAM_DL
- The address always increments by 4(bytes) as each command is 32 bit width.
- Command CLEAR is recommended to be used before any other drawing operation, in order to put FT800 graphics engine in a known state.
- The end of the display list is always flagged with the command DISPLAY

2.5.2 Coordinate Plane

The figure below illustrates the graphics coordinate plane and its visible area.

The valid X and Y coordinate ranges from -1024 to 1023 in pixel precision, i.e., from -16384 to 16383 in 1/16th pixel precision.

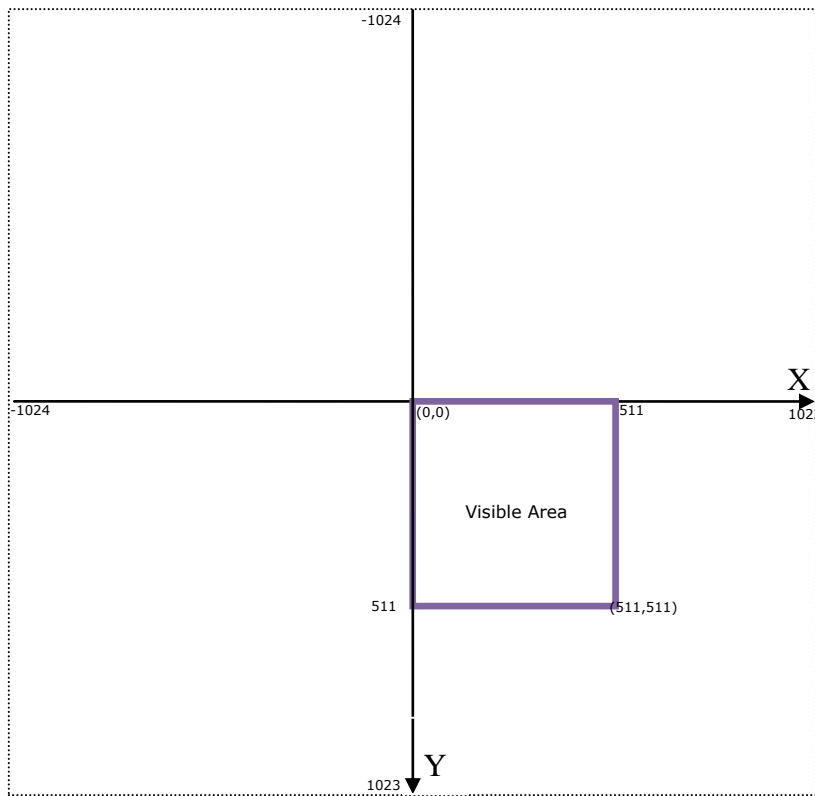


Figure 7: FT800 graphics coordinates plane in pixel precision

2.5.3 Drawing pattern

The general pattern for drawing is:

- BEGIN with one of the primitive types
- Input one or more vertices, which specify the placement of the primitive on the screen
- END to mark the end of the primitive

(note: In many examples the END command is not explicitly listed)

The primitive types that the graphics engine support are:

- BITMAPS - rectangular pixel arrays, in various color formats
- POINTS - anti-aliased points, point radius is 1-256 pixels
- LINES - anti-aliased lines, with width from 0 to 4095 1/16th of pixel units. (width is from center of the line to boundary)
- LINE_STRIP - anti-aliased lines, connected head-to-tail
- RECTS - round-cornered rectangles, curvature of the corners can be adjusted using LINE_WIDTH.
- EDGE_STRIP_A/B/L/R - edge strips

Examples

Draw points with varying radius from 5 pixels to 13 pixels with different colors:



```
dl( COLOR_RGB(128, 0, 0) );
dl( POINT_SIZE(5 * 16) );
dl( BEGIN(POINTS) );
dl( VERTEX2F(30 * 16, 17 * 16) );
dl( COLOR_RGB(0, 128, 0) );
dl( POINT_SIZE(8 * 16) );
dl( VERTEX2F(90 * 16, 17 * 16) );
dl( COLOR_RGB(0, 0, 128) );
dl( POINT_SIZE(10 * 16) );
dl( VERTEX2F(30 * 16, 51 * 16) );
dl( COLOR_RGB(128, 128, 0) );
dl( POINT_SIZE(13 * 16) );
dl( VERTEX2F(90 * 16, 51 * 16) );
```

The VERTEX2F command gives the location of the circle center.

Draw lines with varying sizes from 2 pixels to 6 pixels with different colors (line width size is from center of the line till boundary):



```
dl( COLOR_RGB(128, 0, 0) );
dl( LINE_WIDTH(2 * 16) );
dl( BEGIN(LINES) );
dl( VERTEX2F(30 * 16,38 * 16) );
dl( VERTEX2F(30 * 16,63 * 16) );
dl( COLOR_RGB(0, 128, 0) );
dl( LINE_WIDTH(4 * 16) );
dl( VERTEX2F(60 * 16,25 * 16) );
dl( VERTEX2F(60 * 16,63 * 16) );
dl( COLOR_RGB(128, 128, 0) );
dl( LINE_WIDTH(6 * 16) );
dl( VERTEX2F(90 * 16, 13 * 16) );
dl( VERTEX2F(90 * 16, 63 * 16) );
```

The VERTEX2F commands are in pairs to define the start and finish point of the line.

Draw rectangle with sizes of 5x25, 10x38 and 15x50 dimensions (line width size is used for corner curvature, LINE_WIDTH pixels are added on both directions in addition to rectangle dimension):




```
dl( COLOR_RGB(128, 0, 0) );
dl( LINE_WIDTH(1 * 16) );
dl( BEGIN(RECTS) );
dl( VERTEX2F(28 * 16,38 * 16) );
dl( VERTEX2F(33 * 16,63 * 16) );
dl( COLOR_RGB(0, 128, 0) );
dl( LINE_WIDTH(5 * 16) );
dl( VERTEX2F(50 * 16,25 * 16) );
dl( VERTEX2F(60 * 16,63 * 16) );
dl( COLOR_RGB(128, 128, 0) );
dl( LINE_WIDTH(10 * 16) );
```

```
dl( VERTEX2F(83 * 16, 13 * 16) );
dl( VERTEX2F(98 * 16, 63 * 16) );
```

The VERTEX2F commands are in pairs to define the top left and bottom right corners of the rectangle.

Draw line strips for sets of coordinates:

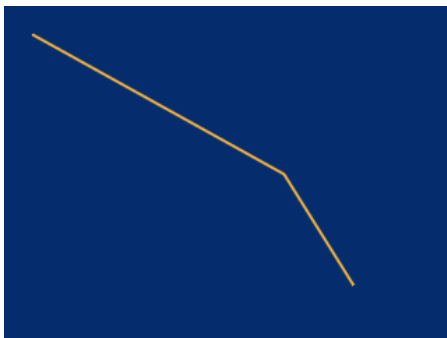

```
dl( CLEAR_COLOR_RGB(5, 45, 110) );
dl( COLOR_RGB(255, 168, 64) );
dl( CLEAR(1 ,1 ,1) );
dl( BEGIN(LINE_STRIP) );
dl( VERTEX2F(5 * 16,5 * 16) );
dl( VERTEX2F(50 * 16,30 * 16) );
dl( VERTEX2F(63 * 16,50 * 16) );
```

Draw Edge strips for above:



```
dl( CLEAR_COLOR_RGB(5, 45, 110) );
dl( COLOR_RGB(255, 168, 64) );
dl( CLEAR(1 ,1 ,1) );
dl( BEGIN(EDGE_STRIP_A) );
dl( VERTEX2F(5 * 16,5 * 16) );
dl( VERTEX2F(50 * 16,30 * 16) );
dl( VERTEX2F(63 * 16,50 * 16) );
```

Draw Edge strips for below:



```
dl( CLEAR_COLOR_RGB(5, 45, 110) );
dl( COLOR_RGB(255, 168, 64) );
dl( CLEAR(1 ,1 ,1) );
dl( BEGIN(EDGE_STRIP_B) );
dl( VERTEX2F(5 * 16,5 * 16) );
```

```
dl( VERTEX2F(50 * 16,30 * 16) );
```

```
dl( VERTEX2F(63 * 16,50 * 16) );
```


Draw Edge strips for right:



```
dl( CLEAR_COLOR_RGB(5, 45, 110) );
dl( COLOR_RGB(255, 168, 64) );
dl( CLEAR(1 ,1 ,1) );
dl( BEGIN(EDGE_STRIP_R) );
dl( VERTEX2F(5 * 16,5 * 16) );
dl( VERTEX2F(50 * 16,30 * 16) );
dl( VERTEX2F(63 * 16,50 * 16) );
```

Draw Edge strips for left:



```
dl( CLEAR_COLOR_RGB(5, 45, 110) );
dl( COLOR_RGB(255, 168, 64) );
dl( CLEAR(1 ,1 ,1) );
dl( BEGIN(EDGE_STRIP_L) );
dl( VERTEX2F(5 * 16,5 * 16) );
dl( VERTEX2F(50 * 16,30 * 16) );
dl( VERTEX2F(63 * 16,50 * 16) );
```

2.5.4 Writing display lists

Writing display list entries with `wr32()` is time-consuming and error-prone, so instead a function might be used:

```
static size_t dli;
static void dl(unsigned long cmd)
{
    wr32(RAM_DL + dli, cmd);
    dli += 4;
}
...
dli = 0; // start writing the display list
dl(CLEAR(1, 1, 1)); // clear screen
dl(BEGIN(BITMAPS)); // start drawing bitmaps
dl(VERTEX2II(220, 110, 31, 'F')); // ascii F in font 31
dl(VERTEX2II(244, 110, 31, 'T')); // ascii T
dl(VERTEX2II(270, 110, 31, 'D')); // ascii D
dl(VERTEX2II(299, 110, 31, 'I')); // ascii I
dl(END());
dl(COLOR_RGB(160, 22, 22)); // change color to red
dl(POINT_SIZE(320)); // set point size
dl(BEGIN(POINTS)); // start drawing points
dl(VERTEX2II(192, 133, 0, 0)); // red point
dl(END());
dl(DISPLAY()); // display the image
```

Code snippet 9 dl function definition

2.5.5 Bitmap transformation matrix

To achieve the bitmap transformation, the bitmap transform matrix below is specified in the FT800 and denoted as m

$$m = \begin{bmatrix} \text{BITMAP_TRANSFORM_A} & \text{BITMAP_TRANSFORM_B} & \text{BITMAP_TRANSFORM_C} \\ \text{BITMAP_TRANSFORM_D} & \text{BITMAP_TRANSFORM_E} & \text{BITMAP_TRANSFORM_F} \end{bmatrix}$$

by default $m = \begin{bmatrix} 1.0 & 0.0 & 0.0 \\ 0.0 & 1.0 & 0.0 \end{bmatrix}$, it is named as identity matrix.

The coordinates x' , y' after transforming is calculated in following equation:

$$\begin{bmatrix} x' \\ y' \\ 1 \end{bmatrix} = m \times \begin{bmatrix} x \\ y \\ 1 \end{bmatrix}$$

i.e.:

$$x' = x * A + y * B + C$$

$$y' = x * D + y * E + F$$

where A, B, C, D, E, F stands for the values assigned by commands $\text{BITMAP_TRANSFORM_A-F}$.


2.5.6 Color and transparency

The same bitmap can be drawn in more places on the screen, in different colors and transparency:

```
d1 (COLOR_RGB (255, 64, 64)); // red at (200, 120)
d1 (VERTEX2II (200, 120, 0, 0));
d1 (COLOR_RGB (64, 180, 64)); // green at (216, 136)
d1 (VERTEX2II (216, 136, 0, 0));
d1 (COLOR_RGB (255, 255, 64)); // transparent yellow at (232, 152)
d1 (COLOR_A (150));
d1 (VERTEX2II (232, 152, 0, 0));
```

Code snippet 10 color and transparency


The COLOR_RGB command changes the current drawing color, which colors the bitmap. The COLOR_A command changes the current drawing alpha, changing the transparency of the drawing: an alpha of 0 means fully transparent and an alpha of 255 is fully opaque. Here a value of 150 gives a partially transparent effect.

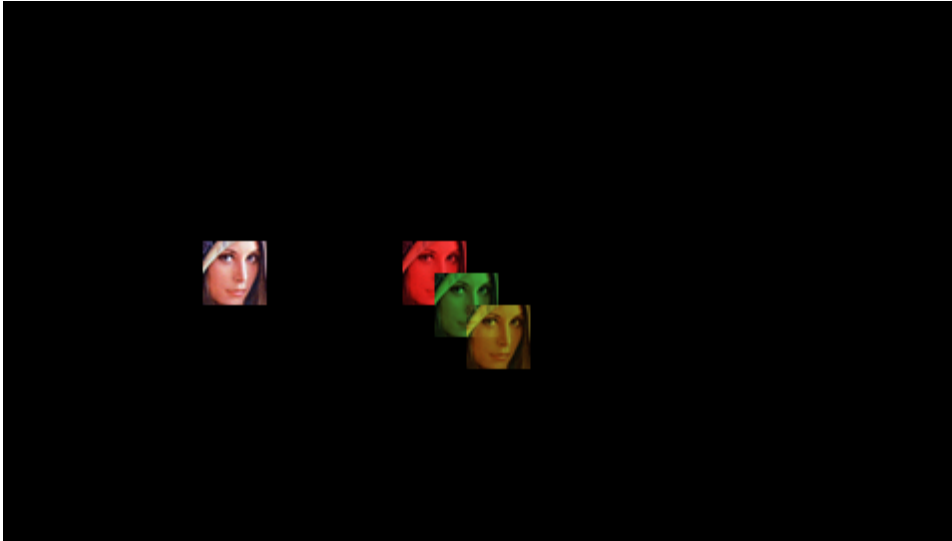

2.5.7 VERTEX2II and VERTEX2F

The VERTEX2II command used above only allows positive screen coordinates. If the bitmap is partially off screen, for example during a screen scroll, then it is necessary to specify negative screen coordinates. The VERTEX2F command allows negative coordinates. It also allows fractional coordinates, because it specifies screen (x,y) in units of 1/16 of a pixel.

For example, drawing the same bitmap at screen position (-10,-10) using VERTEX2F:

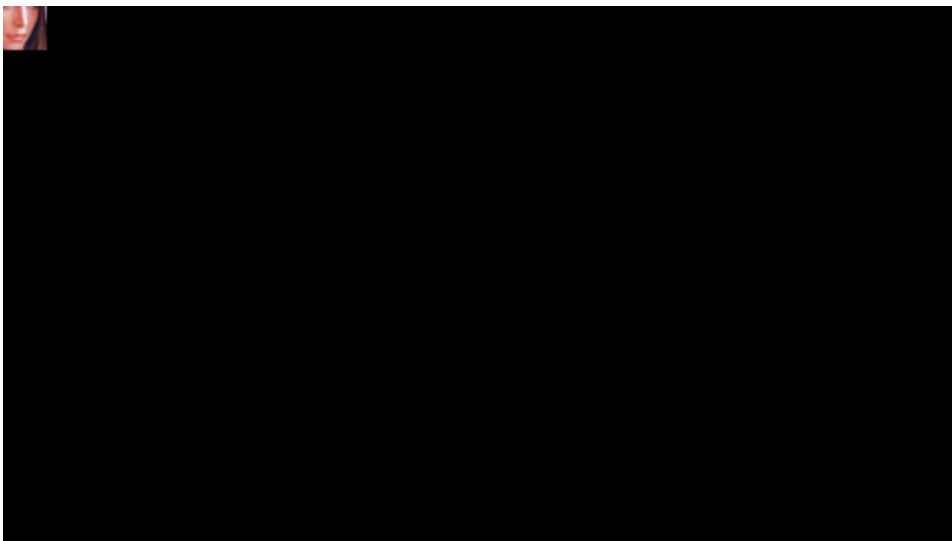

```
d1 (BEGIN (BITMAPS));  
d1 (VERTEX2F (-160, -160));  
d1 (END ());
```

Code snippet 11 negative screen coordinates example

2.5.8 Screenshot

The code below demonstrates how to utilize the registers and RAM_SCREENSHOT to capture the current screen with full pixel value. Each pixel is represented in 32 bits and BGRA format. However, this process may cause the flicking and tearing effect.

```
#define SCREEN_WIDTH    480
#define SCREEN_HEIGHT   272

uint32 screenshot[SCREEN_WIDTH*SCREEN_HEIGHT];

wr8(REG_SCREENSHOT_EN, 1);
for (int ly = 0; ly < SCREEN_HEIGHT; ly++) {
    wr16(REG_SCREENSHOT_Y, ly);
    wr8(REG_SCREENSHOT_START, 1);

    //Read 64 bit registers to see if it is busy
    while (rd32(REG_SCREENSHOT_BUSY) | rd32(REG_SCREENSHOT_BUSY + 4));

    wr8(REG_SCREENSHOT_READ , 1);
    for (int lx = 0; lx < SCREEN_WIDTH; lx ++) {
        //Read 32 bit pixel value from RAM_SCREENSHOT
        //The pixel format is BGRA: Blue is in lowest address and Alpha
        //is in highest address
        screenshot[ly*SCREEN_HEIGHT + lx] = rd32(RAM_SCREENSHOT + lx*4);
    }
    wr8(REG_SCREENSHOT_READ, 0);
}
wr8(REG_SCREENSHOT_EN, 0);
```

Code Snippet 12 Screenshot with full pixel value

2.5.9 Performance

The graphics engine has no frame buffer: it uses dynamic compositing to build up each display line during scan out. Because of this, there is a finite amount of time available to draw each line. This time depends on the scan out parameters (REG_PCLK and REG_HCYCLE) but is never less than 2048 internal clock cycles.

Some performance limits:

- The display list length must be less than 2048 instructions, because the graphics engine fetches display list commands one per clock.
- The graphics engine performance rendering pixels is 4 pixels per clock, for any line with 2048 display commands the total pixels performance drawn must be less than 8192.
- For some bitmap formats, the drawing rate is 1 pixel per clock. These are TEXT8X8, TEXTVGA and PALETTED.
- For bilinear filtered pixels, the drawing rate is reduced to ¼ pixel per clock. Most bitmap formats draw at 1 pixel per clock, and the above formats (TEXT8X8, TEXTVGA and PALETTED) draw at 1 pixel every 4 clocks.

To summarize:

Table 1 Bitmap rendering performance

Filter Mode	Format	Rate
Nearest	TEXT8X8, TEXTVGA and PALETTED	1 pixel per clock
Nearest	all other formats	4 pixel per clock
BILINEAR	TEXT8X8, TEXTVGA and PALETTED	1/4 pixel per clock
BILINEAR	all other formats	1 pixel per clock

Register Definition 13 REG_HSYNC1 Definition

REG_HSYNC1 Definition		
Reserved		R/W
31	9	0
Address: 0x102438		Reset Value: 0x029
Bit0 - 9: The value of these bits specifies how many PCLK cycles for HSYNC during start of line.		
Note: NONE		

Register Definition 14 REG_HSYNC0 Definition

REG_HSYNC0 Definition		
Reserved		R/W
31	10 9	0
Address: 0x102434		Reset Value: 0x0
Bit0 - 9: The value of these bits specifies how many PCLK cycles of HSYNC high state during start of line.		
Note: NONE		

3.2 Touch Engine Registers (FT800 only)

Register Definition 24 REG_TOUCH_DIRECT_Z1Z2 Definition

REG_TOUCH_DIRECT_Z1Z2 Definition			
Reserved	RO	Reserved	RO
31	26 25	16 15	10 9 0
<p>Address: 0x102578 Reset Value: NA</p> <p>Bit 0 - 9 : The 10 bit ADC value for touch screen resistance Z2. Bit 16-25: The 10 bit ADC value for touch screen resistance Z1.</p> <p>Note: To know it is touched or not, please check the 31st bit of REG_TOUCH_DIRECT_XY. FT800 touch engine will do the post-processing for these Z1 and Z2 values and update the result in REG_TOUCH_RZ.</p>			

Register Definition 26 REG_TOUCH_TRANSFORM_F Definition

REG_TOUCH_TRANSFORM_F Definition			
R/W			
31	30	16	15
			0
Address: 0x102530		Reset Value: 0x0	
<p>Bit 0 - 15 : The value of these bits represents the fractional part of a fixed point number.</p> <p>Bit 16 - 30 : The value of these bits represents the integer part of a fixed point number.</p> <p>Note: This register represents fixed point number and the default value is +0.0 after reset.</p>			

Register Definition 27 REG_TOUCH_TRANSFORM_E Definition

REG_TOUCH_TRANSFORM_E Definition			
R/W			
31	30	16	15
			0
Address: 0x10252C		Reset Value: 0x10000	
<p>Bit 0 - 15 : The value of these bits represents the fractional part of the fixed point number.</p> <p>Bit 16 - 30 : The value of these bits represents the integer part of the fixed point number.</p> <p>Bit 31 : The sign bit for fixed point number</p> <p>Note: This register represents fixed point number and the default value is +1.0 after reset.</p>			

Register Definition 28 REG_TOUCH_TRANSFORM_D Definition

REG_TOUCH_TRANSFORM_D Definition	
R/W	
31	0
30	15
<p>Address: 0x102528 Reset Value: 0x0</p> <p>Bit 0 - 15 : The value of these bits represents the fractional part of the fixed point number.</p> <p>Bit 16 - 30 : The value of these bits represents the integer part of the fixed point number.</p> <p>Bit 31 : The sign bit for fixed point number</p> <p>Note: This register represents fixed point number and the default value is +0.0 after reset.</p>	

Register Definition 29 REG_TOUCH_TRANSFORM_C Definition

REG_TOUCH_TRANSFORM_C Definition			
R/W			
31	30	16	15
			0
Address: 0x102524		Reset Value: 0x0	
<p>Bit 0 - 15 : The value of these bits represents the fractional part of the fixed point number.</p> <p>Bit 16 - 30 : The value of these bits represents the integer part of the fixed point number.</p> <p>Bit 31 : The sign bit for fixed point number</p> <p>Note: This register represents fixed point number and the default value is +0.0 after reset.</p>			

Register Definition 30 REG_TOUCH_TRANSFORM_B Definition

REG_TOUCH_TRANSFORM_B Definition		
R/W		
31 30	16 15	0
<p>Address: 0x102520 Reset Value: 0x0</p> <p>Bit 0 - 15 : The value of these bits represents the fractional part of the fixed point number.</p> <p>Bit 16 - 30 : The value of these bits represents the integer part of the fixed point number.</p> <p>Bit 31 : The sign bit for fixed point number</p> <p>Note: This register represents fixed point number and the default value is +0.0 after reset.</p>		

Register Definition 31 REG_TOUCH_TRANSFORM_A Definition

REG_TOUCH_TRANSFORM_A Definition	
R/W	
31	0
30	15
<p>Address: 0x10251C Reset Value: 0x10000</p> <p>Bit 0 - 15 : The value of these bits represents the fractional part of the fixed point number.</p> <p>Bit 16 - 30 : The value of these bits represents the integer part of the fixed point number.</p> <p>Bit 31 : The sign bit for fixed point number</p> <p>Note: This register represents fixed point number and the default value is +1.0 after reset.</p>	

3.3 Audio Engine Registers

Register Definition 43 REG_PLAY Definition

31	1	0
Address: 0x102488		
Reset Value: 0x0		
<p>Bit 0 : A write to this bit triggers the play of synthesized sound effect specified in REG_SOUND.</p> <p>Reading value 1 in this bit means the sound effect is playing. To stop the sound effect, the host needs to select the silence sound effect by setting up REG_SOUND and set this register to play.</p> <p>Note: Please refer to the datasheet sector "Sound Synthesizer" for the details of this register.</p>		

Register Definition 44 REG_SOUND Definition

REG_SOUND Definition		
Reserved		R/W
31	16 15	0
Address: 0x102484		
Reset Value: 0x0000		
<p>Bit 0 - 15 : These bits are used to select the synthesized sound effect. They are split into two group Bit 0 - 7, Bit 8- 15.</p> <p>Bit 0 - 7 : These bits define the sound effect. Some of them are pitch adjustable and the pitch is defined in Bits 8 - 15. Some of them are not pitch adjustable and the Bits 8 - 15 will be ignored.</p> <p>Bit 8 - 15: The MIDI note for the sound effect defined in Bits 0 - 7.</p> <p>Note: Please refer to the datasheet sector "Sound Synthesizer" for the details of this register.</p>		

Register Definition 59 REG_PWM_HZ Definition

REG_PWM_HZ Definition			
Reserved			R/W
31	14	13	0
Address: 0x1024C0		Reset Value: 0xFA	
<p>Bit 0 - 13 : These bits define the backlight PWM output frequency in HZ. The default is 250 Hz after reset. The valid frequency is from 250Hz to 10000Hz.</p> <p>Note:</p>			

Register Definition 60 REG_INT_MASK Definition

REG_INT_MASK Definition			
Reserved			R/W
31	8	7	0
Address: 0x1024A0		Reset Value: 0xFF	
<p>Bit 0 - 7 : These bits are used to mask the corresponding interrupt. 1 means to enable the corresponding interrupt source, 0 means to disable the corresponding interrupt source. After reset , all the interrupt source are eligible to trigger interrupt by default.</p> <p>Note: Please read the datasheet section "Interrupts" for more details.</p>			

Register Definition 64 REG_GPIO_DIR Definition

REG_GPIO_DIR Definition		
Reserved		R/W
31	8 7	0
Address: 0x10248C		
Reset Value: 0x80		
<p>Bit 0 - 7 : These bits configure the direction of GPIO pins of the FT800. Bit 0 controls the direction of GPIO0 and Bit 7 controls the direction of GPIO7. The bit value 1 means the GPIO pin is set as an output, otherwise it means an input. After reset, only the GPIO7 is set to output by default.</p>		

Register Definition 65 REG_CPURESET Definition

REG_CPURESET Definition		
Reserved		RW
31		1 0
Address: 0x10241C		
Reset Value: 0x00		
<p>Bit 0: Write this bit to 1 will set the coprocessor engines of the FT800 into the reset state. Write this bit to 0 will resume from reset state to normal operational mode. If this bit is read as 1, the FT800 coprocessor engines are in reset state. Otherwise, FT800 coprocessor engines are in normal state.</p>		
<p>Bit 1 - 31: Reserved</p>		

4 Display list commands

The graphics engine of FT800 takes the instructions from display list memory RAM_DL in the form of commands. Each command is 4 bytes long and one display list can be filled up to 2048 commands since the size of RAM_DL is 8K bytes. The graphics engine of the FT800 performs respective operation according to the definition of commands.

4.1 Graphics State

The graphics state which controls drawing is stored in the graphics context. Individual pieces of state can be changed by the appropriate display list commands (e.g. COLOR_RGB) and the entire state can be saved and restored using the SAVE_CONTEXT and RESTORE_CONTEXT commands.

Note that the bitmap drawing state is special: Although the bitmap handle is part of the graphics context, the parameters for each bitmap handle are not part of the graphics context. They are neither saved nor restored by SAVE_CONTEXT and RESTORE_CONTEXT. These parameters are changed using the BITMAP_SOURCE, BITMAP_LAYOUT, and BITMAP_SIZE commands. Once these parameters are set up, they can be utilized at any display list until they were changed.

SAVE_CONTEXT and RESTORE_CONTEXT are comprised of a 4 level stack in addition to the current graphics context. The table below details the various parameters in the graphics context.

Table 3 Graphics Context

Parameters	Default values	Commands
func & ref	ALWAYS, 0	ALPHA_FUNC
func & ref	ALWAYS, 0	STENCIL_FUNC
Src & dst	SRC_ALPHA, ONE_MINUS_SRC_ALPHA	BLEND_FUNC
Cell value	0	CELL
Alpha value	0	COLOR_A
Red, Blue, Green colors	(255,255,255)	COLOR_RGB
Line width in 1/16 pixels	16	LINE_WIDTH
Point size in 1/16 pixels	16	POINT_SIZE
Width & height of scissor	512,512	SCISSOR_SIZE
Starting coordinates of scissor	(x, y) = (0,0)	SCISSOR_XY
Current bitmap handle	0	BITMAP_HANDLE

Parameters	Default values	Commands
Bitmap transform coefficients	+1.0,0,0,0,+1.0,0	BITMAP_TRANSFORM_A-F
Stencil clear value	0	CLEAR_STENCIL
Tag clear value	0	CLEAR_TAG
Mask value of stencil	255	STENCIL_MASK
spass and sfail	KEEP,KEEP	STENCIL_OP
Tag buffer value	255	TAG
Tag mask value	1	TAG_MASK
Alpha clear value	0	CLEAR_COLOR_A
RGB clear color	(0,0,0)	CLEAR_COLOR_RGB

Each display list command in this section lists any graphics context it sets.

4.2 Command encoding

Each display list command has a 32-bit encoding. The most significant bits of the code determine the command. Command parameters (if any) are present in the least significant bits. Any bits marked reserved must be zero.

The graphics primitives supported by FT800 and their respective values are mentioned below

Table 4 FT800 Graphics Primitives list

Graphics Primitive	Primitive value
BITMAPS	1
POINTS	2
LINES	3
LINE_STRIP	4
EDGE_STRIP_R	5
EDGE_STRIP_L	6
EDGE_STRIP_A	7
EDGE_STRIP_B	8
RECTS	9

Various bitmap formats supported by FT800 and their respective values are mentioned below

Table 5 Graphics Bitmap Format table

Bitmap format	Bitmap format value
ARGB1555	0
L1	1
L4	2
L8	3
RGB332	4
ARGB2	5
ARGB4	6
RGB565	7
PALETTED	8
TEXT8X8	9
TEXTVGA	10
BARGRAPH	11

4.3 Command groups

4.3.1 Setting Graphics state

ALPHA_FUNC	set the alpha test function
BITMAP_HANDLE	set the bitmap handle
BITMAP_LAYOUT	set the source bitmap memory format and layout for the current handle
BITMAP_SIZE	set the screen drawing of bitmaps for the current handle
BITMAP_SOURCE	set the source address for bitmap graphics
BITMAP_TRANSFORM_A-F	set the components of the bitmap transform matrix
BLEND_FUNC	set pixel arithmetic
CELL	set the bitmap cell number for the VERTEX2F command
CLEAR	clear buffers to preset values
CLEAR_COLOR_A	set clear value for the alpha channel
CLEAR_COLOR_RGB	set clear values for red, green and blue channels
CLEAR_STENCIL	set clear value for the stencil buffer
CLEAR_TAG	set clear value for the tag buffer

COLOR_A	set the current color alpha
COLOR_MASK	enable or disable writing of color components
COLOR_RGB	set the current color red, green and blue
LINE_WIDTH	set the line width
POINT_SIZE	set point size
RESTORE_CONTEXT	restore the current graphics context from the context stack
SAVE_CONTEXT	push the current graphics context on the context stack
SCISSOR_SIZE	set the size of the scissor clip rectangle
SCISSOR_XY	set the top left corner of the scissor clip rectangle
STENCIL_FUNC	set function and reference value for stencil testing
STENCIL_MASK	control the writing of individual bits in the stencil planes
STENCIL_OP	set stencil test actions
TAG	set the current tag value
TAG_MASK	control the writing of the tag buffer

4.3.2 Drawing actions

BEGIN	start drawing a graphics primitive
END	finish drawing a graphics primitive
VERTEX2F	supply a vertex with fractional coordinates
VERTEX2II	supply a vertex with positive integer coordinates

4.3.3 Execution control

JUMP	execute commands at another location in the display list
MACRO	execute a single command from a macro register
CALL	execute a sequence of commands at another location in the display list
RETURN	return from a previous CALL command
DISPLAY	end the display list

4.4 ALPHA_FUNC

Specify the alpha test function

Encoding

31	24	23	11	10	8	7	6	5	4	3	2	1	0
0x09		Reserved			func		ref						

Parameters

func

Specifies the test function, one of NEVER, LESS, LEQUAL, GREATER, GEQUAL, EQUAL, NOTEQUAL, or ALWAYS. The initial value is ALWAYS (7)

NAME	VALUE
NEVER	0
LESS	1
LEQUAL	2
GREATER	3
GEQUAL	4
EQUAL	5
NOTEQUAL	6
ALWAYS	7

Figure 8: The constants of ALPHA_FUNC

ref

Specifies the reference value for the alpha test. The initial value is 0

Graphics context

The values of func and ref are part of the graphics context, as described in section 4.1

See also

None

4.5 BEGIN

Begin drawing a graphics primitive

Encoding

31	24	23	4	3	2	1	0
0x1F		Reserved			prim		

Parameters

prim

Graphics primitive. The valid value is defined as below:

Table 6 FT800 graphics primitive operation definition

NAME	VALUE	Description
BITMAPS	1	Bitmap drawing primitive
POINTS	2	Point drawing primitive
LINES	3	Line drawing primitive
LINE_STRIP	4	Line strip drawing primitive
EDGE_STRIP_R	5	Edge strip right side drawing primitive
EDGE_STRIP_L	6	Edge strip left side drawing primitive
EDGE_STRIP_A	7	Edge strip above drawing primitive
EDGE_STRIP_B	8	Edge strip below side drawing primitive
RECTS	9	Rectangle drawing primitive

Description

All primitives supported by the FT800 are defined in the table above. The primitive to be drawn is selected by the BEGIN command. Once the primitive is selected, it will be valid till the new primitive is selected by the BEGIN command.

Please note that the primitive drawing operation will not be performed until VERTEX2II or VERTEX2F is executed.

Examples

Drawing points, lines and bitmaps:



```
dl( BEGIN(POINTS) );  
dl( VERTEX2II(50, 5, 0, 0) );  
dl( VERTEX2II(110, 15, 0, 0) );  
dl( BEGIN(LINES) );  
dl( VERTEX2II(50, 45, 0, 0) );  
dl( VERTEX2II(110, 55, 0, 0) );  
dl( BEGIN(BITMAPS) );  
dl( VERTEX2II(50, 65, 31, 0x45) );  
dl( VERTEX2II(110, 75, 31, 0x46) );
```

Graphics context

None

See also

END

4.6 BITMAP_HANDLE

Specify the bitmap handle

Encoding

31	24	23	5	4	3	2	1	0
0x05		reserved			handle			

Parameters

handle

Bitmap handle. The initial value is 0. The valid value range is from 0 to 31.

Description

Handles 16 to 31 are defined by the FT800 for built-in font and handle 15 is defined in the co-processor engine commands CMD_GRADIENT, CMD_BUTTON and CMD_KEYS. Users can define new bitmaps using handles from 0 to 14. If there is no co-processor engine command CMD_GRADIENT, CMD_BUTTON and CMD_KEYS in the current display list, users can even define a bitmap using handle 15.

Graphics context

The value of handle is part of the graphics context, as described in section 4.1

See also

BITMAP_LAYOUT, BITMAP_SIZE

4.7 BITMAP_LAYOUT

Specify the source bitmap memory format and layout for the current handle.

Encoding

31	24	23	22	21	20	19	18	9	8	0
0x07		format				linestride			Height	

Parameters

format

Bitmap pixel format. The valid range is from 0 to 11 and defined as per the table below.

Table 7 BITMAP_LAYOUT format list

NAME	VALUE
ARGB1555	0
L1	1
L4	2
L8	3
RGB332	4
ARGB2	5
ARGB4	6
RGB565	7
PALETTE	8
TEXT8X8	9
TEXTVGA	10
BARGRAPH	11

Various bitmap formats supported are:



BARGRAPH - render data as a bar graph. Looks up the x coordinate in a byte array, then gives an opaque pixel if the byte value is less than y, otherwise a transparent pixel. The result is a bar graph of the bitmap data. A maximum of 256x256 size bitmap can be drawn using the BARGRAPH format. Orientation, width and height of the graph can be altered using the bitmap transform matrix.

TEXT8X8 - lookup in a fixed 8x8 font. The bitmap is a byte array present in the graphics ram and each byte indexes into an internal 8x8 CP437 [2] font (inbuilt font bitmap handles 16 & 17 are used for drawing TEXT8X8 format). The result is that the bitmap

acts like a character grid. A single bitmap can be drawn which covers all or part of the display; each byte in the bitmap data corresponds to one 8x8 pixel character cell.

TEXTVGA – lookup in a fixed 8x16 font with TEXTVGA syntax. The bitmap is a TEXTVGA array present in the graphics ram, each element indexes into an internal 8x16 CP437 [2] font (inbuilt font bitmap handles 18 & 19 are used for drawing TEXTVGA format with control information such as background color, foreground color and cursor etc). The result is that the bitmap acts like a TEXTVGA grid. A single bitmap can be drawn which covers all or part of the display; each TEXTVGA data type in the bitmap corresponds to one 8x16 pixel character cell.

PALETTED - bitmap bytes are indices into a palette table. By using a palette table - which contains 32-bit RGBA colors - a significant amount of memory can be saved. The 256 color palette is stored in a dedicated 1K (256x4) byte RAM_PAL.

linestride

Bitmap linestride, in bytes. Please note the alignment requirement which is described below.

height

Bitmap height, in lines

Description

The bitmap formats supported are L1, L4, L8, RGB332, ARGB2, ARGB4, ARGB1555, RGB565 and Palette.

For L1 format, the line stride must be a multiple of 8 bits; For L4 format the line stride must be multiple of 2 nibbles. (Aligned to byte)

For more details about alignment, please refer to the figures below:

L1 format layout		Byte Order
Pixel 0	Bit 7	Byte 0
Pixel 1	Bit 6	
.....		
Pixel 7	Bit 0	

L4 format layout		Byte Order
Pixel 0	Bit 7-4	Byte 0
Pixel 1	Bit 3-0	

L8 format layout		Byte Order
Pixel 0	Bit 7-0	Byte 0
pixel 1	Bit 15-8	Byte 1
pixel 2	Bit 23-16	Byte 2

Figure 9: Pixel format for L1/L4/L8

ARGB2 format layout		Byte Order
A	Bit 7-6	Byte 0
R	Bit 5-4	
G	Bit 3-2	
B	Bit 1-0	

ARGB1555 format layout		Byte Order
A	Bit 15	Byte 1
R	Bit 14-10	Byte 0
G	Bit 9- 5	
B	Bit 4-0	

Figure 10: Pixel format for ARGB2/1555

ARGB4 format layout		Byte Order
A	Bit 15-12	Byte 1
R	Bit 11-8	
G	Bit 7-4	Byte 0
B	Bit 3-0	

RGB332 pixel layout		Byte Order
R	Bit 7-5	Byte 0
G	Bit 4-2	
B	Bit 1-0	

RGB565 format layout		Byte Order
R	Bit 15-11	Byte 1 Byte 0
G	Bit 10-5	
B	Bit 4-0	

Palette format layout		Byte Order
A	Bit 31-24	Byte 3
R	Bit 23-16	Byte 2
G	Bit 15-8	Byte 1
B	Bit 7-0	Byte 0

Figure 11: Pixel format for ARGB4, RGB332, RGB565 and Palette

Graphics context

None

See also

BITMAP_HANDLE, BITMAP_SIZE, BITMAP_SOURCE

4.8 BITMAP_SIZE

Specify the screen drawing of bitmaps for the current handle

Encoding

31	24	23	21	20	19	18	17	9	8	0
0x08		reserved	filter	wrapx	wrapy	width			height	

Parameters

filter

Bitmap filtering mode, one of NEAREST or BILINEAR

The value of NEAREST is 0 and the value of BILINEAR is 1.

wrapx

Bitmap x wrap mode, one of REPEAT or BORDER

The value of BORDER is 0 and the value of REPEAT is 1.

wrapy

Bitmap y wrap mode, one of REPEAT or BORDER

width

Drawn bitmap width, in pixels

height

Drawn bitmap height, in pixels


Description

This command controls the drawing of bitmaps: the on-screen size of the bitmap, the behavior for wrapping, and the filtering function. Please note that if wrapx or wrapy is REPEAT then the corresponding memory layout dimension (BITMAP_LAYOUT line stride or height) must be power of two, otherwise the result is undefined.

For parameter width and height, the value from 1 to 511 means the bitmap width and height in pixel. The value of zero means the 512 pixels in width or height.


Examples

Drawing a 64 x 64 bitmap:

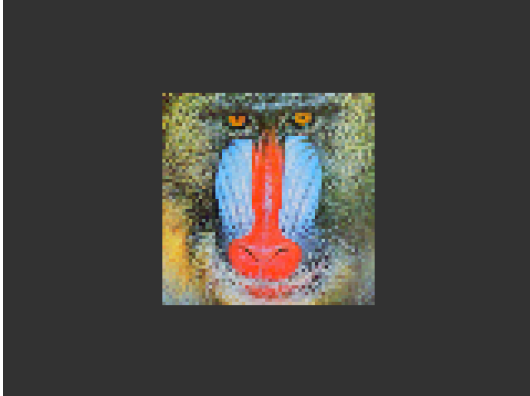

```
dl( BITMAP_SOURCE(0) );
dl( BITMAP_LAYOUT( RGB565, 128, 64 ) );
dl( BITMAP_SIZE( NEAREST, BORDER, BORDER, 64, 64 ) );
dl( BEGIN( BITMAPS ) );
dl( VERTEX2II( 48, 28, 0, 0 ) );
```

Reducing the size to 32 x 50:

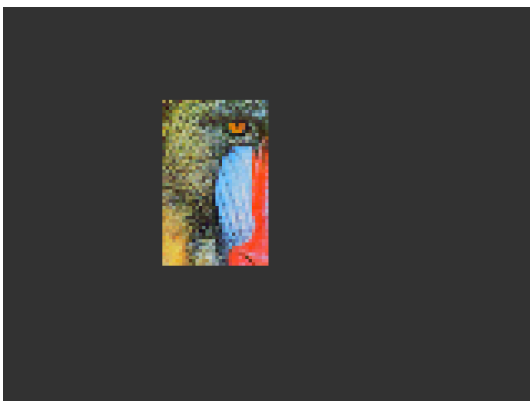


```
dl( BITMAP_SOURCE(0) );
dl( BITMAP_LAYOUT( RGB565, 128, 64 ) );
dl( BITMAP_SIZE( NEAREST, BORDER, BORDER, 32, 50 ) );
dl( BEGIN( BITMAPS ) );
dl( VERTEX2II( 48, 28, 0, 0 ) );
```

Using the REPEAT wrap mode to tile the bitmap:



```
dl( BITMAP_SOURCE(0) );
dl( BITMAP_LAYOUT( RGB565, 128, 64 ) );
dl( BITMAP_SIZE( NEAREST, REPEAT, REPEAT, 160, 120 ) );
dl( BEGIN( BITMAPS ) );
dl( VERTEX2II( 0, 0, 0, 0 ) );
```

4X zoom - 128 X 128 - using a bitmap transform:

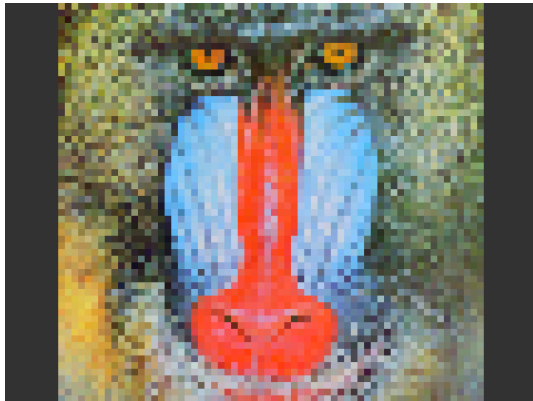

```
dl( BITMAP_SOURCE(0) );
dl( BITMAP_LAYOUT(RGB565, 128, 64) );
dl( BITMAP_TRANSFORM_A(128) );
dl( BITMAP_TRANSFORM_E(128) );
dl( BITMAP_SIZE(NEAREST, BORDER,
BORDER, 128, 128) );
dl( BEGIN(BITMAPS) );
dl( VERTEX2II(16, 0, 0, 0) );
```

Using a bilinear filter makes the zoomed image a little smoother:



```
dl( BITMAP_SOURCE(0) );
dl( BITMAP_LAYOUT(RGB565, 128, 64) );
dl( BITMAP_TRANSFORM_A(128) );
dl( BITMAP_TRANSFORM_E(128) );
dl( BITMAP_SIZE(BILINEAR, BORDER,
BORDER, 128, 128) );
dl( BEGIN(BITMAPS) );
dl( VERTEX2II(16, 0, 0, 0) );
```

Graphics context

None

See also

BITMAP_HANDLE, BITMAP_LAYOUT, BITMAP_SOURCE

4.9 BITMAP_SOURCE

Specify the source address of bitmap data in FT800 graphics memory RAM_G.

Encoding

31	24	23	20	19	0
0x01		Reserved		addr	

Parameters

addr

Bitmap address in graphics SRAM FT800, aligned with respect to the bitmap format.


For example, if the bitmap format is RGB565/ARGB4/ARGB1555, the bitmap source shall be aligned to 2 bytes.

Description

The bitmap source address is normally the address in main memory where the bitmap graphic data is loaded.


Examples

Drawing a 64 x 64 bitmap, loaded at address 0:

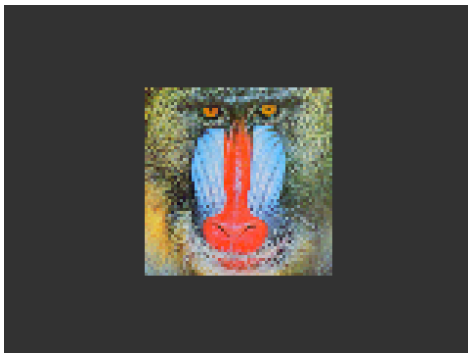

```
dl( BITMAP_SOURCE(0) );
dl( BITMAP_LAYOUT(RGB565, 128, 64) );
dl( BITMAP_SIZE(NEAREST, BORDER, BORDER, 64, 64) );
dl( BEGIN(BITMAPS) );
dl( VERTEX2II(48, 28, 0, 0) );
```

Using the same graphics data, but with source and size changed to show only a 32 x 32 detail:

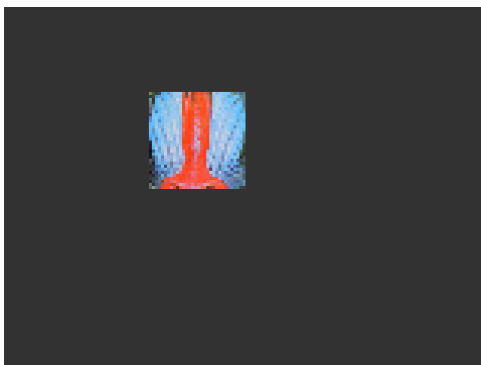

```
dl( BITMAP_SOURCE(128 * 16 + 32) );
dl( BITMAP_LAYOUT(RGB565, 128, 64) );
dl( BITMAP_SIZE(NEAREST, BORDER, BORDER, 32, 32) );
dl( BEGIN(BITMAPS) );
dl( VERTEX2II(48, 28, 0, 0) );
```

Graphics context

None

See also

BITMAP_LAYOUT, BITMAP_SIZE

4.10 BITMAP_TRANSFORM_A

Specify the A coefficient of the bitmap transform matrix.

Encoding

31	24	23	17	16	0
0x15		Reserved		a	

Parameters

a


Coefficient A of the bitmap transform matrix, in signed 8.8 bit fixed-point form. The initial value is 256.

Description

BITMAP_TRANSFORM_A-F coefficients are used to perform bitmap transform functionalities such as scaling, rotation and translation. These are similar to OpenGL transform functionality.


Examples

A value of 0.5 (128) causes the bitmap appear double width:

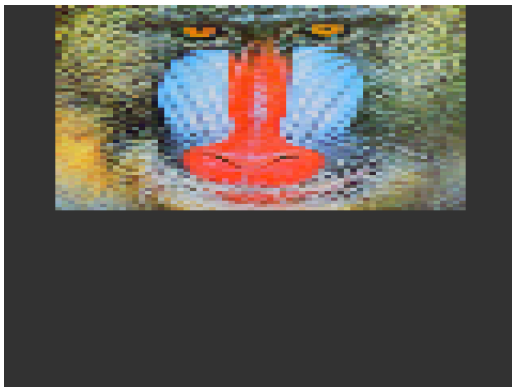

```
dl( BITMAP_SOURCE(0) );
dl( BITMAP_LAYOUT(RGB565, 128, 64) );
dl( BITMAP_TRANSFORM_A(128) );
dl( BITMAP_SIZE(NEAREST, BORDER,
BORDER, 128, 128) );
dl( BEGIN(BITMAPS) );
dl( VERTEX2II(16, 0, 0, 0) );
```

A value of 2.0 (512) gives a half-width bitmap:

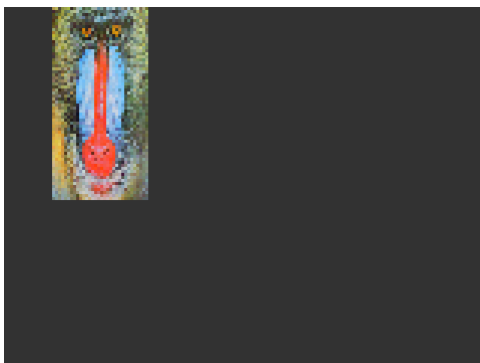

```
dl( BITMAP_SOURCE(0) );
dl( BITMAP_LAYOUT(RGB565, 128, 64) );
dl( BITMAP_TRANSFORM_A(512) );
dl( BITMAP_SIZE(NEAREST, BORDER,
BORDER, 128, 128) );
dl( BEGIN(BITMAPS) );
dl( VERTEX2II(16, 0, 0, 0) );
```

Graphics context

The value of a is part of the graphics context, as described in section 4.1

See also

None

4.11 BITMAP_TRANSFORM_B

Specify the B coefficient of the bitmap transform matrix

Encoding

31	24	23	17	16	0
0x16		Reserved		b	

Parameters

b

Coefficient B of the bitmap transform matrix, in signed 8.8 bit fixed-point form. The initial value is 0

Description

BITMAP_TRANSFORM_A-F coefficients are used to perform bitmap transform functionalities such as scaling, rotation and translation. These are similar to OpenGL transform functionality.

Graphics context

The value of B is part of the graphics context, as described in section 4.1

See also

None

4.12 BITMAP_TRANSFORM_C

Specify the C coefficient of the bitmap transform matrix

Encoding

31	24	23	0
0x17		c	

Parameters

c

Coefficient C of the bitmap transform matrix, in signed 15.8 bit fixed-point form. The initial value is 0

Description

BITMAP_TRANSFORM_A-F coefficients are used to perform bitmap transform functionalities such as scaling, rotation and translation. These are similar to OpenGL transform functionality.

Graphics context

The value of c is part of the graphics context, as described in section 4.1

See also

None

4.13 BITMAP_TRANSFORM_D

Specify the D coefficient of the bitmap transform matrix

Encoding

31	24	23	17	16	0
0x18		Reserved		d	

Parameters

d

Coefficient D of the bitmap transform matrix, in signed 8.8 bit fixed-point form. The initial value is 0

Description

BITMAP_TRANSFORM_A-F coefficients are used to perform bitmap transform functionalities such as scaling, rotation and translation. These are similar to OpenGL transform functionality.

Graphics context

The value of d is part of the graphics context, as described in section 4.1

See also

None

4.14 BITMAP_TRANSFORM_E

Specify the E coefficient of the bitmap transform matrix

Encoding

31	24	23	17	16	0
0x19		Reserved		e	

Parameters

e


Coefficient E of the bitmap transform matrix, in signed 8.8 bit fixed-point form. The initial value is 256

Description

BITMAP_TRANSFORM_A-F coefficients are used to perform bitmap transform functionalities such as scaling, rotation and translation. These are similar to OpenGL transform functionality.


Examples

A value of 0.5 (128) causes the bitmap appear double height:

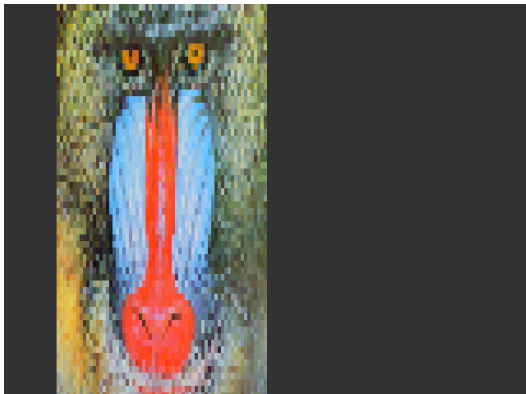

```
dl( BITMAP_SOURCE(0) );
dl( BITMAP_LAYOUT(RGB565, 128, 64) );
dl( BITMAP_TRANSFORM_E(128) );
dl( BITMAP_SIZE(NEAREST, BORDER, BORDER, 128, 128) );
dl( BEGIN(BITMAPS) );
dl( VERTEX2II(16, 0, 0, 0) );
```

A value of 2.0 (512) gives a half-height bitmap:

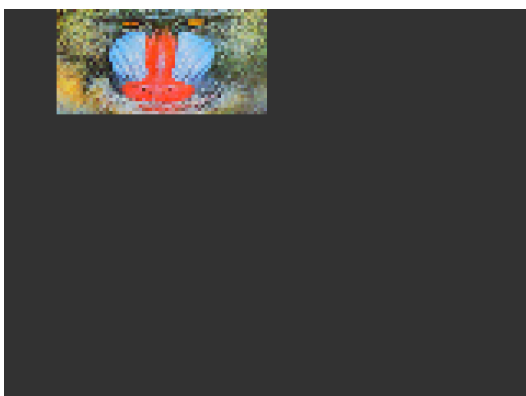

```
dl( BITMAP_SOURCE(0) );
dl( BITMAP_LAYOUT(RGB565, 128, 64) );
dl( BITMAP_TRANSFORM_E(512) );
dl( BITMAP_SIZE(NEAREST, BORDER, BORDER, 128, 128) );
dl( BEGIN(BITMAPS) );
dl( VERTEX2II(16, 0, 0, 0) );
```


Graphics context

The value of e is part of the graphics context, as described in section 4.1

See also

None

4.15 BITMAP_TRANSFORM_F

Specify the F coefficient of the bitmap transform matrix

Encoding

31	24	23	0
0x1A		f	

Parameters

f

Coefficient F of the bitmap transform matrix, in signed 15.8 bit fixed-point form. The initial value is 0

Description

BITMAP_TRANSFORM_A-F coefficients are used to perform bitmap transform functionalities such as scaling, rotation and translation. These are similar to OpenGL transform functionality.

Graphics context

The value of f is part of the graphics context, as described in section 4.1

See also

None

4.16 BLEND_FUNC

Specify pixel arithmetic

Encoding

31	24	23	6	5	3	2	0
0x0B		reserved			src		dst

Parameters

src

Specifies how the source blending factor is computed. One of ZERO, ONE, SRC_ALPHA, DST_ALPHA, ONE_MINUS_SRC_ALPHA or ONE_MINUS_DST_ALPHA. The initial value is SRC_ALPHA (2).

dst

Specifies how the destination blending factor is computed, one of the same constants as src. The initial value is ONE_MINUS_SRC_ALPHA(4)

Table 8 BLEND_FUNC constant value definition

NAME	VALUE	Description
ZERO	0	Check OpenGL definition
ONE	1	Check OpenGL definition
SRC_ALPHA	2	Check OpenGL definition
DST_ALPHA	3	Check OpenGL definition
ONE_MINUS_SRC_ALPHA	4	Check OpenGL definition
ONE_MINUS_DST_ALPHA	5	Check OpenGL definition

Description


The blend function controls how new color values are combined with the values already in the color buffer. Given a pixel value source and a previous value in the color buffer destination, the computed color is:

$$source \times src + destination \times dst$$

for each color channel: red, green, blue and alpha.

Examples

The default blend function of (SRC_ALPHA, ONE_MINUS_SRC_ALPHA) causes drawing to overlay the destination using the alpha value:

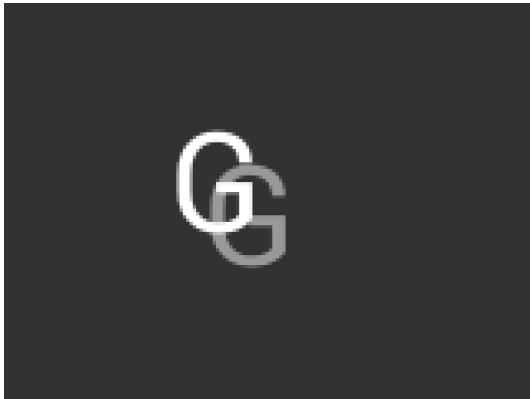

```
dl( BEGIN(BITMAPS) );
dl( VERTEX2II(50, 30, 31, 0x47) );
dl( COLOR_A( 128 ) );
dl( VERTEX2II(60, 40, 31, 0x47) );
```

A destination factor of zero means that destination pixels are not used:



```
dl( BEGIN(BITMAPS) );
dl( BLEND_FUNC(SRC_ALPHA, ZERO) );
dl( VERTEX2II(50, 30, 31, 0x47) );
dl( COLOR_A( 128 ) );
dl( VERTEX2II(60, 40, 31, 0x47) );
```

Using the source alpha to control how much of the destination to keep:



```
dl( BEGIN(BITMAPS) );
dl( BLEND_FUNC(ZERO, SRC_ALPHA) );
dl( VERTEX2II(50, 30, 31, 0x47) );
```

Graphics context

The values of src and dst are part of the graphics context, as described in section 4.1

See also

COLOR_A

4.17 CALL

Execute a sequence of commands at another location in the display list

Encoding

31	24	23	16	15	0
0x1D		Reserved		dest	

Parameters

dest

The destination address in RAM_DL which the display command is to be switched. FT800 has the stack to store the return address. To come back to the next command of source address, the RETURN command can help.

Description

CALL and RETURN have a 4 level stack in addition to the current pointer. Any additional CALL/RETURN done will lead to unexpected behavior.

Graphics context

None

See also

JUMP, RETURN

4.18 CELL

Specify the bitmap cell number for the VERTEX2F command.

Encoding

31	24	23	7	6	0
0x06		Reserved			Cell

Parameters

cell

bitmap cell number. The initial value is 0

Graphics context

The value of cell is part of the graphics context, as described in section 4.1

See also

None

4.19 CLEAR

Clear buffers to preset values

Encoding

31	24	23	3	2	1	0	
0x26		Reserved			C	S	T

Parameters

c

Clear color buffer. Setting this bit to 1 will clear the color buffer of the FT800 to the preset value. Setting this bit to 0 will maintain the color buffer of the FT800 with an unchanged value. The preset value is defined in command CLEAR_COLOR_RGB for RGB channel and CLEAR_COLOR_A for alpha channel.

s

Clear stencil buffer. Setting this bit to 1 will clear the stencil buffer of the FT800 to the preset value. Setting this bit to 0 will maintain the stencil buffer of the FT800 with an unchanged value. The preset value is defined in command CLEAR_STENCIL.

t

Clear tag buffer. Setting this bit to 1 will clear the tag buffer of the FT800 to the preset value. Setting this bit to 0 will maintain the tag buffer of the FT800 with an unchanged value. The preset value is defined in command CLEAR_TAG.

Description

The scissor test and the buffer write masks affect the operation of the clear. Scissor limits the cleared rectangle, and the buffer write masks limit the affected buffers. The state of the alpha function, blend function, and stenciling do not affect the clear.

Examples

To clear the screen to bright blue:



```
dl( CLEAR_COLOR_RGB(0, 0, 255) );
dl( CLEAR(1, 0, 0) );
```


To clear part of the screen to gray, part to blue using scissor rectangles:



```
dl( CLEAR_COLOR_RGB(100, 100, 100) );  
dl( CLEAR(1, 1, 1) );  
dl( CLEAR_COLOR_RGB(0, 0, 255) );  
dl( SCISSOR_SIZE(30, 120) );  
dl( CLEAR(1, 1, 1) );
```

Graphics context

None

See also

CLEAR_COLOR_A, CLEAR_STENCIL, CLEAR_TAG, CLEAR_COLOR_RGB

4.20 CLEAR_COLOR_A

Specify clear value for the alpha channel

Encoding

32	24	23	8	7	0
0x0F		Reserved			Alpha

Parameters

alpha

Alpha value used when the color buffer is cleared. The initial value is 0

Graphics context

The value of alpha is part of the graphics context, as described in section 4.1

See also

CLEAR_COLOR_RGB, CLEAR

4.21 CLEAR_COLOR_RGB

Specify clear values for red, green and blue channels

Encoding

31	24	23	16	15	8	7	0
0x02		Red		Blue		Green	

Parameters

red

Red value used when the color buffer is cleared. The initial value is 0

green

Green value used when the color buffer is cleared. The initial value is 0

blue

Blue value used when the color buffer is cleared. The initial value is 0

Description

Sets the color values used by a following CLEAR.

Examples

To clear the screen to bright blue:



```
dl( CLEAR_COLOR_RGB(0, 0, 255) );
dl( CLEAR(1, 1, 1) );
```

To clear part of the screen to gray, part to blue using scissor rectangles:



```
dl( CLEAR_COLOR_RGB(100, 100, 100) );
dl( CLEAR(1, 1, 1) );
dl( CLEAR_COLOR_RGB(0, 0, 255) );
dl( SCISSOR_SIZE(30, 120) );
dl( CLEAR(1, 1, 1) );
```

Graphics context

The values of red, green and blue are part of the graphics context, as described in section 4.1

See also

CLEAR_COLOR_A, CLEAR

4.22 CLEAR_STENCIL

Specify clear value for the stencil buffer

Encoding

31	24	23	8	7	0
0x11		Reserved		s	

Parameters

s

Value used when the stencil buffer is cleared. The initial value is 0

Graphics context

The value of s is part of the graphics context, as described in section 4.1

See also

CLEAR

4.23 CLEAR_TAG

Specify clear value for the tag buffer

Encoding

31	24	23	8	7	0
0x12		Reserved			t

Parameters

t

Value used when the tag buffer is cleared. The initial value is 0.

Graphics context

The value of s is part of the graphics context, as described in section 4.1

See also

TAG, TAG_MASK, CLEAR

4.24 COLOR_A

Set the current color alpha

Encoding

31	24	23	8	7	0
0x10		Reserved		alpha	

Parameters

alpha


Alpha for the current color. The initial value is 255

Description

Sets the alpha value applied to drawn elements - points, lines, and bitmaps. How the alpha value affects image pixels depends on BLEND_FUNC; the default behavior is a transparent blend.

Examples

Drawing three characters with transparency 255, 128, and 64:

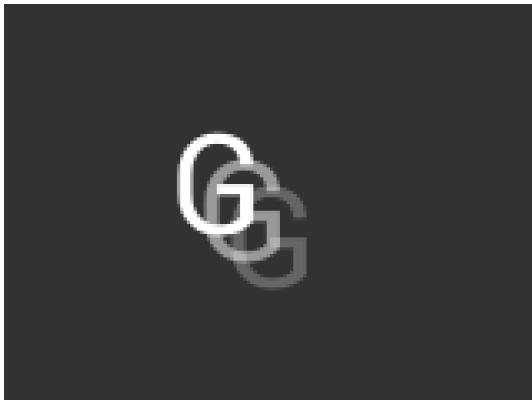

```
dl( BEGIN(BITMAPS) );
dl( VERTEX2II(50, 30, 31, 0x47) );
dl( COLOR_A( 128 ) );
dl( VERTEX2II(58, 38, 31, 0x47) );
dl( COLOR_A( 64 ) );
dl( VERTEX2II(66, 46, 31, 0x47) );
```

Graphics context

The value of alpha is part of the graphics context, as described in section 4.1

See also

COLOR_RGB, BLEND_FUNC

4.25 COLOR_MASK

Enable or disable writing of color components

Encoding

31	24	23	4	3	2	1	0	
0x20		reserved			r	g	b	a

Parameters

r

Enable or disable the red channel update of the FT800 color buffer. The initial value is 1 and means enable.

g

Enable or disable the green channel update of the FT800 color buffer. The initial value is 1 and means enable.

b

Enable or disable the blue channel update of the FT800 color buffer. The initial value is 1 and means enable.

a


Enable or disable the alpha channel update of the FT800 color buffer. The initial value is 1 and means enable.

Description

The color mask controls whether the color values of a pixel are updated. Sometimes it is used to selectively update only the red, green, blue or alpha channels of the image. More often, it is used to completely disable color updates while updating the tag and stencil buffers.

Examples

Draw a '8' digit in the middle of the screen. Then paint an invisible 40-pixel circular touch area into the tag buffer:

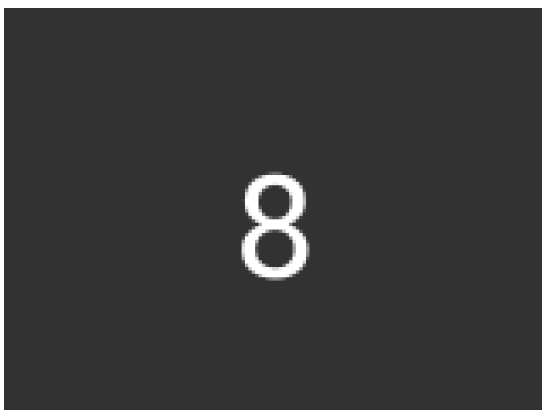

```

dl( BEGIN(BITMAPS) );
dl( VERTEX2II(68, 40, 31, 0x38) );
dl( POINT_SIZE(40 * 16) );
dl( COLOR_MASK(0, 0, 0, 0) );
dl( BEGIN(POINTS) );
dl( TAG( 0x38 ) );
dl( VERTEX2II(80, 60, 0, 0) );

```


Graphics context

The values of r, g, b and a are part of the graphics context, as described in section 4.1

See also

TAG_MASK

4.26 COLOR_RGB

Set the current color red, green and blue

Encoding

31	24	23	16	15	8	7	0
0x04		Red		Blue		Green	

Parameters

red

Red value for the current color. The initial value is 255

green

Green value for the current color. The initial value is 255

blue

Blue value for the current color. The initial value is 255

Description

Sets red, green and blue values of the FT800 color buffer which will be applied to the following draw operation.

Examples

Drawing three characters with different colors:



```
dl( BEGIN(BITMAPS) );
dl( VERTEX2II(50, 38, 31, 0x47) );
dl( COLOR_RGB( 255, 100, 50 ) );
dl( VERTEX2II(80, 38, 31, 0x47) );
dl( COLOR_RGB( 50, 100, 255 ) );
dl( VERTEX2II(110, 38, 31, 0x47) );
```

Graphics context

The values of red, green and blue are part of the graphics context, as described in section 4.1

See also

COLOR_A

4.27 DISPLAY

End the display list. FT800 will ignore all the commands following this command.

Encoding

31	24	23	0
0x0		Reserved	

Parameters

None

Graphics context

None

See also

None

4.28 END

End drawing a graphics primitive.

Encoding

31	24	23	0
0x21		Reserved	

Parameters

None

Description

It is recommended to have an END for each BEGIN. Whereas advanced users can avoid the usage of END in order to save extra graphics instructions in the display list RAM.

Graphics context

None

See also

BEGIN

4.29 JUMP

Execute commands at another location in the display list

Encoding

31	24	23	16	15	0
0x1E		Reserved		dest	

Parameters

dest

Display list address to be jumped.

Graphics context

None

See also

CALL

4.30 LINE_WIDTH

Specify the width of lines to be drawn with primitive LINES in 1/16th pixel precision.

Encoding

31	24	23	12	11	0
0x0E		Reserved			width

Parameters

width

Line width in 1/16 pixel. The initial value is 16.

Description

Sets the width of drawn lines. The width is the distance from the center of the line to the outermost drawn pixel, in units of 1/16 pixel. The valid range is from 16 to 4095 in terms of 1/16th pixel units.

Please note the LINE_WIDTH command will affect the LINES, LINE_STRIP, RECTS, EDGE_STRIP_A/B/R/L primitives.

Examples

The second line is drawn with a width of 80, for a 5 pixel radius:



```
dl( BEGIN(LINES) );
dl( VERTEX2F(16 * 10, 16 * 30) );
dl( VERTEX2F(16 * 150, 16 * 40) );
dl( LINE_WIDTH(80) );
dl( VERTEX2F(16 * 10, 16 * 80) );
dl( VERTEX2F(16 * 150, 16 * 90) );
```

Graphics context

The value of width is part of the graphics context, as described in section 4.1

See also

None

4.31 MACRO

Execute a single command from a macro register.

Encoding

31	24	23	1	0
0x25		Reserved		
				m

Parameters

m

Macro register to read. Value 0 means the FT800 will fetch the command from REG_MACRO_0 to execute. Value 1 means the FT800 will fetch the command from REG_MACRO_1 to execute. The content of REG_MACRO_0 or REG_MACRO_1 shall be a valid display list command, otherwise the behavior is undefined.

Graphics context

None

See also

None

4.32 POINT_SIZE

Specify the radius of points

Encoding

31	24	23	17	16	0
0x0D		Reserved		Size	

Parameters

size


Point radius in 1/16 pixel. The initial value is 16.

Description

Sets the size of drawn points. The width is the distance from the center of the point to the outermost drawn pixel, in units of 1/16 pixels. The valid range is from 16 to 8191 with respect to 1/16th pixel unit.

Examples

The second point is drawn with a width of 160, for a 10 pixel radius:

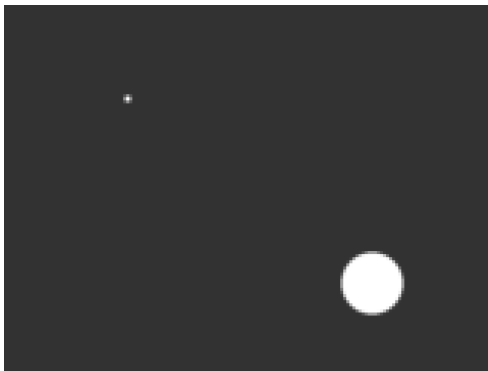

```
dl( BEGIN(POINTS) );
dl( VERTEX2II(40, 30, 0, 0) );
dl( POINT_SIZE(160) );
dl( VERTEX2II(120, 90, 0, 0) );
```

Graphics context

The value of size is part of the graphics context, as described in section 4.1

See also

None

4.33 RESTORE_CONTEXT

Restore the current graphics context from the context stack

Encoding

31	24	23	0
0x23		Reserved	

Parameters


None

Description

Restores the current graphics context, as described in section 4.1. Four (4) levels of SAVE and RESTORE are available in the FT800. Any extra RESTORE_CONTEXT will load the default values into the present context.

Examples

Saving and restoring context means that the second 'G' is drawn in red, instead of blue:

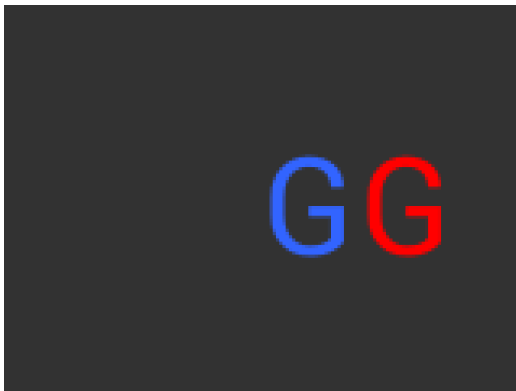

```
dl( BEGIN(BITMAPS) );
dl( COLOR_RGB( 255, 0, 0 ) );
dl( SAVE_CONTEXT() );
dl( COLOR_RGB( 50, 100, 255 ) );
dl( VERTEX2II(80, 38, 31, 0x47) );
dl( RESTORE_CONTEXT() );
dl( VERTEX2II(110, 38, 31, 0x47) );
```

Graphics context

None

See also

SAVE_CONTEXT

4.34 RETURN

Return from a previous CALL command.

Encoding

31	24	23	0
0x24		Reserved	

Parameters

None

Description

CALL and RETURN have 4 levels of stack in addition to the current pointer. Any additional CALL/RETURN done will lead to unexpected behavior.

Graphics context

None

See also

CALL

4.35 SAVE_CONTEXT

Push the current graphics context on the context stack

Encoding

31	24	23	0
0x22		Reserved	

Parameters

None

Description

Saves the current graphics context, as described in section 4.1. Any extra SAVE_CONTEXT will throw away the earliest saved context.

Examples

Saving and restoring context means that the second 'G' is drawn in red, instead of blue:



```
dl( BEGIN(BITMAPS) );
dl( COLOR_RGB( 255, 0, 0 ) );
dl( SAVE_CONTEXT() );
dl( COLOR_RGB( 50, 100, 255 ) );
dl( VERTEX2II(80, 38, 31, 0x47) );
dl( RESTORE_CONTEXT() );
dl( VERTEX2II(110, 38, 31, 0x47) );
```

Graphics context

None

See also

RESTORE_CONTEXT

4.36 SCISSOR_SIZE

Specify the size of the scissor clip rectangle

Encoding

31	24	23	20	19	10	9	0
0x1C		Reserved		Width		Height	

Parameters

width

The width of the scissor clip rectangle, in pixels. The initial value is 512.
 The valid value range is from 0 to 512.

height

The height of the scissor clip rectangle, in pixels. The initial value is 512.
 The valid value range is from 0 to 512.

Description

Sets the width and height of the scissor clip rectangle, which limits the drawing area.

Examples

Setting a 40 x 30 scissor rectangle clips the clear and bitmap drawing:



```
dl( SCISSOR_XY(40, 30) );
dl( SCISSOR_SIZE(80, 60) );
dl( CLEAR_COLOR_RGB(0, 0, 255) );
dl( CLEAR(1, 1, 1) );
dl( BEGIN(BITMAPS) );
dl( VERTEX2II(35, 20, 31, 0x47) );
```

Graphics context

The values of width and height are part of the graphics context 4.1

See also

None

4.37 SCISSOR_XY

Specify the top left corner of the scissor clip rectangle

Encoding

31	24	23	19	17	9	8	0
0x1B		Reserved		x		y	

Parameters

x

The x coordinate of the scissor clip rectangle, in pixels. The initial value is 0

y


The y coordinate of the scissor clip rectangle, in pixels. The initial value is 0

Description

Sets the top-left position of the scissor clip rectangle, which limits the drawing area.

Examples

Setting a 40 x 30 scissor rectangle clips the clear and bitmap drawing:

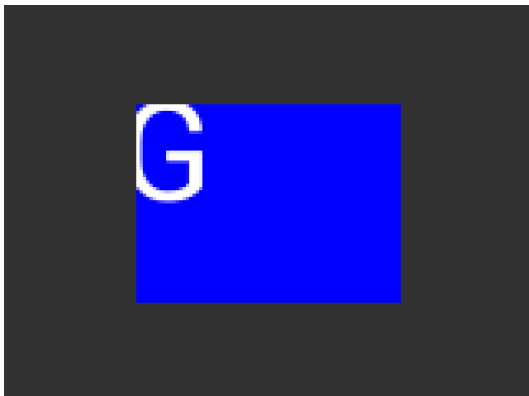

```
dl( SCISSOR_XY(40, 30) );
dl( SCISSOR_SIZE(80, 60) );
dl( CLEAR_COLOR_RGB(0, 0, 255) );
dl( CLEAR(1, 1, 1) );
dl( BEGIN(BITMAPS) );
dl( VERTEX2II(35, 20, 31, 0x47) );
```

Graphics context

The values of x and y are part of the graphics context 4.1

See also

None

4.38 STENCIL_FUNC

Set function and reference value for stencil testing

Encoding

31	24	23	20	19	16	15	8	7	0
0x0A		Reserved		func		ref		mask	

Parameters

func

Specifies the test function, one of NEVER, LESS, LEQUAL, GREATER, GEQUAL, EQUAL, NOTEQUAL, or ALWAYS. The initial value is ALWAYS. About the value of these constants, please check Figure 8: The constants of ALPHA_FUNC

ref

Specifies the reference value for the stencil test. The initial value is 0

mask


Specifies a mask that is ANDed with the reference value and the stored stencil value. The initial value is 255

Description

Stencil test rejects or accepts pixels depending on the result of the test function defined in func parameter, which operates on the current value in the stencil buffer against the reference value.

Examples

Draw two points, incrementing stencil at each pixel, then draw the pixels with value 2 in red:

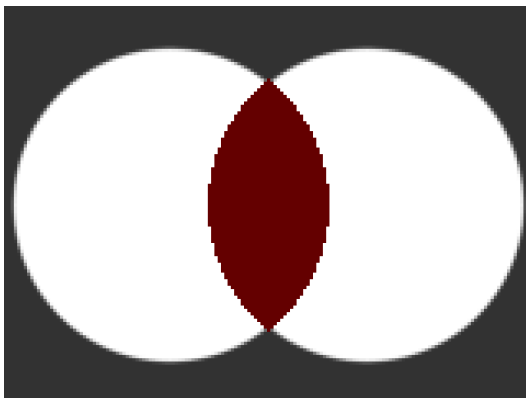

```

dl( STENCIL_OP(INCR, INCR) );
dl( POINT_SIZE(760) );
dl( BEGIN(POINTS) );
dl( VERTEX2II(50, 60, 0, 0) );
dl( VERTEX2II(110, 60, 0, 0) );
dl( STENCIL_FUNC(EQUAL, 2, 255) );
dl( COLOR_RGB(100, 0, 0) );
dl( VERTEX2II(80, 60, 0, 0) );

```

Graphics context

The values of func, ref and mask are part of the graphics context, as described in section 4.1

See also

STENCIL_OP, STENCIL_MASK

4.39 STENCIL_MASK

Control the writing of individual bits in the stencil planes

Encoding

31	24	23	8	7	0
0x13		reserved		mask	

Parameters

mask

The mask used to enable writing stencil bits. The initial value is 255

Graphics context

The value of mask is part of the graphics context, as described in section 4.1

See also

STENCIL_FUNC, STENCIL_OP, TAG_MASK

4.40 STENCIL_OP

Set stencil test actions

Encoding

31	24	23	6	5	3	2	0
0x0C		reserved			sfail	spass	

Parameters

sfail

Specifies the action to take when the stencil test fails, one of KEEP, ZERO, REPLACE, INCR, DECR, and INVERT. The initial value is KEEP (1)

spass

Specifies the action to take when the stencil test passes, one of the same constants as sfail. The initial value is KEEP (1)

NAME	VALUE
ZERO	0
KEEP	1
REPLACE	2
INCR	3
DECR	4
INVERT	5


Figure 12: STENCIL_OP constants definition

Description

The stencil operation specifies how the stencil buffer is updated. The operation selected depends on whether the stencil test passes or not.

Examples

Draw two points, incrementing stencil at each pixel, then draw the pixels with value 2 in red:

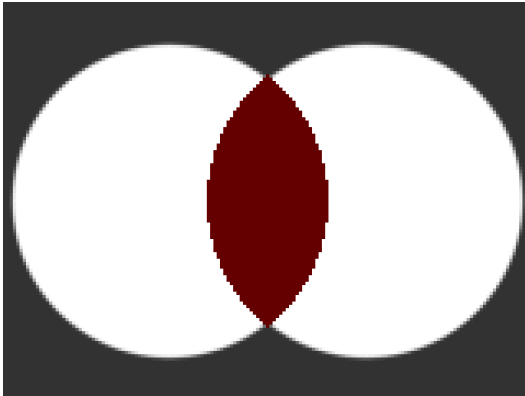

```
dl( STENCIL_OP(INCR, INCR) );
dl( POINT_SIZE(760) );
dl( BEGIN(POINTS) );
dl( VERTEX2II(50, 60, 0, 0) );
dl( VERTEX2II(110, 60, 0, 0) );
dl( STENCIL_FUNC(EQUAL, 2, 255) );
dl( COLOR_RGB(100, 0, 0) );
dl( VERTEX2II(80, 60, 0, 0) );
```

Graphics context

The values of `stencil` and `stencil_mask` are part of the graphics context, as described in section 4.1

See also

`STENCIL_FUNC`, `STENCIL_MASK`

4.41 TAG

Attach the tag value for the following graphics objects drawn on the screen. The initial tag buffer value is 255.

Encoding

31	24	23	8	7	0
0x03		Reserved			s

Parameters

s

Tag value. Valid value range is from 1 to 255.

Description

The initial value of the tag buffer of the FT800 is specified by command CLEAR_TAG and taken effect by command CLEAR. TAG command can specify the value of the tag buffer of the FT800 that applies to the graphics objects when they are drawn on the screen. This TAG value will be assigned to all the following objects, unless the TAG_MASK command is used to disable it. Once the following graphics objects are drawn, they are attached with the tag value successfully. When the graphics objects attached with the tag value are touched, the register REG_TOUCH_TAG will be updated with the tag value of the graphics object being touched.

If there is no TAG commands in one display list, all the graphics objects rendered by the display list will report tag value as 255 in REG_TOUCH_TAG when they were touched.

Graphics context

The value of s is part of the graphics context, as described in section 4.1

See also

CLEAR_TAG, TAG_MASK

4.42 TAG_MASK

Control the writing of the tag buffer

Encoding

31	24	23	1	0
0x14		Reserved		mask

Parameters

mask

Allow updates to the tag buffer. The initial value is one and it means the tag buffer of the FT800 is updated with the value given by the TAG command. Therefore, the following graphics objects will be attached to the tag value given by the TAG command.

The value zero means the tag buffer of the FT800 is set as the default value, rather than the value given by TAG command in the display list.

Description

Every graphics object drawn on screen is attached with the tag value which is defined in the FT800 tag buffer. The FT800 tag buffer can be updated by TAG command.

The default value of the FT800 tag buffer is determined by CLEAR_TAG and CLEAR commands. If there is no CLEAR_TAG command present in the display list, the default value in tag buffer shall be 0.

TAG_MASK command decides whether the FT800 tag buffer takes the value from the default value of the FT800 tag buffer or the TAG command of the display list.

Graphics context

The value of mask is part of the graphics context, as described in section 4.1

See also

TAG, CLEAR_TAG, STENCIL_MASK, COLOR_MASK

4.43 VERTEX2F

Start the operation of graphics primitives at the specified screen coordinate, in 1/16th pixel precision.

Encoding

31 30	29	15	14	0
0b'01	X		Y	

Parameters

x

Signed x-coordinate in 1/16 pixel precision

y

Signed y-coordinate in 1/16 pixel precision

Description

The range of coordinates is from -16384 to +16383 in terms of 1/16th pixel units. The negative x coordinate value means the coordinate in the left virtual screen from (0, 0), while the negative y coordinate value means the coordinate in the upper virtual screen from (0, 0). If drawing on the negative coordinate position, the drawing operation will not be visible.

Graphics context

None

See also

None

4.44 VERTEX2II

Start the operation of graphics primitive at the specified coordinates in pixel precision.

Encoding

31	30	29	21	20	12	11	7	6	0
0b'10		X			Y		handle		cell

Parameters

x

x-coordinate in pixels, from 0 to 511.

y

y-coordinate in pixels, from 0 to 511.

handle

Bitmap handle. The valid range is from 0 to 31. From 16 to 31, the bitmap handle is dedicated to the FT800 built-in font.

cell

Cell number. Cell number is the index of bitmap with same bitmap layout and format. For example, for handle 31, the cell 65 means the character "A" in the largest built in font.

Description

The range of coordinates is from -16384 to +16383 in terms of pixel unit. The handle and cell parameters are ignored unless the graphics primitive is specified as bitmap by command BEGIN, prior to this command.


Graphics context

None


See also

None

5 Co-Processor Engine commands

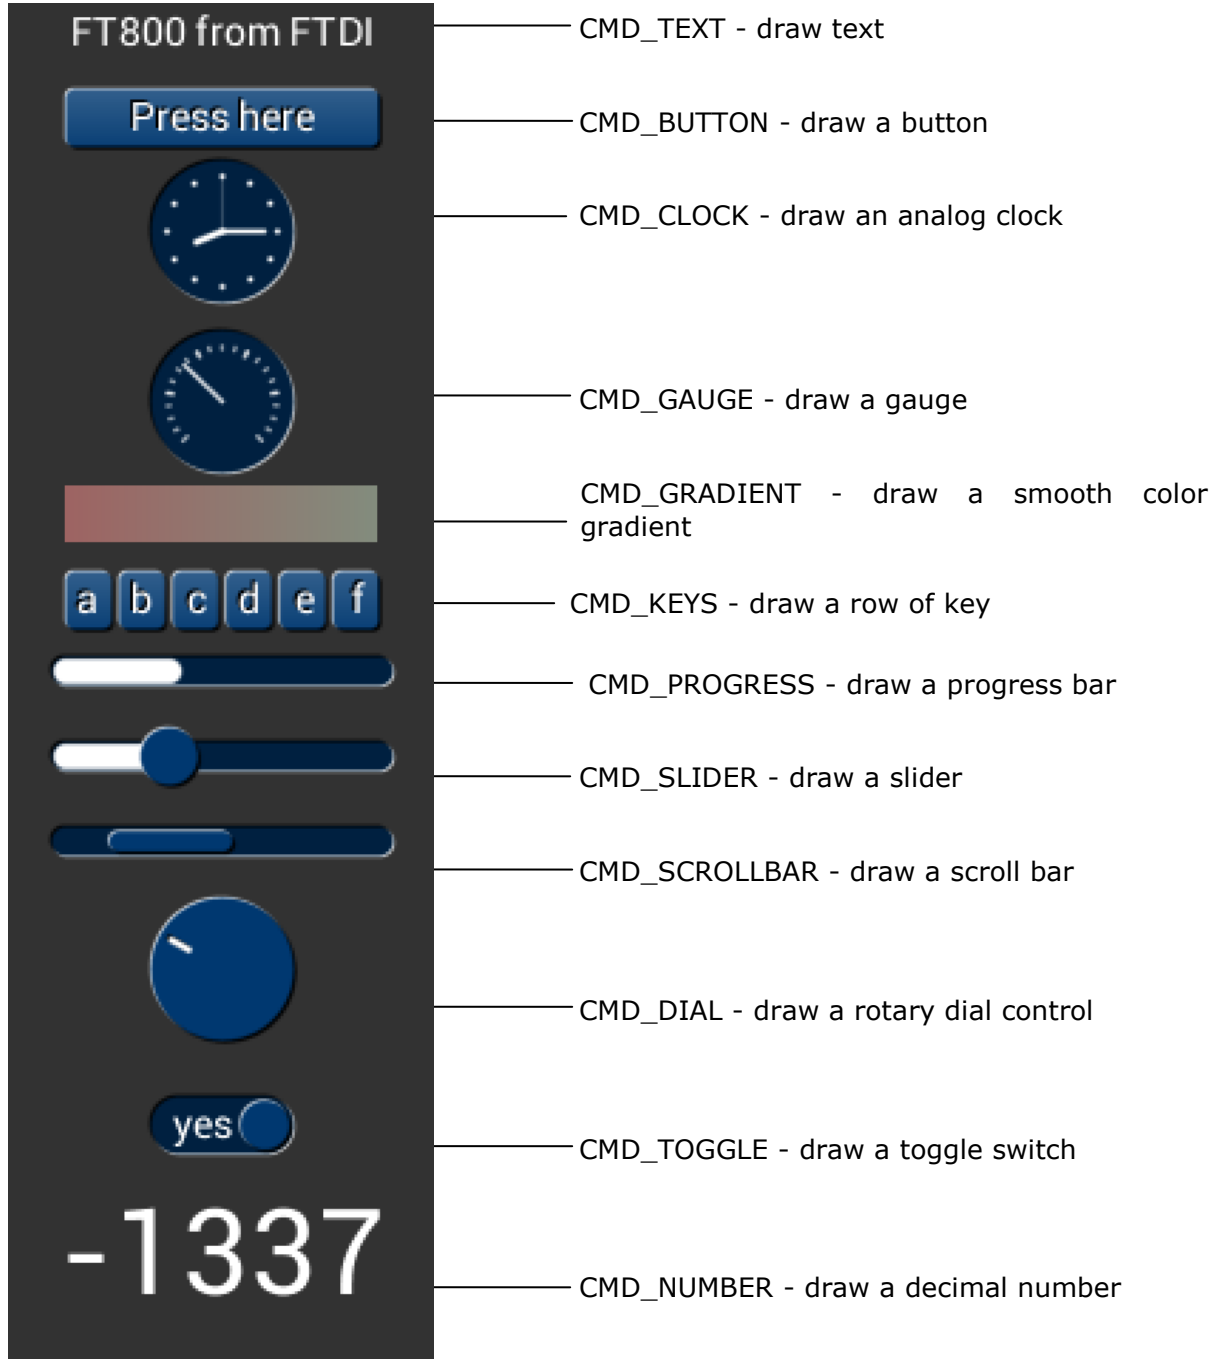

The co-processor engine is fed via a 4 Kbyte FIFO in FT800 memory at RAM_CMD. The MCU writes commands into the FIFO, and the co-processor engine reads and executes the commands. The MCU updates register REG_CMD_WRITE to indicate that there are new commands in the FIFO, and the co-processor engine updates REG_CMD_READ after commands have been executed.

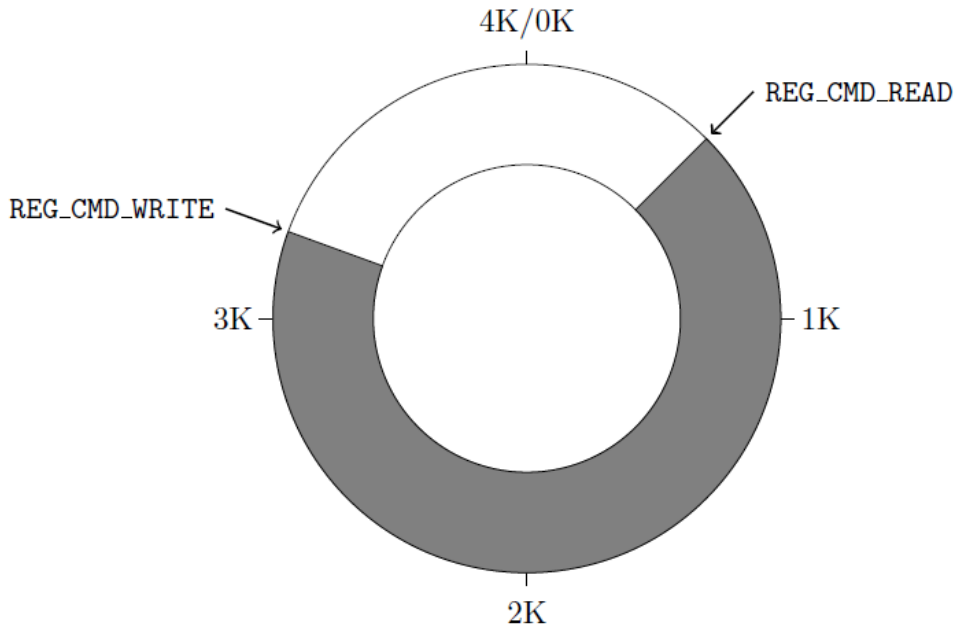

So to compute the available free space in the FIFO, the MCU can compute:

$$fullness = (REG_CMD_WRITE - REG_CMD_READ) \text{ mod } 4096$$

$$freespace = (4096 - 4) - fullness;$$

This calculation does not report 4096 bytes of free space, to prevent completely wrapping the FIFO and making it appear empty.

If enough space is available in the FIFO, the MCU writes the commands at the appropriate location in the FIFO RAM, then updates REG_CMD_WRITE. To simplify the MCU code, the FT800 hardware automatically wraps continuous writes from (RAM_CMD + 4095) back to (RAM_CMD + 0).

FIFO entries are always 4 bytes wide - it is an error for either REG_CMD_READ or REG_CMD_WRITE to have a value that is not a multiple of 4 bytes. Each command issued to the co-processor engine may take 1 or more words: the length depends on the command itself, and any appended data. Some commands are followed by variable-length data, so the command size may not be a multiple of 4 bytes. In this case the co-processor engine ignores the extra 1, 2 or 3 bytes and continues reading the next command at the following 4 byte boundary.

5.1 Co-processor handling of Display list commands

Most co-processor engine commands write to the current display list. The current write location in the display list is held in REG_CMD_DL. Whenever the co-processor engine writes a word to the display list, it does so at REG_CMD_DL then increments REG_CMD_DL. The special command CMD_DLSTART sets REG_CMD_DL to zero, for the start of a new display list.

All display list commands can be written as co-processor engine commands. The co-processor engine copies these commands into the current display list at REG_CMD_DL. For example, this series of co-processor engine commands writes a small display list:

```
cmd(CMD_DLSTART); // start a new display list
cmd(CLEAR_COLOR_RGB(255, 100, 100)); // set clear color
cmd(CLEAR(1, 1, 1)); // clear screen
cmd(DISPLAY()); // display
```

Of course, this display list could have been written directly to RAM_DL. The advantage of this technique is that you can mix low-level operations and high level co-processor engine commands in a single stream:

```
cmd(CMD_DLSTART); // start a new display list
cmd(CLEAR_COLOR_RGB(255, 100, 100)); // set clear color
cmd(CLEAR(1, 1, 1)); // clear screen
cmd_button(20, 20, // x, y
60, 60, // width, height in pixels
30, // font 30
0, // default options
"OK!");
cmd(DISPLAY()); // display
```

5.2 Synchronization

At some points, it is necessary to wait until the co-processor engine has processed all outstanding commands. When the co-processor engine completes the last outstanding command in the command buffer, it raises the INT_CMDEEMPTY interrupt. Another approach is that the MCU can poll REG_CMD_READ until it is equal to REG_CMD_WRITE.

One situation that requires synchronization is to read the value of REG_CMD_DL, when the MCU needs to do direct writes into the display list. In this situation the MCU should wait until the co-processor engine is idle before reading REG_CMD_DL.

5.3 ROM and RAM Fonts

The graphics engine hardware draws bitmap graphics, and it is useful for software to treat these graphics as fonts.

Font metrics - e.g. character height and width - are used by software when placing font characters. For the ROM character bitmaps, these font metrics are in ROM. The co-processor engine uses these metrics when drawing text in any of the 16 built-in ROM fonts, numbered 16-31. Users can load similar font metrics into RAM, and hence create additional user-defined fonts in bitmap handles 0-14. Bitmap handle 15 is reserved for co-processor command CMD_Button/CMD_Keys/CMD_Gradient.



Each 148-byte font metric block has this format:

Table 9 FT800 Font metrics block format

Address	Size	Value
p + 0	128	width of each font character, in pixels
p + 128	4	font bitmap format, for example L1, L4 or L8
p + 132	4	font line stride, in bytes
p + 136	4	font width, in pixels
p + 140	4	font height, in pixels
p + 144	4	pointer to font graphic data in memory

For the ROM fonts, these blocks are also in ROM, in an array of length 16. The address of this array is held in ROM location 0xffffc. For example to find the width of character 'g' (ASCII 0x67) in font 31:

```
read 32-bit pointer p from 0xffffc
widths = p + (148 * (31 - 16)) (table starts at font 16)
read byte from memory at widths[0x67]
```

For the built-in ROM font of the FT800, the valid character range for one bitmap handle is printable ASCII code, i.e., from 32 to 127, both inclusive. For custom RAM font, the ASCII code range of valid characters is from 1 to 127.

To use a custom font in the user-interface objects:

- Select a bitmap handle from 0 to 14
- Load the font bitmap into memory
- Set the bitmap parameters using commands BITMAP_SOURCE, BITMAP_LAYOUT and BITMAP_SIZE.
- Create and download a font metric block in RAM. The address of metric block shall be **4 bytes aligned**.
- Use command CMD_SETFONT to register the new font with the selected handle.
- Use the selected handle in any co-processor command font argument.

5.4 Cautions

For some of the widgets, if the input parameter values are more than 512 pixel resolution, the generated widgets may not be proper.

Behavior of CMD_TRACK is not defined if the center of the track object (in case of rotary track) or top left of the track object (in case of linear track) is outside the display region.

Only signed and unsigned integers are supported in CMD_NUMBER (fractional part is not supported).

The behavior of widgets is not defined if the input parameters values are outside the valid range.

5.5 Fault Scenarios

Some commands can cause co-processor engine faults. These faults arise because the co-processor engine cannot continue. For example:

- An invalid JPEG is supplied to CMD_LOADIMAGE
- An invalid data stream is supplied to CMD_INFLATE
- An attempt is made to write more than 2048 instructions into a display list

In the fault condition, the co-processor engine sets REG_CMD_READ to 0xff (an illegal value because all command buffer data shall be 32-bit aligned), raises the INT_CMDEEMPTY interrupt, and stops accepting new commands. When the host MCU recognizes the fault condition, it should recover as follows:

- Set REG_CPURESET to 1, to hold the co-processor engine in the reset condition
- Set REG_CMD_READ and REG_CMD_WRITE to zero
- Set REG_CPURESET to 0, to restart the co-processor engine

5.6 widgets physical dimension

This section contains the common physical dimensions of the widgets.

- All rounded corners have a radius that is computed from the font used for the widget (curvature of lowercase 'o' character). The radius is computed as $\text{Font height} \times 3/16$
- All 3D shadows are drawn with: (1) highlight offset 0.5 pixels above and left of the object (2) shadow offset 1.0 pixel below and right of the object.
- For widgets such as progress bar, scrollbar and slider, the output widget will be a vertical widget in case width and height are of same value.

5.7 widgets color settings

Co-processor engine widgets are drawn with the color designated by the precedent commands: CMD_FGCOLOR, CMD_BGCOLOR and COLOR_RGB. According to these commands, the co-processor engine will determine to render the different area of co-processor engine widgets in different color.

Usually, CMD_FGCOLOR affects the interaction area of co-processor engine widgets if they are designed for interactive UI element, for example, CMD_BUTTON, CMD_DIAL. CMD_BGCOLOR applies to the co-processor engine widgets with background. Please see the table below for more details.

Table 10 Widgets color setup table

Widget	CMD_FGCOLOR	CMD_BGCOLOR	COLOR_RGB
CMD_TEXT	NO	NO	YES
CMD_BUTTON	YES	NO	YES(label)
CMD_GAUGE	NO	YES	YES(needle and mark)
CMD_KEYS	YES	NO	YES(text)
CMD_PROGRESS	NO	YES	YES
CMD_SCROLLBAR	YES(Inner bar)	YES(Outer bar)	NO
CMD_SLIDER	YES(Knob)	YES(Right bar of knob)	YES(Left bar of knob)
CMD_DIAL	YES(Knob)	NO	YES(Marker)
CMD_TOGGLE	YES(Knob)	YES(Bar)	YES(Text)
CMD_NUMBER	NO	NO	YES
CMD_CALIBRATE	YES(Animating dot)	YES(Outer dot)	NO
CMD_SPINNER	NO	NO	YES

5.8 Co-processor engine graphics state

The co-processor engine maintains a small amount of internal states for graphics drawing. This state is set to the default at co-processor engine reset, and by CMD_COLDSTART. The state values are not affected by CMD_DLSTART or CMD_SWAP, so an application need only set them once at startup.

Table 11 Co-processor engine graphics state

State	Default	Commands
background color	dark blue (0x002040)	CMD_BGCOLOR
foreground color	light blue (0x003870)	CMD_FGCOLOR
gradient color	white (0xffffffff)	CMD_GRADCOLOR
spinner	<i>None</i>	CMD_SPINNER
object trackers	<i>all disabled</i>	CMD_TRACK
interrupt timer	<i>None</i>	CMD_INTERRUPT

Bitmap transform matrix: $\begin{bmatrix} A & B & C \\ D & E & F \end{bmatrix}$	$\begin{bmatrix} 1.0 & 0.0 & 0.0 \\ 0.0 & 1.0 & 0.0 \end{bmatrix}$	CMD_LOADIDENTITY, CMD_TRANSLATE, CMD_ROTATE, etc.
Bitmap Handle	15	CMD_GRADCOLOR, CMD_KEYS, CMD_BUTTON

5.9 Definition of parameter OPTION

The following table defines the parameter OPTION mentioned in this chapter.

Table 12 Parameter OPTION definition

Name	Value	Description	Commands
OPT_3D	0	Co-processor widget is drawn in 3D effect. The default option.	CMD_BUTTON,CMD_CLOCK,CMD_KEYS, CMD_GAUGE,CMD_SLIDER, CMD_DIAL, CMD_TOGGLE,CMD_PROGRESS, CMD_SCROLLBAR
OPT_RGB565	0	Co-processor option to decode the JPEG image to RGB565 format	CMD_IMAGE
OPT_MONO	1	Co-processor option to decode the JPEG image to L8 format, i.e., monochrome	CMD_IMAGE
OPT_NODL	2	No display list commands generated for bitmap decoded from JPEG image	CMD_IMAGE
OPT_FLAT	256	Co-processor widget is drawn without 3D effect	CMD_BUTTON,CMD_CLOCK,CMD_KEYS, CMD_GAUGE,CMD_SLIDER, CMD_DIAL, CMD_TOGGLE,CMD_PROGRESS, CMD_SCROLLBAR
OPT_SIGNED	256	The number is treated as 32 bit signed integer	CMD_NUMBER
OPT_CENTERX	512	Co-processor widget centers horizontally	CMD_KEYS,CMD_TEXT, CMD_NUMBER

Name	Value	Description	Commands
OPT_CENTERY	1024	Co-processor widget centers vertically	CMD_KEYS,CMD_TEXT, CMD_NUMBER
OPT_CENTER	1536	Co-processor widget centers horizontally and vertically.	CMD_KEYS,CMD_TEXT, CMD_NUMBER
OPT_RIGHTX	2048	The label on the Co-processor widget is right justified	CMD_KEYS,CMD_TEXT, CMD_NUMBER
OPT_NOBACK	4096	Co-processor widget has no background drawn	CMD_CLOCK, CMD_GAUGE
OPT_NOTICKS	8192	Co-processor clock widget is drawn without hour ticks. Gauge widget is drawn without major and minor ticks	CMD_CLOCK, CMD_GAUGE
OPT_NOHM	16384	Co-processor clock widget is drawn without hour and minutes hands, only seconds hand is drawn	CMD_CLOCK
OPT_NOPOINTER	16384	The Co-processor gauge has no pointer	CMD_GAUGE
OPT_NOSECS	32768	Co-processor clock widget is drawn without seconds hand	CMD_CLOCK
OPT_NOHANDS	49152	Co-processor clock widget is drawn without hour, minutes and seconds hands	CMD_CLOCK

5.10 Co-processor engine resources

The co-processor engine does not change hardware graphics state. That is, graphics states such as color and line width are not to be changed by co-processor engine.

However, the widgets do reserve some hardware resources, which user programs need take into account:

- Bitmap handle 15 is used by the 3D-effect buttons, keys and gradient.
- One graphics context is used by objects, so the effective stack depth for SAVE_CONTEXT and RESTORE_CONTEXT commands is 3 levels.

5.11 Command groups

These commands begin and finish the display list:

- CMD_DLSTART - start a new display list
- CMD_SWAP - swap the current display list

Commands to draw graphics objects:

- CMD_TEXT - draw text
- CMD_BUTTON - draw a button
- CMD_CLOCK - draw an analog clock
- CMD_BGCOLOR - set the background color
- CMD_FGCOLOR - set the foreground color
- CMD_GRADCOLOR - set the 3D effects for CMD_BUTTON and CMD_KEYS highlight color
- CMD_GAUGE - draw a gauge
- CMD_GRADIENT - draw a smooth color gradient
- CMD_KEYS - draw a row of keys
- CMD_PROGRESS - draw a progress bar
- CMD_SCROLLBAR - draw a scroll bar
- CMD_SLIDER - draw a slider
- CMD_DIAL - draw a rotary dial control
- CMD_TOGGLE - draw a toggle switch
- CMD_NUMBER - draw a decimal number

Commands to operate on memory:

- CMD_MEMCRC - compute a CRC-32 for memory
- CMD_MEMZERO - write zero to a block of memory
- CMD_MEMSET - fill memory with a byte value
- CMD_MEMWRITE - write bytes into memory
- CMD_MEMCPY - copy a block of memory
- CMD_APPEND - append memory to display list

Commands for loading image data into FT800 memory:

- CMD_INFLATE - decompress data into memory
- CMD_LOADIMAGE - load a JPEG image

Commands for setting the bitmap transform matrix:

- **CMD_LOADIDENTITY** - set the current matrix to identity
- **CMD_TRANSLATE** - apply a translation to the current matrix
- **CMD_SCALE** - apply a scale to the current matrix
- **CMD_ROTATE** - apply a rotation to the current matrix
- **CMD_SETMATRIX** - write the current matrix as a bitmap transform
- **CMD_GETMATRIX** - retrieves the current matrix coefficients

Other commands:

- **CMD_COLDSTART** - set co-processor engine state to default values
- **CMD_INTERRUPT** - trigger interrupt INT_CMDFLAG
- **CMD_REGREAD** - read a register value
- **CMD_CALIBRATE** - execute the touch screen calibration routine
- **CMD_SPINNER** - start an animated spinner
- **CMD_STOP** - stop any spinner, screensaver or sketch
- **CMD_SCREENSAVER** - start an animated screensaver
- **CMD_SKETCH** - start a continuous sketch update
- **CMD_SNAPSHOT** - take a snapshot of the current screen
- **CMD_LOGO** - play device logo animation

5.12 CMD_DLSTART - start a new display list

When the co-processor engine executes this command, it waits until the current display list is scanned out, then sets REG_CMD_DL to zero.

C prototype

```
void cmd_dlstart( );
```

Command layout

+0	CMD_DLSTART (0xffffffff)
----	--------------------------

Examples

```
cmd_dlstart();  
...  
cmd_dlswap();
```

5.13 CMD_SWAP - swap the current display list

When the co-processor engine executes this command, it requests a display list swap immediately after current display list is scanned out. Internally, the co-processor engine implements this command by writing to REG_DLSWAP. Please see REG_DLSWAP Definition.

This co-processor engine command will not generate any display list command into display list memory RAM_DL.

C prototype

```
void cmd_swap( );
```

Command layout

+0	CMD_DLSWAP(0xffffffff01)
----	--------------------------

Examples

None

5.14 CMD_COLDSTART - set co-processor engine state to default values

This command sets co-processor engine to reset default states.

C prototype


```
void cmd_coldstart( );
```

Command layout

+0	CMD_COLDSTART(0xffffffff32)
----	-----------------------------

Examples

Change to a custom color scheme, and then restore the default colors:

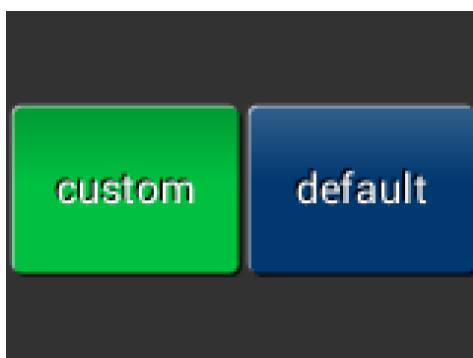

```
cmd_fgcolor(0x00c040);
cmd_gradcolor(0x000000);
cmd_button( 2, 32, 76, 56, 26, 0,
"custom");
cmd_coldstart();
cmd_button( 82, 32, 76, 56, 26, 0,
"default");
```


5.15 CMD_INTERRUPT - trigger interrupt INT_CMDFLAG

When the co-processor engine executes this command, it triggers interrupt INT_CMDFLAG.

C prototype

```
void cmd_interrupt( uint32_t ms );
```

Parameters

ms

Delay before interrupt triggers, in milliseconds. The interrupt is guaranteed not to fire before this delay. If ms is zero, the interrupt fires immediately.

Command layout

+0	CMD_INTERRUPT(0xffffffff02)
+4	ms

Examples

To trigger an interrupt after a JPEG has finished loading:

```
cmd_loadimage();
```

...

```
cmd_interrupt(0); // previous load image complete, trigger interrupt
```

To trigger an interrupt in 0.5 seconds:

```
cmd_interrupt(500);
```

...

5.16 CMD_APPEND - append memory to display list

Appends a block of memory to the current display list memory address where the offset is specified in REG_CMD_DL.

C prototype

```
void cmd_append( uint32_t ptr,
                uint32_t num );
```

Parameters

ptr

Start of source commands in main memory

num

Number of bytes to copy. This must be a multiple of 4.

Command layout

+0	CMD_APPEND(0xfffff1e)
+4	Ptr
+8	Num

Description

After appending is done, the co-processor engine will increase the REG_CMD_DL by num to make sure the display list is in order.

Examples

```
...
cmd_dlstart();
cmd_append(0, 40); // copy 10 commands from main memory address 0
cmd(DISPLAY); // finish the display list
cmd_swap();
```

5.17 CMD_REGREAD - read a register value

C prototype

```
void cmd_regread( uint32_t ptr,
                 uint32_t result );
```

Parameters

ptr

Address of register to read

result

The register value to be read at ptr address.

Command layout

+0	CMD_REGREAD(0xffffffff19)
+4	Ptr
+8	Result

Examples

To capture the exact time when a command completes:

```
uint16_t x = rd16(REG_CMD_WRITE);
cmd_regread(REG_CLOCK, 0);
...
printf("%08x\n", rd32(RAM_CMD + x + 8));
```


5.18 CMD_MEMWRITE - write bytes into memory

Writes the following bytes into the FT800 memory. This command can be used to set register values, or to update memory contents at specific times.

C prototype

```
void cmd_memwrite( uint32_t ptr,
                  uint32_t num );
```

Parameters

Ptr

The memory address to be written

num

Number of bytes to be written.

Description

The data byte should immediately follow in the command buffer. If the number of bytes is not a multiple of 4, then 1, 2 or 3 bytes should be appended to ensure 4-byte alignment of the next command, these padding bytes can have any value. The completion of this function can be detected when the value of REG_CMD_READ is equal to REG_CMD_WRITE.

Caution: if using this command, it may corrupt the memory of the FT800 if used improperly.

Command layout

+0	CMD_MEMWRITE(0xffffffff)
+4	ptr
+8	Num
+12	Byte0
+13	Byte1
..	..
+n	..

Examples

To change the backlight brightness to 64 (half intensity) for a particular screen shot:

...

```
cmd_swap(); // finish the display list
```

```
cmd_dlstart(); // wait until after the swap
```

```
cmd_memwrite(REG_PWM_DUTY, 4); // write to the PWM_DUTY register
```

cmd(100);

5.19 CMD_INFLATE - decompress data into memory

Decompress the following compressed data into the FT800 memory, RAM_G. The data should have been compressed with the DEFLATE algorithm, e.g. with the ZLIB library. This is particularly useful for loading graphics data.

C prototype

```
void cmd_inflate( uint32_t ptr );
```

Parameters

ptr

Destination address. The data byte should immediate follow in the command buffer.

Description

If the number of bytes is not a multiple of 4, then 1, 2 or 3 bytes should be appended to ensure 4-byte alignment of the next command. These padding bytes can have any value

Command layout

+0	CMD_INFLATE(0xffffffff22)
+4	ptr
+8	Byte0
+9	Byte1
..	..
+n	..

Examples

To load graphics data to main memory address 0x8000:

```
cmd_inflate(0x8000);
... // zlib-compressed data follows
```

5.20 CMD_LOADIMAGE - load a JPEG image

Decompress the following JPEG image data into an FT800 bitmap, in main memory. The image data should be a regular baseline JPEG (JFIF) image.

C prototype

```
void cmd_loadimage( uint32_t ptr,
                   uint32_t options );
```

Parameters

ptr

Destination address

options

By default, option OPT_RGB565 means the loaded bitmap is in RGB565 format. Option OPT_MONO means the loaded bitmap to be monochrome, in L8 format. The command appends display list commands to set the source, layout and size of the resulting image. Option OPT_NODL prevents this - nothing is written to the display list. OPT_NODL can be OR'ed with OPT_MONO or OPT_RGB565.

Description

The data byte should immediately follow in the command buffer. If the number of bytes is not a multiple of 4, then 1, 2 or 3 bytes should be appended to ensure 4-byte alignment of the next command. These padding bytes can have any value.

The application on the host processor has to parse the JPEG header to get the properties of the JPEG image and decide to decode. Behavior is unpredictable in cases of non baseline jpeg images or the output data generated is more than the RAM_G size.

Command layout

+0	CMD_LOADIMAGE(0xffffffff24)
+4	Ptr
+8	Options
+12	Byte0
+13	Byte1
..	..
+n	..

Examples

To load a JPEG image at address 0 then draw the bitmap at (10,20) and (100,20):

```
cmd_loadimage(0, 0);  
... // JPEG file data follows  
cmd(BEGIN(BITMAPS))  
cmd(VERTEX2II(10, 20, 0, 0)); // draw bitmap at (10,20)  
cmd(VERTEX2II(100, 20, 0, 0)); // draw bitmap at (100,20)
```

5.21 CMD_MEMCRC - compute a CRC-32 for memory

Computes a CRC-32 for a block of FT800 memory

C prototype

```
void cmd_memcrc( uint32_t ptr,
                uint32_t num,
                uint32_t result );
```

Parameters

ptr

Starting address of the memory block

num

Number of bytes in the source memory block

result

Output parameter; written with the CRC-32 after command execution. The completion of this function is detected when the value of REG_CMD_READ is equal to REG_CMD_WRITE.

Command layout

+0	CMD_MEMCRC(0xffffffff18)
+4	Ptr
+8	Num
+12	Result

Examples

To compute the CRC-32 of the first 1K byte of FT800 memory, first record the value of REG_CMD_WRITE, execute the command, wait for completion, then read the 32-bit value at result:

```
uint16_t x = rd16(REG_CMD_WRITE);
cmd_crc(0, 1024, 0);
...
printf("%08x\n", rd32(RAM_CMD + x + 12));
```

5.22 CMD_MEMZERO - write zero to a block of memory

C prototype

```
void cmd_memzero( uint32_t ptr,
                 uint32_t num );
```

Parameters

ptr

Starting address of the memory block

num

Number of bytes in the memory block

The completion of this function is detected when the value of REG_CMD_READ is equal to REG_CMD_WRITE.

Command layout

+0	CMD_MEMZERO(0xffffffff)
+4	ptr
+8	num

Examples

To erase the first 1K of main memory:

```
cmd_memzero(0, 1024);
```

5.23 CMD_MEMSET - fill memory with a byte value

C prototype

```
void cmd_memset( uint32_t ptr,
                uint32_t value,
                uint32_t num );
```

Parameters

ptr

Starting address of the memory block

value

Value to be written to memory

num

Number of bytes in the memory block

The completion of this function is detected when the value of REG_CMD_READ is equal to REG_CMD_WRITE.

Command layout

+0	CMD_MEMSET(0xffffffff)
+4	ptr
+8	Value
+12	num

Examples

To write 0xff the first 1K of main memory:

```
cmd_memset(0, 0xff, 1024);
```


5.24 CMD_MEMCPY - copy a block of memory

C prototype

```
void cmd_memcpy( uint32_t dest,
                uint32_t src,
                uint32_t num );
```

Parameters

dest

address of the destination memory block

src

address of the source memory block

num

number of bytes to copy

The completion of this function is detected when the value of REG_CMD_READ is equal to REG_CMD_WRITE.

Command layout

+0	CMD_MEMCPY(0xffffffff)
+4	dst
+8	src
+12	num

Examples

To copy 1K byte of memory from 0 to 0x8000:

```
cmd_memcpy(0x8000, 0, 1024);
```

5.25 CMD_BUTTON - draw a button

C prototype

```
void cmd_button( int16_t x,
                int16_t y,
                int16_t w,
                int16_t h,
                int16_t font,
                uint16_t options,
                const char* s );
```

Parameters

x

x-coordinate of button top-left, in pixels

y

y-coordinate of button top-left, in pixels

font

bitmap handle to specify the font used in button label. See ROM and RAM Fonts.

options

By default, the button is drawn with a 3D effect and the value is zero. OPT_FLAT removes the 3D effect. The value of OPT_FLAT is 256.

s

button label. It must be one string terminated with null character, i.e. '\0' in C language. For built-in ROM font of FT800, the valid character inside of s is printable ASCII code, i.e., from 32 to 127, both inclusive. For custom RAM font, the ASCII code of valid character inside of s is from 1 to 127.

Description

Refer to [Co-processor engine widgets physical dimensions](#) for more information.


Command layout

+0	CMD_BUTTON(0xffffffff0d)
+4	X
+6	Y
+8	W

+10	H
+12	Font
+14	Options
+16	S
+17	..
..	..
+n	0


Examples

A 140x00 pixel button with large text:

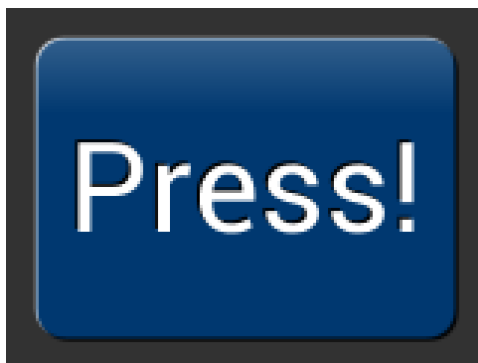


```
cmd_button(10, 10, 140, 100, 31, 0, "Press!");
```

Without the 3D look:

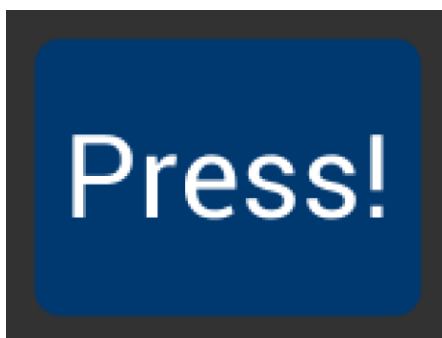

```
cmd_button(10, 10, 140, 100, 31, OPT_FLAT, "Press!");
```


Several smaller buttons:

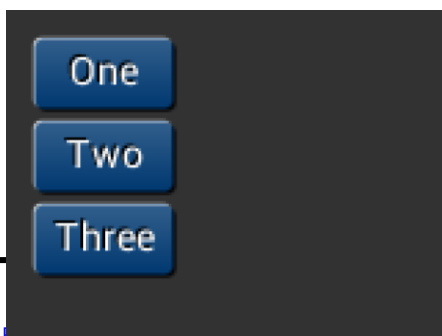

```
cmd_button(10, 10, 50, 25, 26, 0, "One");
cmd_button(10, 40, 50, 25, 26, 0, "Two");
```

```
cmd_button(10, 70, 50, 25, 26, 0,  
"Three");
```

Changing button color

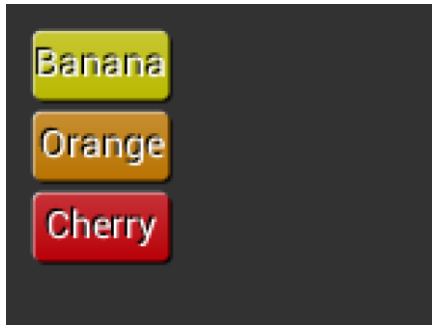

```
cmd_fgcolor(0xb9b900),  
cmd_button(10, 10, 50, 25, 26, 0,  
"Banana");  
cmd_fgcolor(0xb97300),  
cmd_button(10, 40, 50, 25, 26, 0,  
"Orange");  
cmd_fgcolor(0xb90007),  
cmd_button(10, 70, 50, 25, 26, 0,  
"Cherry");
```

5.26 CMD_CLOCK - draw an analog clock



C prototype

```
void cmd_clock( int16_t x,
               int16_t y,
               int16_t r,
               uint16_t options,
               uint16_t h,
               uint16_t m,
               uint16_t s,
               uint16_t ms );
```

Parameters

x
 x-coordinate of clock center, in pixels

y
 y-coordinate of clock center, in pixels

options

By default the clock dial is drawn with a 3D effect and the name of this option is OPT_3D. Option OPT_FLAT removes the 3D effect. With option OPT_NOBACK, the background is not drawn. With option OPT_NOTICKS, the twelve hour ticks are not drawn. With option OPT_NOSECS, the seconds hand is not drawn. With option OPT_NOHANDS, no hands are drawn. With option OPT_NOHM, no hour and minutes hands are drawn.

h
 hours

m
 minutes

s

seconds

ms

milliseconds

Description

The details of physical dimension are

- The 12 tick marks are placed on a circle of radius $r*(200/256)$.
- Each tick is a point of radius $r*(10/256)$
- The seconds hand has length $r*(200/256)$ and width $r*(3/256)$
- The minutes hand has length $r*(150/256)$ and width $r*(9/256)$
- The hours hand has length $r*(100/256)$ and width $r*(12/256)$

Refer to [Co-processor engine widgets physical dimensions](#) for more information.

Command layout

+0	CMD_CLOCK(0xffffffff14)
+4	X
+6	Y
+8	R
+10	Options
+12	H
+14	M
+16	S
+18	Ms

Examples

A clock with radius 50 pixels, showing a time of 8.15:




```
cmd_clock(80, 60, 50, 0, 8, 15, 0, 0);
```

Setting the background color




```
cmd_bgcolor(0x401010);
cmd_clock(80, 60, 50, 0, 8, 15, 0, 0);
```

Without the 3D look:

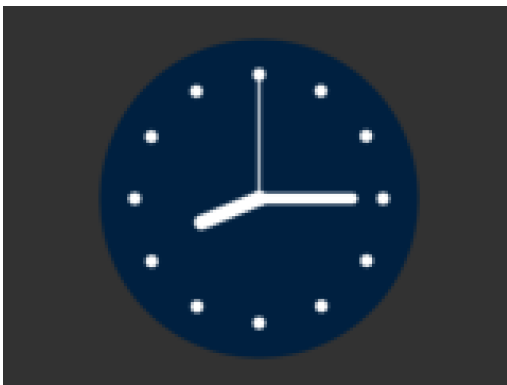

```
cmd_clock(80, 60, 50, OPT_FLAT, 8, 15,
0, 0);
```

The time fields can have large values. Here the hours are (7 x 3600s) and minutes are (38 x 60s), and seconds is 59. Creating a clock face showing the time as 7.38.59:

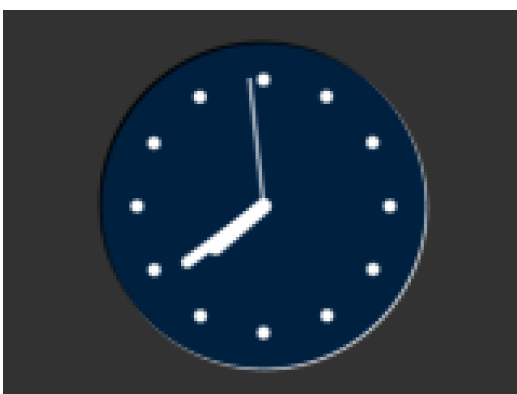

```
cmd_clock(
80, 60, 50, 0,
0, 0, (7 * 3600) + (38 * 60) + 59, 0);
```

No seconds hand:




```
cmd_clock(80, 60, 50, OPT_NOSECS, 8,  
15, 0, 0);
```

No background:




```
cmd_clock(80, 60, 50, OPT_NOBACK, 8,  
15, 0, 0);
```

No ticks:

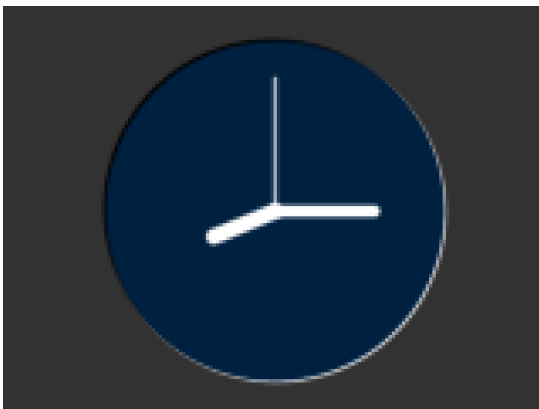


```
cmd_clock(80, 60, 50, OPT_NOTICKS, 8,  
15, 0, 0);
```


No hands:

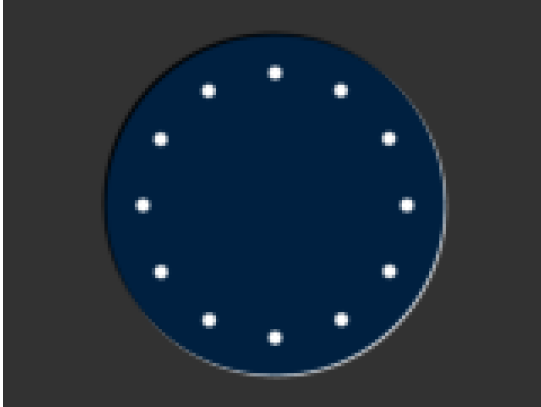

```
cmd_clock(80, 60, 50, OPT_NOHANDS, 8,  
15, 0, 0);
```

5.27 CMD_FGCOLOR - set the foreground color

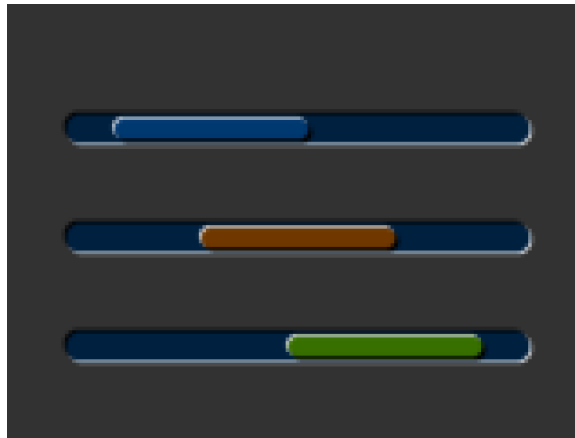

C prototype

```
void cmd_fgcolor( uint32_t c );
```

Parameters

c


New foreground color, as a 24-bit RGB number. Red is the most significant 8 bits, blue is the least. So 0xff0000 is bright red. Foreground color is applicable for things that the user can move such as handles and buttons ("affordances").

Command layout

+0	CMD_FGCOLOR(0xffffffff0a)
+4	C

Examples

The top scrollbar uses the default foreground color, the others with a changed color:

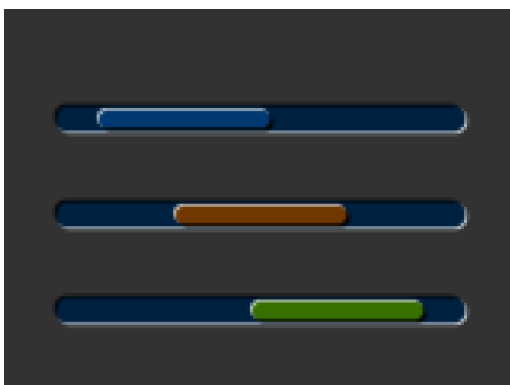

```
cmd_scrollbar(20, 30, 120, 8, 0, 10, 40, 100);
cmd_fgcolor(0x703800);
cmd_scrollbar(20, 60, 120, 8, 0, 30, 40, 100);
cmd_fgcolor(0x387000);
cmd_scrollbar(20, 90, 120, 8, 0, 50, 40, 100);
```

5.28 CMD_BGCOLOR - set the background color



C prototype

```
void cmd_bgcolor( uint32_t c );
```

Parameters

c

New background color, as a 24-bit RGB number. Red is the most significant 8 bits, blue is the least. So 0xff0000 is bright red.

Background color is applicable for things that the user cannot move. Example behind gauges and sliders etc.

Command layout

+0	CMD_BGCOLOR(0xfffff09)
+4	C

Examples

The top scrollbar uses the default background color, the others with a changed color:



```
cmd_scrollbar(20, 30, 120, 8, 0, 10, 40, 100);
```

```
cmd_bgcolor(0x402000);
```

```
cmd_scrollbar(20, 60, 120, 8, 0, 30, 40, 100);
```

```
cmd_bgcolor(0x202020);
```

```
cmd_scrollbar(20, 90, 120, 8, 0, 50, 40, 100);
```


5.29 CMD_GRADCOLOR - set the 3D button highlight color



C prototype

```
void cmd_gradcolor( uint32_t c );
```

Parameters

c

New highlight gradient color, as a 24-bit RGB number. Red is the most significant 8 bits, blue is the least. So 0xff0000 is bright red.

Gradient is supported only for Button and Keys widgets.

Command layout

+0	CMD_GRADCOLOR(0xfffff34)
+4	C

Examples

Changing the gradient color: white (the default), red, green and blue



```
cmd_fgcolor(0x101010);
cmd_button( 2, 2, 76, 56, 31, 0, "W");
cmd_gradcolor(0xff0000);
cmd_button( 82, 2, 76, 56, 31, 0, "R");
cmd_gradcolor(0x00ff00);
cmd_button( 2, 62, 76, 56, 31, 0, "G");
cmd_gradcolor(0x0000ff);
cmd_button( 82, 62, 76, 56, 31, 0, "B");
```

The gradient color is also used for keys:



```
cmd_fgcolor(0x101010);  
cmd_keys(10, 10, 140, 30, 26, 0,  
"abcde");  
cmd_gradcolor(0xff0000);  
cmd_keys(10, 50, 140, 30, 26, 0,  
"fghij");
```

5.30 CMD_GAUGE - draw a gauge



C prototype

```
void cmd_gauge( int16_t x,  
               int16_t y,  
               int16_t r,  
               uint16_t options,  
               uint16_t major,  
               uint16_t minor,  
               uint16_t val,  
               uint16_t range );
```

Parameters

x
X-coordinate of gauge center, in pixels

y
Y-coordinate of gauge center, in pixels

r
Radius of the gauge, in pixels

options

By default the gauge dial is drawn with a 3D effect and the value of options is zero. OPT_FLAT removes the 3D effect. With option OPT_NOBACK, the

background is not drawn. With option OPT_NOTICKS, the tick marks are not drawn. With option OPT_NOPOINTER, the pointer is not drawn.

major

Number of major subdivisions on the dial, 1-10

minor

Number of minor subdivisions on the dial, 1-10

val

Gauge indicated value, between 0 and range, inclusive

range

Maximum value

Description

The details of physical dimension are

- The tick marks are placed on a 270 degree arc, clockwise starting at south-west position
- Minor ticks are lines of width $r*(2/256)$, major $r*(6/256)$
- Ticks are drawn at a distance of $r*(190/256)$ to $r*(200/256)$
- The pointer is drawn with lines of width $r*(4/256)$, to a point $r*(190/256)$ from the center
- The other ends of the lines are each positioned 90 degrees perpendicular to the pointer direction, at a distance $r*(3/256)$ from the center

Refer to [Co-processor engine widgets physical dimensions](#) for more information.

Command layout

+0	CMD_GAUGE(0xffffffff13)
+4	X
+6	Y
+8	R
+10	Options
+12	Major
+14	Minor
+16	Value

+18	Range
-----	-------

Examples

A gauge with radius 50 pixels, five divisions of four ticks each, indicating 30%:



```
cmd_gauge(80, 60, 50, 0, 5, 4, 30, 100);
```

Without the 3D look:



```
cmd_gauge(80, 60, 50, OPT_FLAT, 5, 4, 30, 100);
```

Ten major divisions with two minor divisions each:




```
cmd_gauge(80, 60, 50, 0, 10, 2, 30, 100);
```

Setting the minor divisions to 1 makes them disappear:




```
cmd_gauge(80, 60, 50, 0, 10, 1, 30, 100);
```

Setting the major divisions to 1 gives minor divisions only:

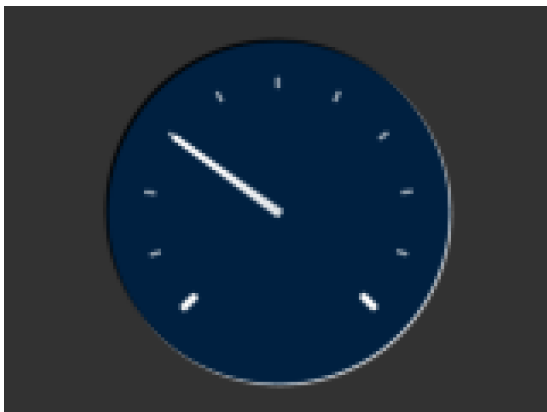

```
cmd_gauge(80, 60, 50, 0, 1, 10, 30, 100);
```

A smaller gauge with a brown background:

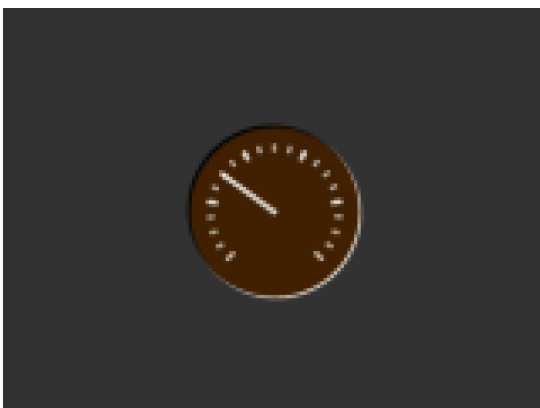

```
cmd_bgcolor(0x402000);  
cmd_gauge(80, 60, 25, 0, 5, 4, 30, 100);
```

Scale 0-1000, indicating 1000:



```
cmd_gauge(80, 60, 50, 0, 5, 2, 1000, 1000);
```

Scaled 0-65535, indicating 49152:




```
cmd_gauge(80, 60, 50, 0, 4, 4, 49152, 65535);
```

No background:



```
cmd_gauge(80, 60, 50, OPT_NOBACK, 4, 4, 49152, 65535);
```

No tick marks:

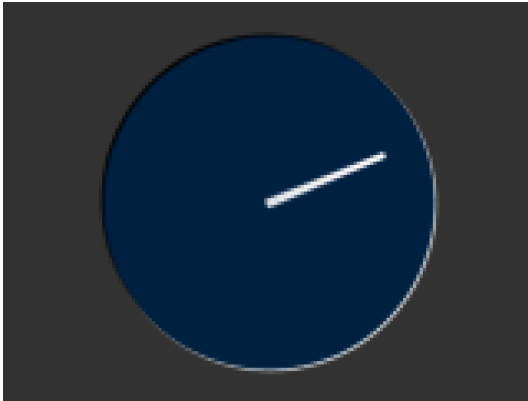


```
cmd_gauge(80, 60, 50, OPT_NOTICKS, 4,
4, 49152, 65535);
```

No pointer:




```
cmd_gauge(80, 60, 50,
OPT_NOPOINTER, 4, 4, 49152, 65535);
```

Drawing the gauge in two passes, with bright red for the pointer:

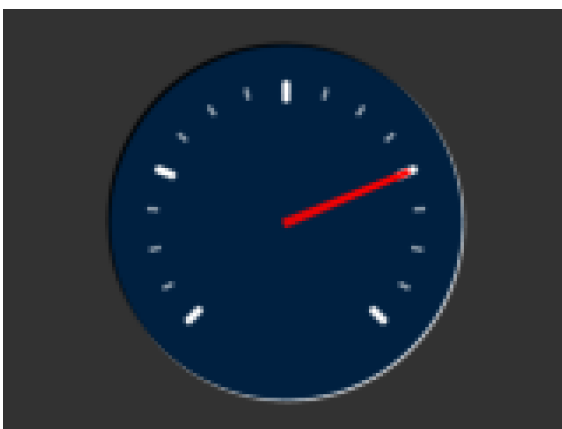


```
GAUGE_0 = OPT_NOPOINTER;
GAUGE_1 = OPT_NOBACK |
OPT_NOTICKS;
cmd_gauge(80, 60, 50, GAUGE_0, 4, 4,
49152, 65535);
cmd(COLOR_RGB(255, 0, 0));
cmd_gauge(80, 60, 50, GAUGE_1, 4, 4,
49152, 65535);
```

Add a custom graphic to the gauge by drawing its background, a bitmap, then its foreground:

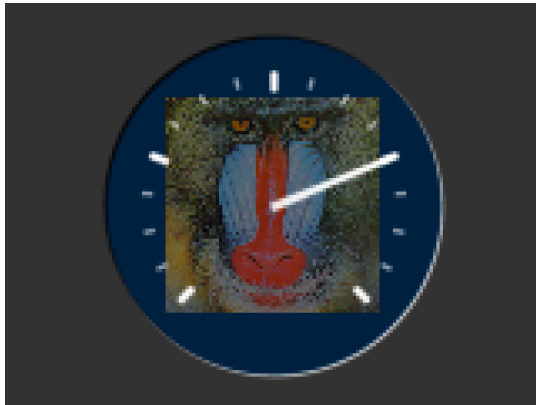

```
GAUGE_0 = OPT_NOPOINTER |
OPT_NOTICKS;
GAUGE_1 = OPT_NOBACK;
cmd_gauge(80, 60, 50, GAUGE_0, 4, 4,
49152, 65535);
cmd(COLOR_RGB(130, 130, 130));
cmd(BEGIN(BITMAPS));
cmd(VERTEX2II(80 - 32, 60 - 32, 0, 0));
cmd(COLOR_RGB(255, 255, 255));
cmd_gauge(80, 60, 50, GAUGE_1, 4, 4,
49152, 65535);
```

5.31 CMD_GRADIENT - draw a smooth color gradient

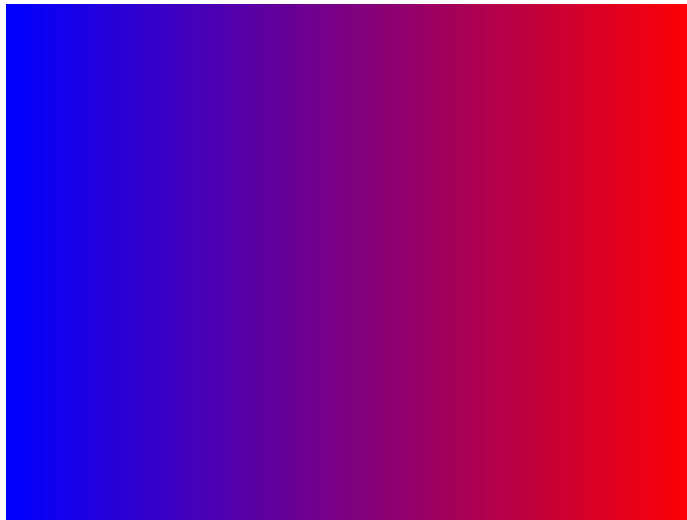

C prototype

```
void cmd_gradient( int16_t x0,  
                  int16_t y0,  
                  uint32_t rgb0,  
                  int16_t x1,  
                  int16_t y1,  
                  uint32_t rgb1 );
```

Parameters

x0

x-coordinate of point 0, in pixels

y0

y-coordinate of point 0, in pixels

rgb0

Color of point 0, as a 24-bit RGB number. R is the most significant 8 bits, B is the least. So 0xff0000 is bright red.

x1

x-coordinate of point 1, in pixels

y1

y-coordinate of point 1, in pixels

rgb1

Color of point 1

Description


All the color's step values are calculated based on smooth curve interpolated from the RGB0 to RGB1 parameter. The smooth curve equation is independently calculated for all three colors and the equation used is $R0 + t * (R1 - R0)$, where t is interpolated between 0 and 1. Gradient must be used with Scissor function to get the intended gradient display.

Command layout

+0	CMD_GRAGIENT(0xfffff0b)
+4	X0
+6	Yo
+8	RGB0
+12	X1
+14	Y1
+16	RGB1

Examples

A horizontal gradient from blue to red

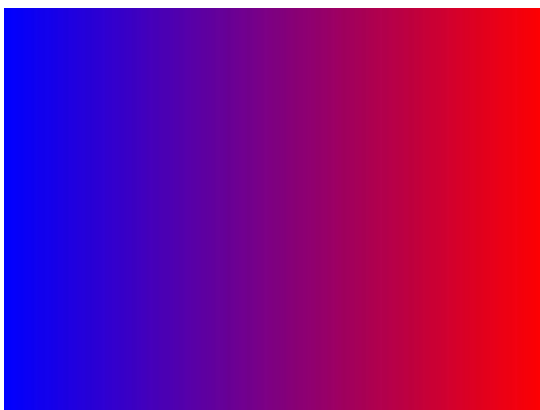


```
cmd_gradient(0, 0, 0x0000ff, 160, 0, 0xff0000);
```

A vertical gradient




```
cmd_gradient(0, 0, 0x808080, 0, 120,  
0x80ff40);
```

The same colors in a diagonal gradient

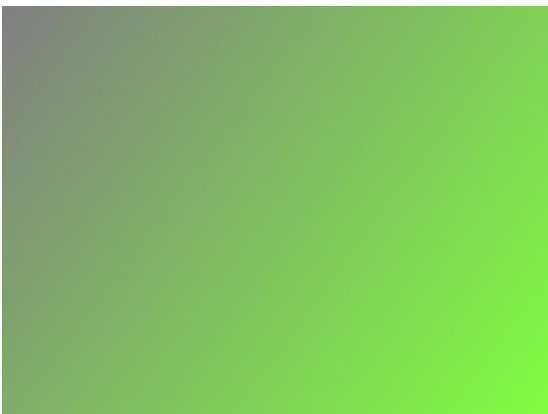


```
cmd_gradient(0, 0, 0x808080, 160, 120,  
0x80ff40);
```

Using a scissor rectangle to draw a gradient stripe as a background for a title:

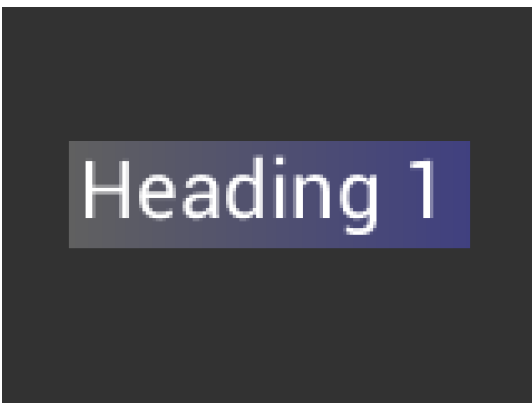

```
cmd(SCISSOR_XY(20, 40));  
cmd(SCISSOR_SIZE(120, 32));  
cmd_gradient(20, 0, 0x606060, 140, 0,  
0x404080);  
cmd_text(23, 40, 29, 0, "Heading 1");
```


5.32 CMD_KEYS - draw a row of keys

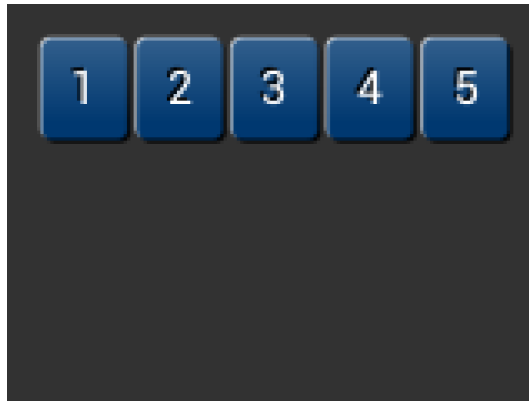

C prototype

```
void cmd_keys( int16_t x,  
              int16_t y,  
              int16_t w,  
              int16_t h,  
              int16_t font,  
              uint16_t options,  
              const char* s );
```

Parameters

x

x-coordinate of keys top-left, in pixels

y

y-coordinate of keys top-left, in pixels

font

Bitmap handle to specify the font used in key label. The valid range is from 0 to 31

options

By default the keys are drawn with a 3D effect and the value of option is zero. OPT_FLAT removes the 3D effect. If OPT_CENTER is given the keys are drawn at minimum size centered within the w x h rectangle. Otherwise the keys are expanded so that they completely fill the available space. If an ASCII code is

specified, that key is drawn 'pressed' - i.e. in background color with any 3D effect removed.

w

The width of the keys

h

The height of the keys

s

key labels, one character per key. The TAG value is set to the ASCII value of each key, so that key presses can be detected using the REG_TOUCH_TAG register.

Description

The details of physical dimension are

- The gap between keys is 3 pixels
- For OPT_CENTERX case, the keys are (font width + 1.5) pixels wide ,otherwise keys are sized to fill available width


Refer to [Co-processor engine widgets physical dimensions](#) for more information.

Command layout

+0	CMD_KEYS(0xffffffff0e)
+4	X
+6	Y
+8	W
+10	H
+12	Font
+14	Options
+16	S
..	..
+n	0

Examples

A row of keys:

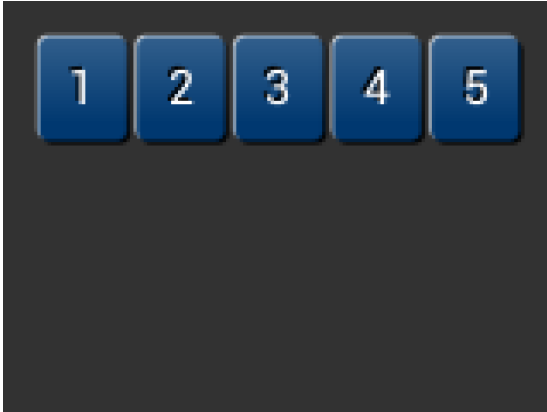


```
cmd_keys(10, 10, 140, 30, 26, 0,
"12345");
```

Without the 3D look:



```
cmd_keys(10, 10, 140, 30, 26,
OPT_FLAT, "12345");
```


Default vs. centered:

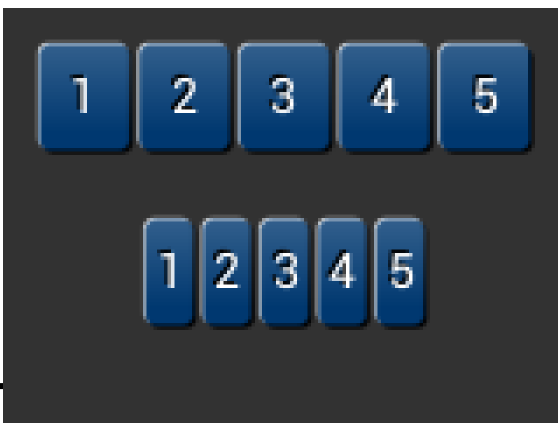

```
cmd_keys(10, 10, 140, 30, 26, 0,
"12345");
```


```
cmd_keys(10, 60, 140, 30, 26,
OPT_CENTER, "12345");
```

Setting the options to show '2' key pressed ('2' is ASCII code 0x32):

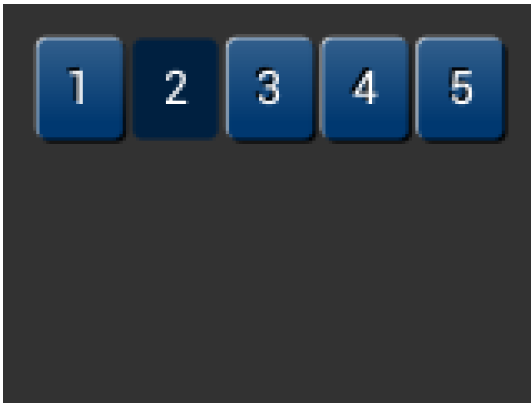


```
cmd_keys(10, 10, 140, 30, 26, 0x32,
"12345");
```

A calculator-style keyboard using font 29:

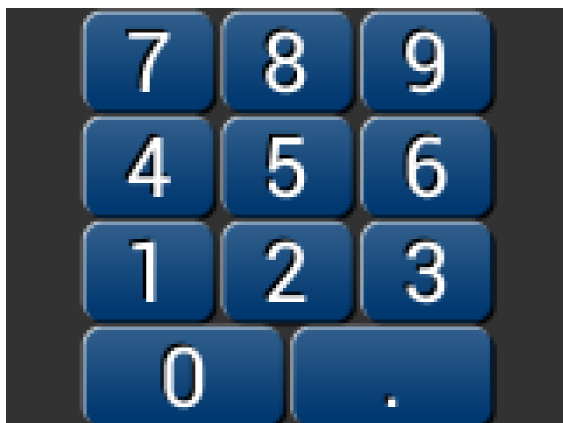


```
cmd_keys(22, 1, 116, 28, 29, 0, "789");
cmd_keys(22, 31, 116, 28, 29, 0, "456");
cmd_keys(22, 61, 116, 28, 29, 0, "123");
cmd_keys(22, 91, 116, 28, 29, 0, "0.");
```

A compact keyboard drawn in font 20:

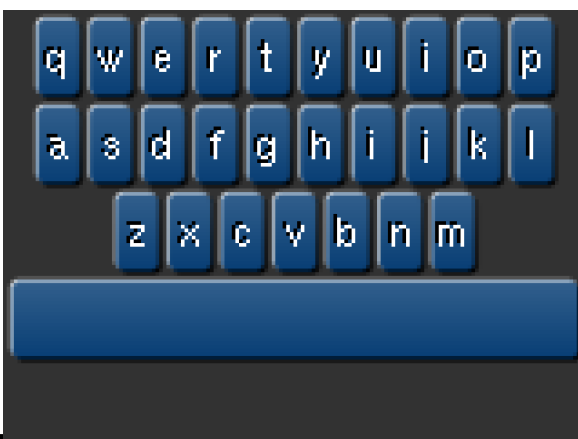

```
cmd_keys(2, 2, 156, 21, 20,
OPT_CENTER, "qwertyuiop");
cmd_keys(2, 26, 156, 21, 20,
OPT_CENTER, "asdfghijkl");
cmd_keys(2, 50, 156, 21, 20,
OPT_CENTER, "zxcvbnm");
cmd_button(2, 74, 156, 21, 20, 0, "");
```

Showing the f (ASCII 0x66) key pressed:

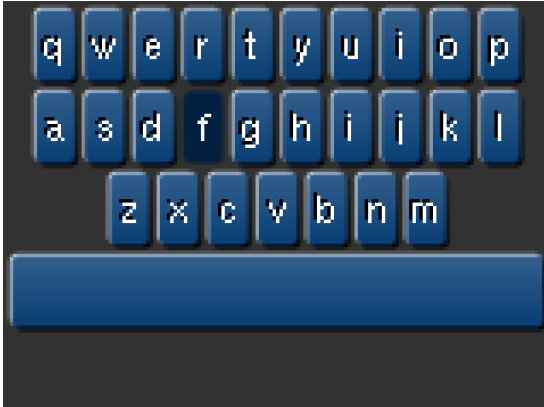

```
k = 0x66;  
cmd_keys(2, 2, 156, 21, 20, k |  
OPT_CENTER, "qwertyuiop");  
cmd_keys(2, 26, 156, 21, 20, k |  
OPT_CENTER, "asdfghijkl");  
cmd_keys(2, 50, 156, 21, 20, k |  
OPT_CENTER, "zxcvbnm");  
cmd_button(2, 74, 156, 21, 20, 0, "");
```

5.33 CMD_PROGRESS - draw a progress bar



C prototype

```
void cmd_progress( int16_t x,  
                  int16_t y,  
                  int16_t w,  
                  int16_t h,  
                  uint16_t options,  
                  uint16_t val,  
                  uint16_t range );
```

Parameters

x

x-coordinate of progress bar top-left, in pixels

y

y-coordinate of progress bar top-left, in pixels

w

width of progress bar, in pixels

h

height of progress bar, in pixels

options

By default the progress bar is drawn with a 3D effect and the value of options is zero. Options OPT_FLAT removes the 3D effect and its value is 256

val

Displayed value of progress bar, between 0 and range inclusive

range

Maximum value

Description

The details of physical dimensions are

- x,y,w,h give outer dimensions of progress bar. Radius of bar (r) is $\min(w,h)/2$
- Radius of inner progress line is $r*(7/8)$

Refer to [Co-processor engine widgets physical dimensions](#) for more information.

Command layout

+0	CMD_PROGRESS(0xffffffff)
+4	X
+6	Y
+8	W
+10	H
+12	options
+14	val
+16	range


Examples

A progress bar showing 50% completion:



```
cmd_progress(20, 50, 120, 12, 0, 50, 100);
```


Without the 3D look:

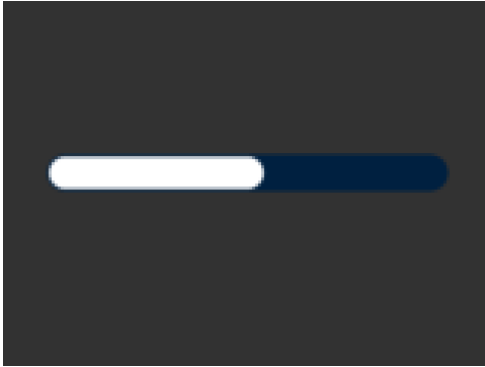


```
cmd_progress(20, 50, 120, 12,  
OPT_FLAT, 50, 100);
```

A 4 pixel high bar, range 0-65535, with a brown background:



```
cmd_bgcolor(0x402000);  
cmd_progress(20, 50, 120, 4, 0, 9000,  
65535);
```

5.34 CMD_SCROLLBAR – draw a scroll bar

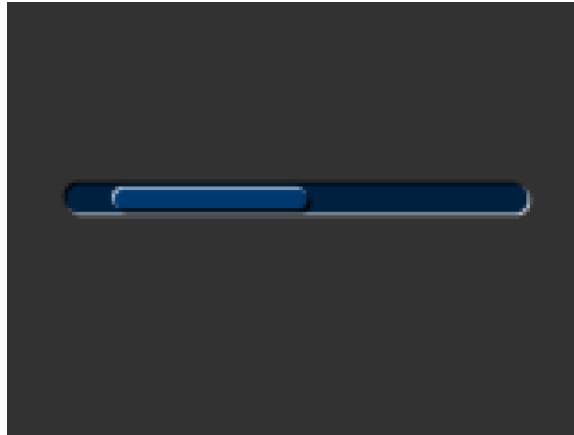

C prototype

```
void cmd_scrollbar( int16_t x,  
                  int16_t y,  
                  int16_t w,  
                  int16_t h,  
                  uint16_t options,  
                  uint16_t val,  
                  uint16_t size,  
                  uint16_t range );
```

Parameters

x

x-coordinate of scroll bar top-left, in pixels

y

y-coordinate of scroll bar top-left, in pixels

w

Width of scroll bar, in pixels. If width is greater than height, the scroll bar is drawn horizontally

h

Height of scroll bar, in pixels. If height is greater than width, the scroll bar is drawn vertically

options

By default the scroll bar is drawn with a 3D effect and the value of options is zero. Options OPT_FLAT removes the 3D effect and its value is 256

val

Displayed value of scroll bar, between 0 and range inclusive

range

Maximum value

Description

Refer to CMD_PROGRESS for more information on physical dimension.

Command layout

+0	CMD_SCROLLBAR(0xffffffff)
+4	X
+6	Y
+8	W
+10	H
+12	options
+14	val
+16	Size
+18	Range


Examples

A scroll bar indicating 10-50%:



```
cmd_scrollbar(20, 50, 120, 8, 0, 10, 40, 100);
```

Without the 3D look:

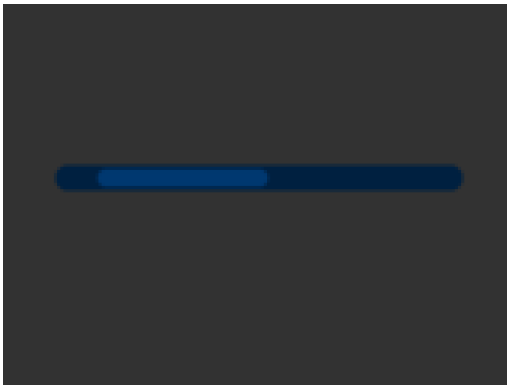


```
cmd_scrollbar(20, 50, 120, 8, OPT_FLAT,  
10, 40, 100);
```

A brown-themed vertical scroll bar:



```
cmd_bgcolor(0x402000);  
cmd_fgcolor(0x703800);  
cmd_scrollbar(140, 10, 8, 100, 0, 10, 40,  
100);
```

5.35 CMD_SLIDER – draw a slider

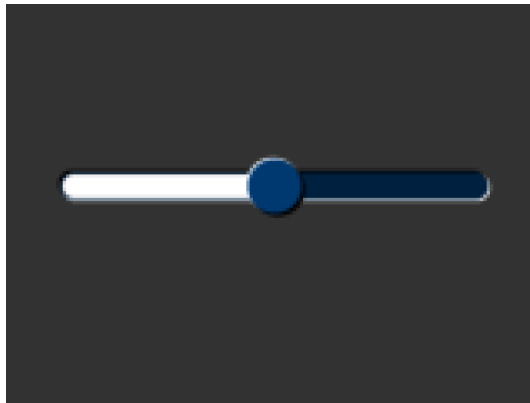

C prototype

```
void cmd_slider( int16_t x,
                int16_t y,
                int16_t w,
                int16_t h,
                uint16_t options,
                uint16_t val,
                uint16_t range );
```

Parameters

x

x-coordinate of slider top-left, in pixels

y

y-coordinate of slider top-left, in pixels

w

width of slider, in pixels. If width is greater than height, the scroll bar is drawn horizontally

h

height of slider, in pixels. If height is greater than width, the scroll bar is drawn vertically

options

By default the slider is drawn with a 3D effect. OPT_FLAT removes the 3D effect

val

Displayed value of slider, between 0 and range inclusive

range

Maximum value

Description


Refer to CMD_PROGRESS for more information on physical Dimension.

Command layout

+0	CMD_SLIDER(0xfffff10)
+4	X
+6	Y
+8	W
+10	H
+12	options
+14	val
+16	Range


Examples

A slider set to 50%:

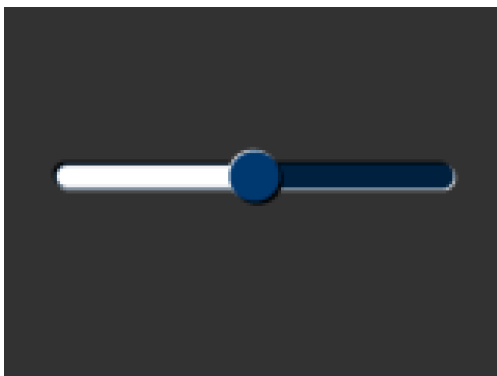


```
cmd_slider(20, 50, 120, 8, 0, 50, 100);
```

Without the 3D look:




```
cmd_slider(20, 50, 120, 8, OPT_FLAT, 50, 100);
```

A brown-themed vertical slider with range 0-65535:

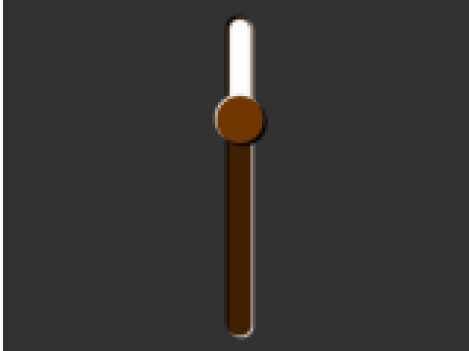

```
cmd_bgcolor(0x402000);  
cmd_fgcolor(0x703800);  
cmd_slider(76, 10, 8, 100, 0, 20000,  
65535);
```

5.36 CMD_DIAL – draw a rotary dial control

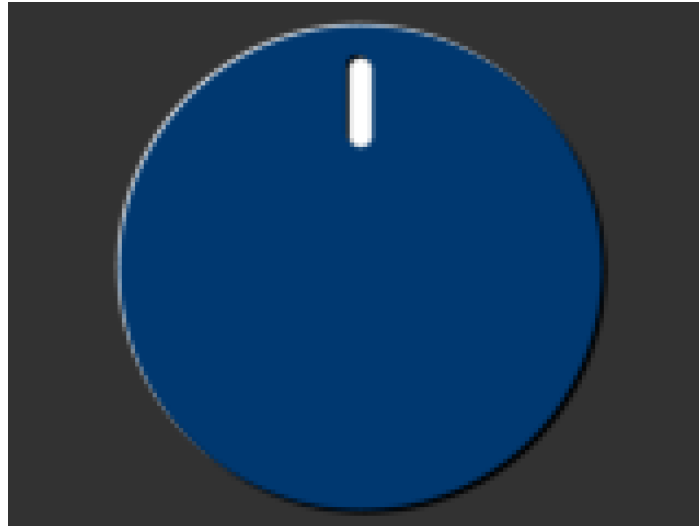

C prototype

```
void cmd_dial( int16_t x,
              int16_t y,
              int16_t r,
              uint16_t options,
              uint16_t val );
```

Parameters

x
x-coordinate of dial center, in pixels

y
y-coordinate of dial center, in pixels

r
radius of dial, in pixels.

Options

By default the dial is drawn with a 3D effect and the value of options is zero. Options OPT_FLAT removes the 3D effect and its value is 256

val

Specify the position of dial points by setting value between 0 and 65535 inclusive. 0 means that the dial points straight down, 0x4000 left, 0x8000 up, and 0xc000 right.

Description

The details of physical dimension are

- The marker is a line of width $r*(12/256)$, drawn at a distance $r*(140/256)$ to $r*(210/256)$ from the center

Refer to [Co-processor engine widgets physical dimensions](#) for more information.

Command layout

+0	CMD_DIAL(0xfffff2d)
+4	X
+6	Y
+8	R
+10	Options
+12	Val


Examples

A dial set to 50%:




```
cmd_dial(80, 60, 55, 0, 0x8000);
```

Without the 3D look:

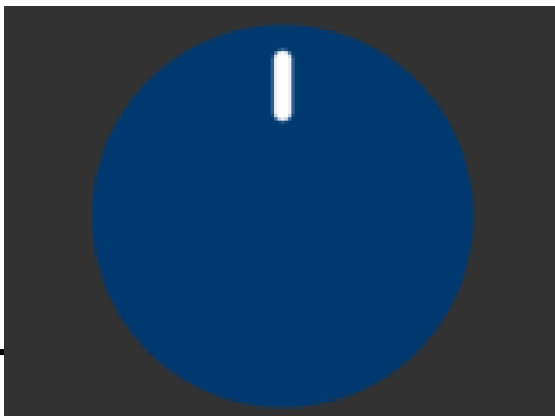


```
cmd_dial(80, 60, 55, OPT_FLAT, 0x8000);
```

Dials set to 0%, 33% and 66%:

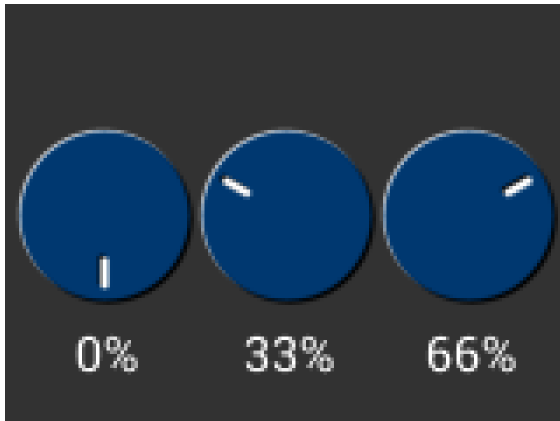

```
cmd_dial(28, 60, 24, 0, 0x0000);  
cmd_text(28, 100, 26, OPT_CENTER,  
"0%");  
cmd_dial(80, 60, 24, 0, 0x5555);  
cmd_text(80, 100, 26, OPT_CENTER,  
"33%");  
cmd_dial(132, 60, 24, 0, 0xaaaa);  
cmd_text(132, 100, 26, OPT_CENTER,  
"66%");
```

5.37 CMD_TOGGLE – draw a toggle switch

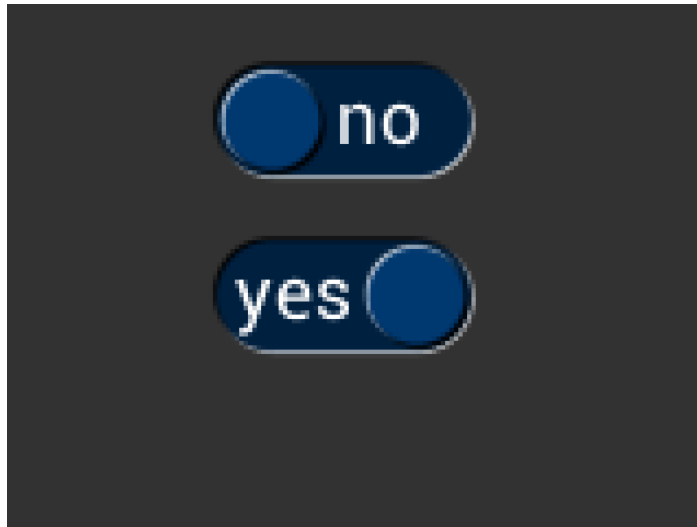

C prototype

```
void cmd_toggle( int16_t x,  
                int16_t y,  
                int16_t w,  
                int16_t font,  
                uint16_t options,  
                uint16_t state,  
                const char* s );
```

Parameters

x

x-coordinate of top-left of toggle, in pixels

y

y-coordinate of top-left of toggle, in pixels

w

width of toggle, in pixels

font

font to use for text, 0-31. See ROM and RAM Fonts

options

By default the toggle is drawn with a 3D effect and the value of options is zero. Options OPT_FLAT removes the 3D effect and its value is 256

state

state of the toggle: 0 is off, 65535 is on.

S

String label for toggle. A character value of 255 (in C it can be written as \xff) separates the two labels.

Description

The details of physical dimension are

- Outer bar radius (r) is font height*(10/16) pixel
- Knob radius is (r-1.5) pixels, where r is the outer radius above
- The center of the outer bar 's left round head is at (x, y + r/2) coordinate


Refer to [Co-processor engine widgets physical dimensions](#) for more information.

Command layout

+0	CMD_TOGGLE(0xffffffff12)
+4	X
+6	Y
+8	W
+10	Font
+12	Options
+14	State
+16	S
..	..
..	0

Examples


Using a medium font, in the two states

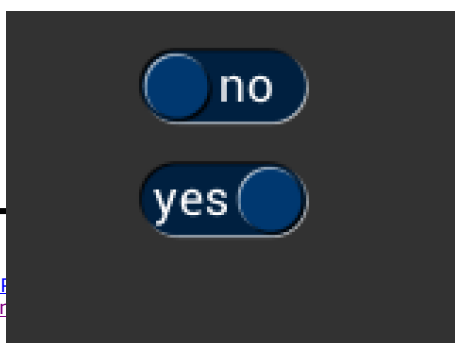

```
cmd_toggle(60, 20, 33, 27, 0, 0, "no" "\xff" "yes");
```

```
cmd_toggle(60, 60, 33, 27, 0, 65535, "no" "\xff" "yes");
```


Without the 3D look

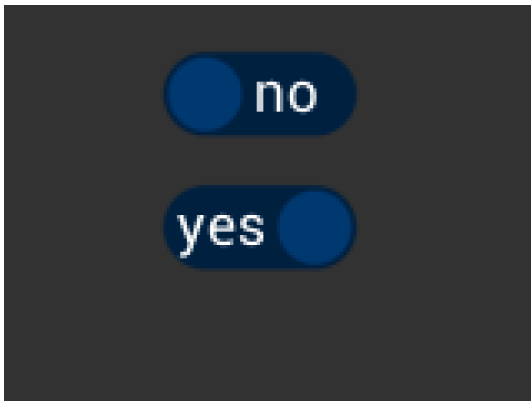

```
cmd_toggle(60, 20, 33, 27, OPT_FLAT, 0, "no" "\xff" "yes");
```

```
cmd_toggle(60, 60, 33, 27, OPT_FLAT, 65535, "no" "\xff" "yes");
```

With different background and foreground colors:

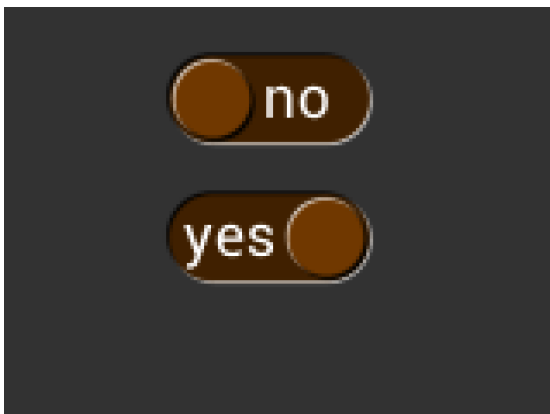

```
cmd_bgcolor(0x402000);
```

```
cmd_fgcolor(0x703800);
```

```
cmd_toggle(60, 20, 33, 27, 0, 0, "no" "\xff" "yes");
```

```
cmd_toggle(60, 60, 33, 27, 0, 65535, "no" "\xff" "yes");
```

5.38 CMD_TEXT - draw text



C prototype

```
void cmd_text( int16_t x,  
              int16_t y,  
              int16_t font,  
              uint16_t options,  
              const char* s );
```

Parameters

x

x-coordinate of text base, in pixels

y

y-coordinate of text base, in pixels

font

Font to use for text, 0-31. See ROM and RAM Fonts

options

By default (x,y) is the top-left pixel of the text and the value of options is zero. OPT_CENTERX centers the text horizontally, OPT_CENTERY centers it vertically. OPT_CENTER centers the text in both directions. OPT_RIGHTX right-justifies the text, so that the x is the rightmost pixel. The value of OPT_RIGHTX is 2048.

Text string


The text string itself which should be terminated by a null character

Command layout

+0	CMD_TEXT(0xfffff0c)
+4	X
+6	Y
+8	Font
+10	Options
+12	S
..	..
..	0 (null character to terminate string)

Examples

Plain text at (0,0) in the largest font:

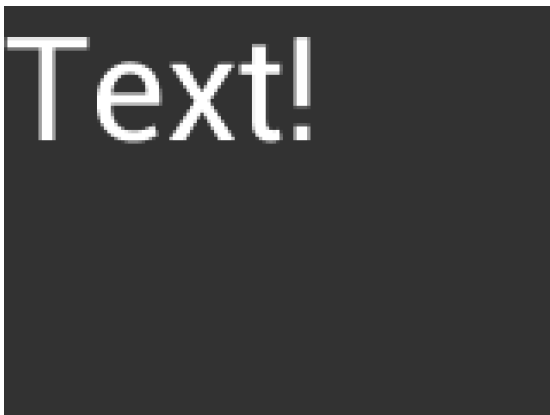


```
cmd_text(0, 0, 31, 0, "Text!");
```

Using a smaller font:




```
cmd_text(0, 0, 26, 0, "Text!");
```

Centered horizontally:

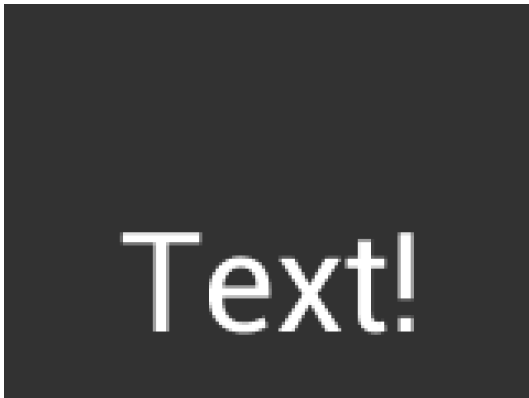


```
cmd_text(80, 60, 31, OPT_CENTERX, "Text!");
```

Right-justified:

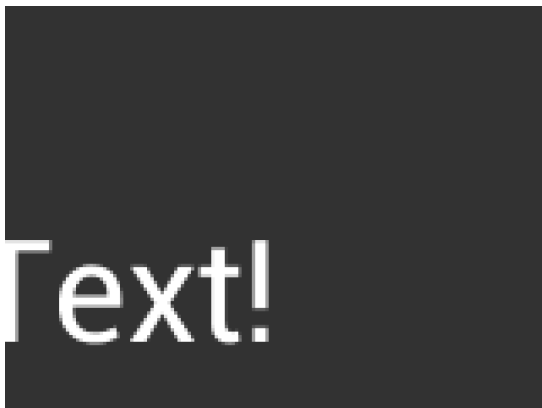

```
cmd_text(80, 60, 31, OPT_RIGHTX, "Text!");
```

Centered vertically:

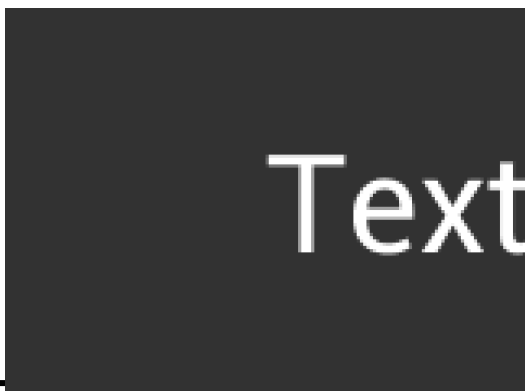


```
cmd_text(80, 60, 31, OPT_CENTERY, "Text!");
```


Centered both horizontally and vertically:



```
cmd_text(80, 60, 31, OPT_CENTER, "Text!");
```

5.39 CMD_NUMBER - draw a decimal number

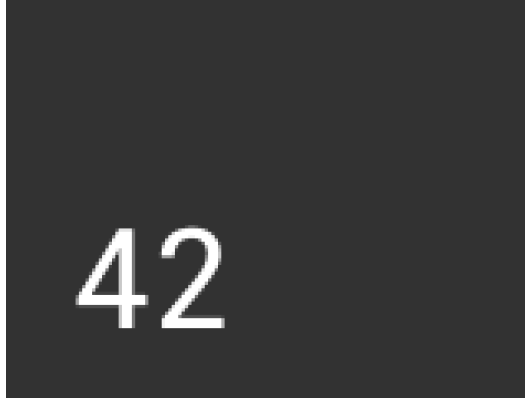

C prototype

```
void cmd_number( int16_t x,  
                int16_t y,  
                int16_t font,  
                uint16_t options,  
                int32_t n );
```

Parameters

x

x-coordinate of text base, in pixels

y

y-coordinate of text base, in pixels

font

font to use for text, 0-31. See ROM and RAM Fonts

options

By default (x,y) is the top-left pixel of the text. OPT_CENTERX centers the text horizontally, OPT_CENTERY centers it vertically. OPT_CENTER centers the text in both directions. OPT_RIGHTX right-justifies the text, so that the x is the rightmost pixel. By default the number is displayed with no leading zeroes, but if a width 1-9 is specified in the options, then the number is padded if necessary with leading zeroes so that it has the given width. If OPT_SIGNED is given, the number is treated as signed, and prefixed by a minus sign if negative.

n


The number to display, either unsigned or signed 32-bit

Command layout

+0	CMD_NUMBER(0xfffff2e)
+4	X
+6	Y
+8	Font
+10	Options
+12	n


Examples

A number:

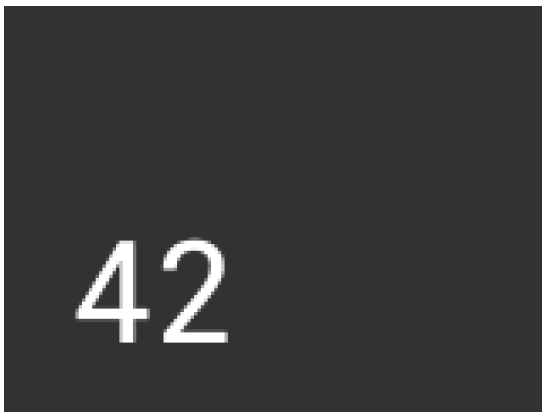


```
cmd_number(20, 60, 31, 0, 42);
```

Centered:

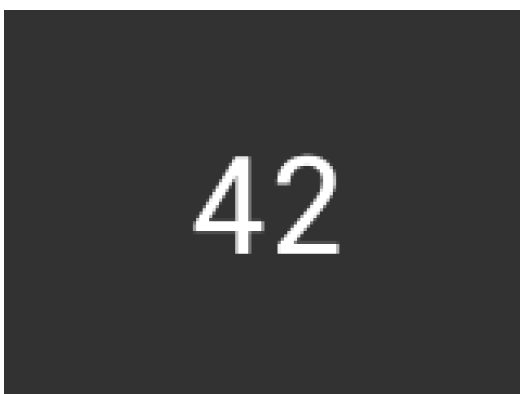


```
cmd_number(80, 60, 31, OPT_CENTER, 42);
```

Signed output of positive and negative numbers:

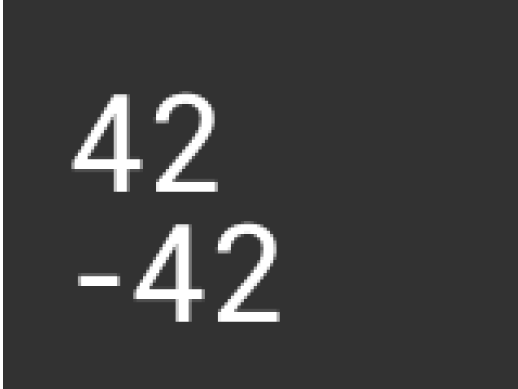42
-42

```
cmd_number(20, 20, 31, OPT_SIGNED, 42);  
cmd_number(20, 60, 31, OPT_SIGNED, -42);
```

Forcing width to 3 digits, right-justified

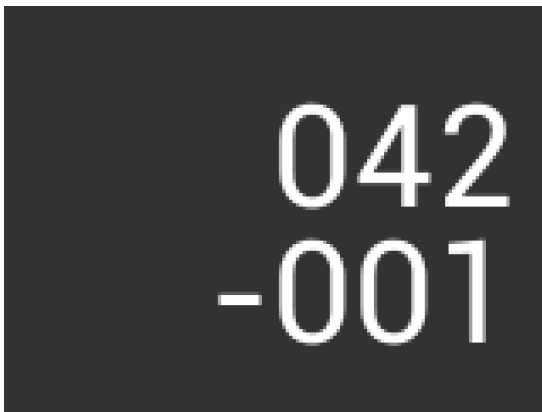042
-001

```
cmd_number(150, 20, 31, OPT_RIGHTX | 3,  
42);  
cmd_number(150, 60, 31, OPT_SIGNED |  
OPT_RIGHTX | 3, -1);
```

CMD_LOADIDENTITY-Y - Set the current matrix to the identity matrix This command instructs the co-processor engine of the FT800 to set the current matrix to the identity matrix, so that co-processor engine is able to form the new matrix as requested by **CMD_SCALE**, **CMD_ROTATE**, **CMD_TRANSLATE** command. For more information on the identity matrix, please see Bitmap transformation matrix section.

C prototype

```
void cmd_loadidentity( );
```

Command layout

+0	CMD_LOADIDENTITY(0xffffffff26)
----	--------------------------------

5.40 CMD_SETMATRIX - write the current matrix to the display list

The co-processor engine assigns the value of the current matrix to the bitmap transform matrix of the graphics engine by generating display list commands, i.e., **BITMAP_TRANSFORM_A-F**. After this command, the following bitmap rendering operation will be affected by the new transform matrix.

C prototype

```
void cmd_setmatrix( );
```

Command layout

+0	CMD_SETMATRIX(0xffffffff2a)
----	-----------------------------

Parameter

None

5.41 CMD_GETMATRIX - retrieves the current matrix coefficients

To retrieve the current matrix within the context of co-processor engine. Please note the matrix within the context of co-processor engine will not apply to the bitmap transformation until it is passed to graphics engine through **CMD_SETMATRIX**.

C prototype

```
void cmd_getmatrix( int32_t a,
```

```
int32_t b,
int32_t c,
int32_t d,
int32_t e,
int32_t f );
```

Parameters

a

output parameter; written with matrix coefficient a. See the parameter a of the command BITMAP_TRANSFORM_A for formatting.

b

output parameter; written with matrix coefficient b. See the parameter b of the command BITMAP_TRANSFORM_B for formatting.

c

output parameter; written with matrix coefficient c. See the parameter c of the command BITMAP_TRANSFORM_C for formatting.

d

output parameter; written with matrix coefficient d. See the parameter d of the command BITMAP_TRANSFORM_D for formatting.

e

output parameter; written with matrix coefficient e. See the parameter e of the command BITMAP_TRANSFORM_E for formatting.

f

output parameter; written with matrix coefficient f. See the parameter f of the command BITMAP_TRANSFORM_F for formatting.

Command layout

+0	CMD_GETMATRIX(0xfffff33)
+4	A
+8	B
+12	C
+16	D
+20	E

+24	F
-----	---

5.42 CMD_GETPTR - get the end memory address of inflated data

C prototype

```
void cmd_getptr( uint32_t result
                );
```

Parameters

result

The end address of decompressed data done by CMD_INFLATE.

The starting address of decompressed data as was specified by CMD_INFLATE, while the end address of decompressed data can be retrieved by this command.

It is one out parameter and can be passed in as any value with CMD_GETPTR to RAM_CMD.

Command layout

+0	CMD_GETPTR (0xfffff23)
+4	result

Examples

```
cmd_inflate(1000); //Decompress the data into RAM_G + 1000
.....           //Following the zlib compressed data
While(rd16(REG_CMD_WRITE) != rd16(REG_CMD_READ)); //Wait till the
compression was done

uint16_t x = rd16(REG_CMD_WRITE);
uint32_t ending_address = 0;
cmd_getptr(0);
ending_address = rd32(RAM_CMD + x + 4);
```

Code snippet 13 CMD_GETPTR command example

5.43 CMD_GETPROPS - get the image properties decompressed by CMD_LOADIMAGE

C prototype

```
void cmd_getprops( uint32_t &ptr, uint32_t &width, uint32_t &height);
```

Parameters

ptr

The address of image in RAM_G which was decompressed by last CMD_LOADIMAGE before this command. It is an output parameter.

width

The width of image which was decompressed by last CMD_LOADIMAGE before this command. It is an output parameter.

height

The height of image which was decompressed by last CMD_LOADIMAGE before this command. It is an output parameter.

Command layout

+0	CMD_GETPROPS (0xfffff25)
+4	ptr
+8	width
+12	Height

Description

This command is used to retrieve properties of image which was decompressed by CMD_LOADIMAGE. All the parameters will be filled out by coprocessor after this command is executed successfully.

Examples

Please refer to the CMD_GETPTR

5.44 CMD_SCALE - apply a scale to the current matrix

C prototype

```
void cmd_scale( int32_t sx,  
               int32_t sy );
```

Parameters

sx

x scale factor, in signed 16. 16 bit fixed-point form.

sy


y scale factor, in signed 16. 16 bit fixed-point form.

Command layout

+0	CMD_SCALE(0xfffff28)
+4	sx
+8	sy


Examples

To zoom a bitmap 2X:

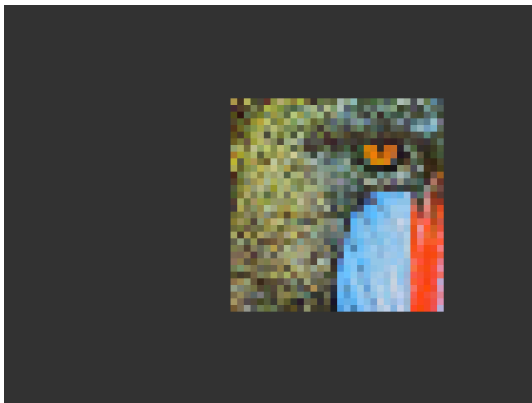

```
cmd(BEGIN(BITMAPS));
cmd_loadidentity();
cmd_scale(2 * 65536, 2 * 65536);
cmd_setmatrix();
cmd(VERTEX2II(68, 28, 0, 0));
```

To zoom a bitmap 2X around its center:

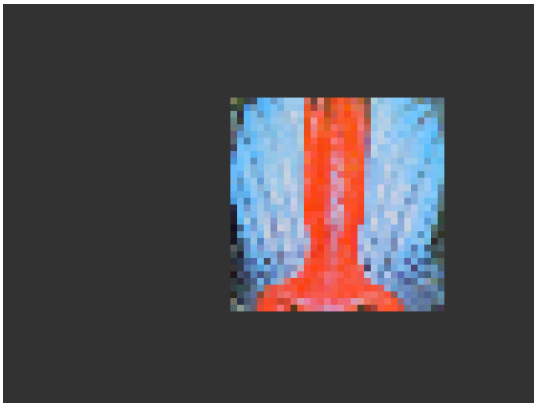

```
cmd(BEGIN(BITMAPS));  
cmd_loadidentity();  
cmd_translate(65536 * 32, 65536 * 32);  
cmd_scale(2 * 65536, 2 * 65536);  
cmd_translate(65536 * -32, 65536 * -  
32);  
cmd_setmatrix();  
cmd(VERTEX2II(68, 28, 0, 0));
```

5.45 CMD_ROTATE - apply a rotation to the current matrix

C prototype

```
void cmd_rotate( int32_t a );
```

Parameters

a


Clockwise rotation angle, in units of 1/65536 of a circle

Command layout

+0	CMD_ROTATE(0xffffffff29)
+4	a


Examples

To rotate the bitmap clockwise by 10 degrees with respect to the top left of the bitmap:

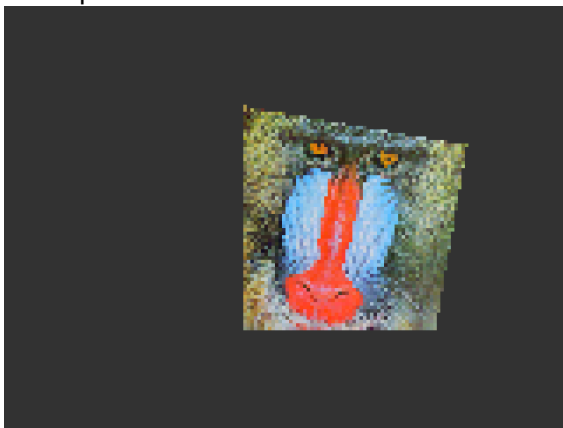


```
cmd(BEGIN(BITMAPS));
cmd_loadidentity();
cmd_rotate(10 * 65536 / 360);
cmd_setmatrix();
cmd(VERTEX2II(68, 28, 0, 0));
```

To rotate the bitmap counter clockwise by 33 degrees wrt top left of the bitmap:

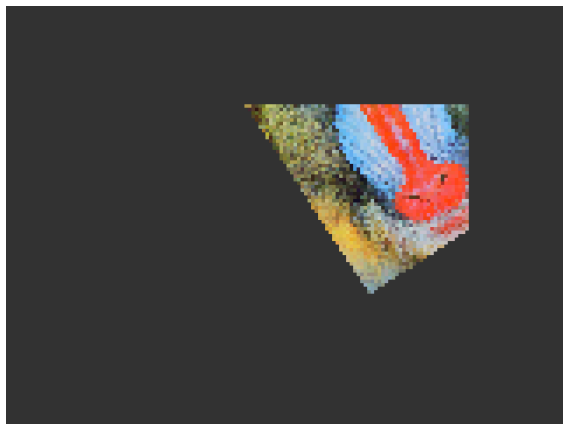

```
cmd(BEGIN(BITMAPS));
cmd_loadidentity();
cmd_rotate(-33 * 65536 / 360);
cmd_setmatrix();
cmd(VERTEX2II(68, 28, 0, 0));
```

Rotating a 64 x 64 bitmap around its center:

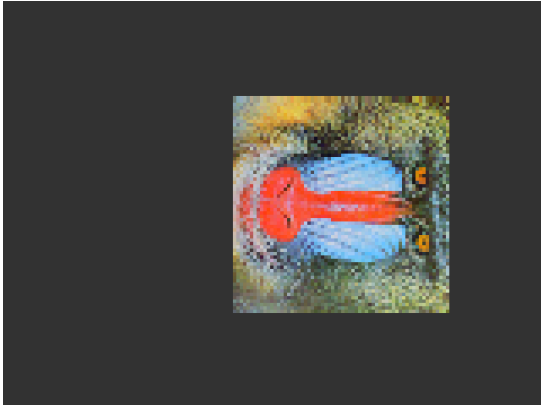

```
cmd(BEGIN(BITMAPS));  
cmd_loadidentity();  
cmd_translate(65536 * 32, 65536 * 32);  
cmd_rotate(90 * 65536 / 360);  
cmd_translate(65536 * -32, 65536 * -  
32);  
cmd_setmatrix();  
cmd(VERTEX2II(68, 28, 0, 0));
```

5.46 CMD_TRANSLATE - apply a translation to the current matrix

C prototype

```
void cmd_translate( int32_t tx,
                  int32_t ty );
```

Parameters

tx

x translate factor, in signed 16.16 bit fixed-point form.

ty


y translate factor, in signed 16.16 bit fixed-point form.

Command layout

+0	CMD_TRANSLATE(0xfffff27)
+4	Tx
+8	Ty


Examples

To translate the bitmap 20 pixels to the right:

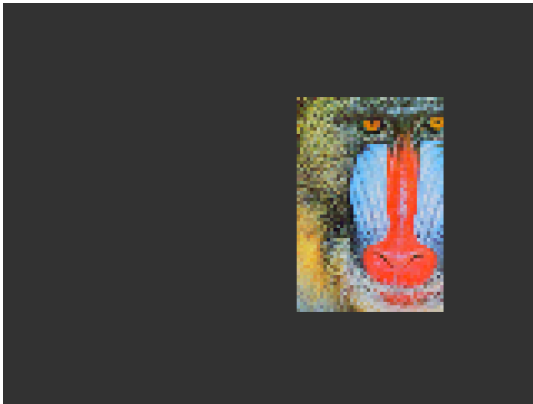

```
cmd(BEGIN(BITMAPS));
cmd_loadidentity();
cmd_translate(20 * 65536, 0);
cmd_setmatrix();
cmd(VERTEX2II(68, 28, 0, 0));
```

To translate the bitmap 20 pixels to the left:

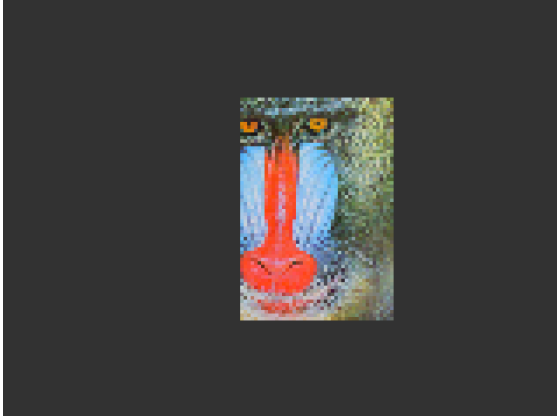

```
cmd(BEGIN(BITMAPS));  
cmd_loadidentity();  
cmd_translate(-20 * 65536, 0);  
cmd_setmatrix();  
cmd(VERTEX2II(68, 28, 0, 0));
```

5.47 CMD_CALIBRATE - execute the touch screen calibration routine

The calibration procedure collects three touches from the touch screen, then computes and loads an appropriate matrix into REG_TOUCH_TRANSFORM_A-F. To use it, create a display list and then use CMD_CALIBRATE. The co-processor engine overlays the touch targets on the current display list, gathers the calibration input and updates REG_TOUCH_TRANSFORM_A-F.

C prototype

```
void cmd_calibrate( uint32_t result );
```

Parameters

result

output parameter; written with 0 on failure of calibration.

The completion of this function is detected when the value of REG_CMD_READ is equal to REG_CMD_WRITE.

Command layout


+0	CMD_CALIBRATE(0xffffffff15)
+4	result

Examples

```
cmd_dlistart();
cmd(CLEAR(1,1,1));
cmd_text(80, 30, 27, OPT_CENTER, "Please tap on the dot");
cmd_calibrate();
```

Code snippet 14 CMD_CALIBRATE example

5.48 CMD_SPINNER - start an animated spinner

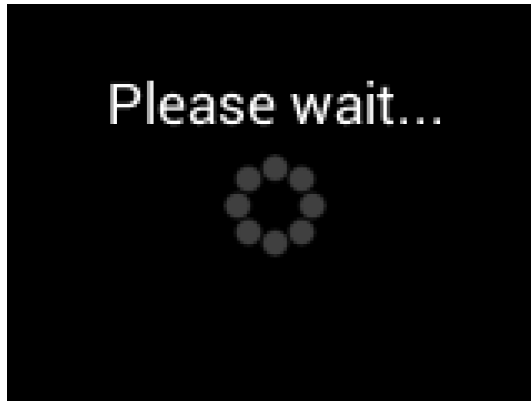

The spinner is an animated overlay that shows the user that some task is continuing. To trigger the spinner, create a display list and then use CMD_SPINNER. The co-processor engine overlays the spinner on the current display list, swaps the display list to make it visible, then continuously animates until it receives CMD_STOP. REG_MACRO_0 and REG_MACRO_1 registers are utilized to perform the animation kind of effect. The frequency of points movement is with respect to the display frame rate configured.

Typically for 480x272 display panels the display rate is ~60fps. For style 0 and 60fps, the point repeats the sequence within 2 seconds. For style 1 and 60fps, the point repeats the sequence within 1.25 seconds. For style 2 and 60fps, the clock hand repeats the sequence within 2 seconds. For style 3 and 60fps, the moving dots repeat the sequence within 1 second.

Note that only one of CMD_SKETCH, CMD_SCREENSAVER, or CMD_SPINNER can be active at one time.

C prototype

```
void cmd_spinner( int16_t x,
                 int16_t y,
                 uint16_t style,
                 uint16_t scale );
```

Command layout

+0	CMD_SPINNER(0xffffffff16)
+4	X
+6	Y
+8	Style
+10	Scale

Parameters

X

The X coordinate of top left of spinner

Y

The Y coordinate of top left of spinner

Style


The style of spinner. Valid range is from 0 to 3.

Scale

The scaling coefficient of spinner. 0 means no scaling.


Examples

Create a display list, then start the spinner:

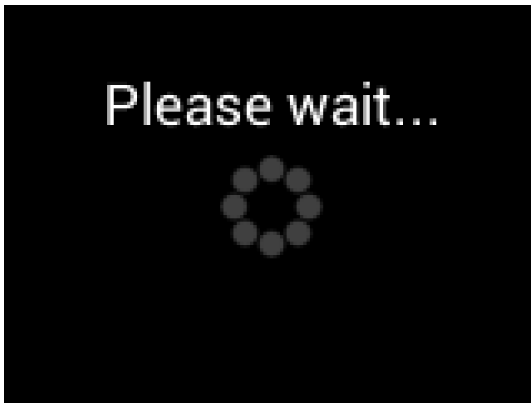


```
cmd_dlstart();  
cmd(CLEAR(1,1,1));  
cmd_text(80, 30, 27, OPT_CENTER, "Please  
wait...");  
cmd_spinner(80, 60, 0, 0);
```

Spinner style 0, a circle of dots:

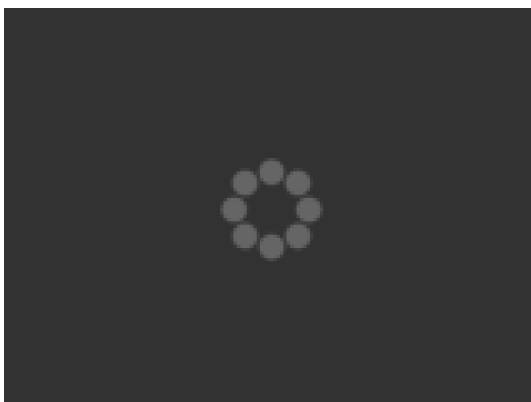


```
cmd_spinner(80, 60, 0, 0);
```

Style 1, a line of dots:

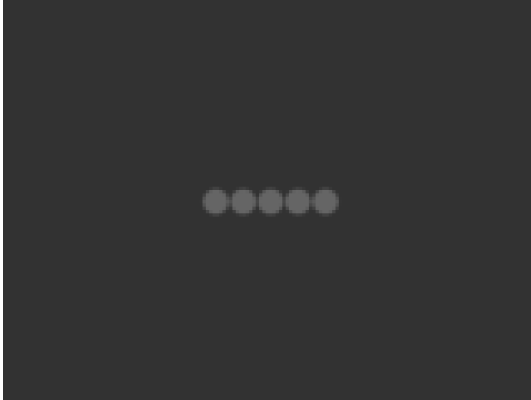


```
cmd_spinner(80, 60, 1, 0);
```

Style 2, a rotating clock hand:

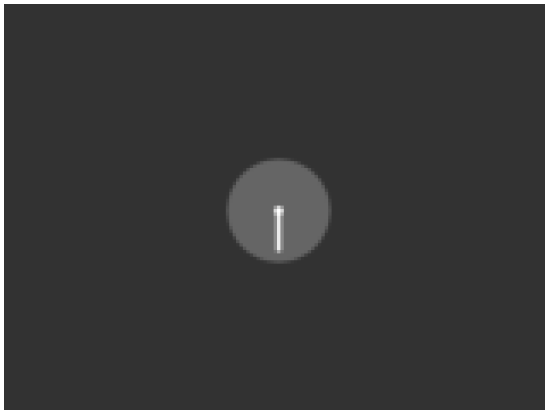


```
cmd_spinner(80, 60, 2, 0);
```

Style 3, two orbiting dots:

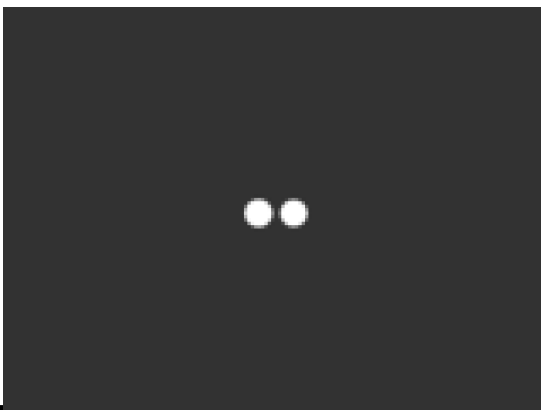


```
cmd_spinner(80, 60, 3, 0);
```

Half screen, scale 1:

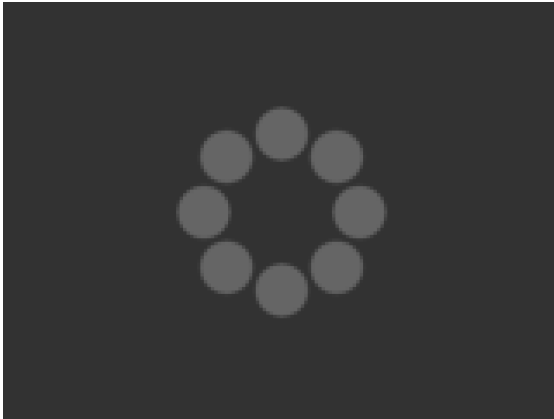

```
cmd_spinner(80, 60, 0, 1);
```

Full screen, scale 2:

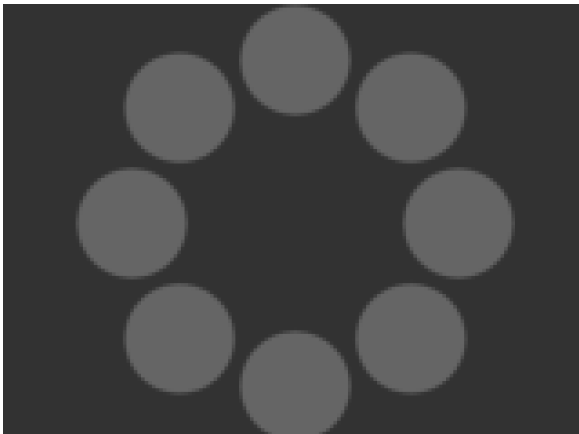

```
cmd_spinner(80, 60, 0, 2);
```

5.49 CMD_SCREENSAVER - start an animated screensaver

After the screensaver command, the co-processor engine continuously updates REG_MACRO_0 with VERTEX2F with varying (x,y) coordinates. With an appropriate display list, this causes a bitmap to move around the screen without any MCU work. Command CMD_STOP stops the update process.

Note that only one of CMD_SKETCH, CMD_SCREENSAVER, or CMD_SPINNER can be active at one time.

C prototype

```
void cmd_screensaver( );
```

Description

REG_MACRO_0 is updated with respect to frequency of frames displayed (depending on the display registers configuration). Typically for 480x272 display the frame rate is around 60 frame per second.

Command layout

+0	CMD_SCREENSAVER(0xffffffff2f)
----	-------------------------------


Examples

To start the screensaver, create a display list using a MACRO instruction – the co-processor engine will update it continuously:

```
cmd_screensaver ();
cmd (BITMAP_SOURCE (0));
cmd (BITMAP_LAYOUT (RGB565, 128, 64));
cmd (BITMAP_SIZE (NEAREST, BORDER, BORDER, 40, 30));
cmd (BEGIN (BITMAPS));
cmd (MACRO (0));
cmd (DISPLAY ());
```

Code snippet 15 CMD_SCREENSAVER example

Here is the result:

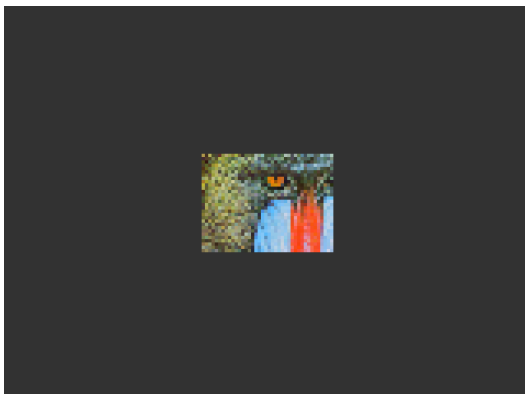

5.50 CMD_SKETCH - start a continuous sketch update

After the sketch command, the co-processor engine continuously samples the touch inputs and paints pixels into a bitmap, according to the touch (x, y). This means that the user touch inputs are drawn into the bitmap without any need for MCU work. Command CMD_STOP stops the sketch process.

Note that only one of CMD_SKETCH, CMD_SCREENSAVER, or CMD_SPINNER can be active at one time.

This command is applicable for FT800 and FT801 users is recommended to use CMD_CSKETCH since the optimization has been done for capacitive touch.

C prototype

```
void cmd_sketch( int16_t x,  
                int16_t y,  
                uint16_t w,  
                uint16_t h,  
                uint32_t ptr,  
                uint16_t format );
```

Parameters

x

x-coordinate of sketch area top-left, in pixels

y

y-coordinate of sketch area top-left, in pixels

w

Width of sketch area, in pixels

h

Height of sketch area, in pixels

ptr

Base address of sketch bitmap

format

Format of sketch bitmap, either L1 or L8

Description

Please note that update frequency of bitmap data in graphics memory depends on sampling frequency of ADC built-in circuit of FT800, which is up to 1000 Hz.

Command layout

+0	CMD_SKETCH(0xfffff30)
+4	X
+6	Y
+8	W
+10	H
+12	Ptr
+16	Format

Examples

To start sketching into a 480x272 L1 bitmap:

```
cmd_memzero(0, 480 * 272 / 8);
cmd_sketch(0, 0, 480, 272, 0, L1);

//Then to display the bitmap
cmd(BITMAP_SOURCE(0));
cmd(BITMAP_LAYOUT(L1, 60, 272));
cmd(BITMAP_SIZE(NEAREST, BORDER, BORDER, 480, 272));
cmd(BEGIN(BITMAPS));
cmd(VERTEX2II(0, 0, 0, 0));

//Finally, to stop sketch updates
cmd_stop();
```

Code snippet 16 CMD_SKETCH example

5.51 CMD_STOP - stop any of spinner, screensaver or sketch

This command is to inform the co-processor engine to stop the periodic operation, which is triggered by CMD_SKETCH , CMD_SPINNER or CMD_SCREENSAVER.

C prototype

```
void cmd_stop( );
```

Command layout

+0	CMD_STOP(0xffffffff)
----	----------------------

Parameters

None

Description

For CMD_SPINNER and CMD_SCREENSAVER, REG_MACRO_0 and REG_MACRO_1 will be stopped updating.

For CMD_SKETCH or CMD_CSKETCH, the bitmap data in RAM_G will be stopped updating.

Examples

See CMD_SKETCH, CMD_CSKETCH, CMD_SPINNER, CMD_SCREENSAVER

5.52 CMD_SETFONT - set up a custom font

CMD_SETFONT is used to register one custom defined bitmap font into the FT800 co-processor engine. After registration, the FT800 co-processor engine is able to use the bitmap font with its co-processor command.

About the details about how to set up custom font, please refer to ROM and RAM Fonts.

C prototype

```
void cmd_setfont( uint32_t font,
                 uint32_t ptr );
```

Command layout

+0	CMD_SETFONT(0xffffffff2b)
+4	font
+8	ptr

Parameters

font

The bitmap handle from 0 to 14. Bitmap handle 15 can be used conditionally. Please see 4.6

ptr

The metric block address in RAM. 4 bytes aligned is required.

Examples

With a suitable font metric block loaded in RAM at address 1000, to set it up for use with objects as font 7:

```
cmd_setfont(7, 1000);
cmd_button(20, 20, // x,y
           120, 40, // width,height in pixels
           7, // font 7, just loaded
           0, // default options,3D style
           "custom font!");
```

Code snippet 17 CMD_SETFONT example

5.53 CMD_TRACK - track touches for a graphics object

This command will enable co-processor engine to track the touch on the particular graphics object with one valid tag value assigned. Then, co-processor engine will update the REG_TRACKER periodically with the frame rate of LCD display panel.

Co-processor engine tracks the graphics object in rotary tracker mode and linear tracker mode:

- rotary tracker mode – Track the angle between the touching point and the center of graphics object specified by tag value. The value is in units of 1/65536 of a circle. 0 means that the angle is straight down, 0x4000 left, 0x8000 up, and 0xC000 right from the center.
- Linear tracker mode – If parameter w is greater than h, track the relative distance of touching point to the width of graphics object specified by tag value. If parameter w is not greater than h, Track the relative distance of touching point to the height of graphics object specified by tag value. The value is in units of 1/65536 of the width or height of graphics object. The distance of touching point refers to the distance from the top left pixel of graphics object to the coordinate of touching point.

C prototype

```
void cmd_track( int16_t x,  
               int16_t y,  
               int16_t w,  
               int16_t h,  
               int16_t tag );
```

Parameters

x

For linear tracker functionality, x-coordinate of track area top-left, in pixels.
For rotary tracker functionality, x-coordinate of track area center, in pixels.

y

For linear tracker functionality, y-coordinate of track area top-left, in pixels.
For rotary tracker functionality, y-coordinate of track area center, in pixels.

w

Width of track area, in pixels.

h

Height of track area, in pixels.

Please note:

A w and h of (1,1) means that the tracker is rotary, and reports an angle value in REG_TRACKER. A w and h of (0,0) disables the track functionality of co-processor engine.

tag


tag of the graphics object to be tracked, 1-255

Command layout

+0	CMD_TRACK(0xffffffff2c)
+4	X
+6	Y
+8	W
+10	h
+12	tag

Examples

Horizontal track of rectangle dimension 40x12pixels and the present touch is at 50%:




```

dl( CLEAR_COLOR_RGB(5, 45, 110) );
dl( COLOR_RGB(255, 168, 64) );
dl( CLEAR(1 ,1 ,1) );
dl( BEGIN(RECTS) );
dl( VERTEX2F(60 * 16,50 * 16) );
dl( VERTEX2F(100 * 16,62 * 16) );
dl( COLOR_RGB(255, 0, 0) );
dl( VERTEX2F(60 * 16,50 * 16) );
dl( VERTEX2F(80 * 16,62 * 16) );
dl( COLOR_MASK(0 ,0 ,0 ,0) );
dl( TAG(1) );
dl( VERTEX2F(60 * 16,50 * 16) );
dl( VERTEX2F(100 * 16,62 * 16) );
cmd_track(60 * 16, 50 * 16, 40, 12, 1);

```

Vertical track of rectangle dimension 12x40 pixels and the present touch is at 50%:




```

dl( CLEAR_COLOR_RGB(5, 45, 110) );
dl( COLOR_RGB(255, 168, 64) );
dl( CLEAR(1 ,1 ,1) );
dl( BEGIN(RECTS) );
dl( VERTEX2F(70 * 16,40 * 16) );
dl( VERTEX2F(82 * 16,80 * 16) );
dl( COLOR_RGB(255, 0, 0) );
dl( VERTEX2F(70 * 16,40 * 16) );
dl( VERTEX2F(82 * 16,60 * 16) );
dl( COLOR_MASK(0 ,0 ,0 ,0) );
dl( TAG(1) );
dl( VERTEX2F(70 * 16,40 * 16) );
dl( VERTEX2F(82 * 16,80 * 16) );
cmd_track(70 * 16, 40 * 16, 12, 40, 1);

```

Circular track centered at (80,60) display location

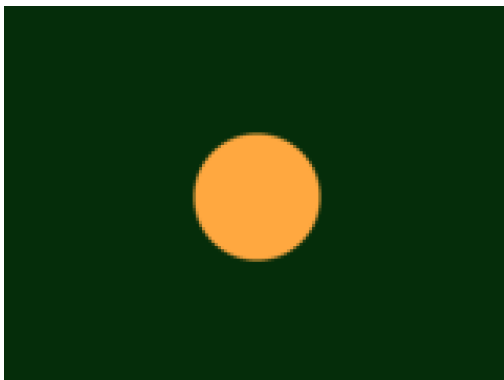

```

dl( CLEAR_COLOR_RGB(5, 45, 110) );
dl( COLOR_RGB(255, 168, 64) );
dl( CLEAR(1 ,1 ,1) );
dl( TAG(1) );
dl( BEGIN(POINTS) );
dl( POINT_SIZE(20 * 16) );
dl( VERTEX2F(80 * 16, 60 * 16) );
cmd_track(80 * 16, 60 * 16, 1, 1, 1);


```

To draw a dial with tag 33 centered at (80, 60), adjustable by touch:



```
uint16_t angle = 0x8000;
cmd_track(80, 60, 1, 1, 33);
while (1) {
...
cmd(TAG(33));
cmd_dial(80, 60, 55, 0, angle);
...
uint32_t tracker = rd32(REG_TRACKER);
if ((tracker & 0xff) == 33)
angle = tracker >> 16;
...
}
```

To make an adjustable slider with tag 34:

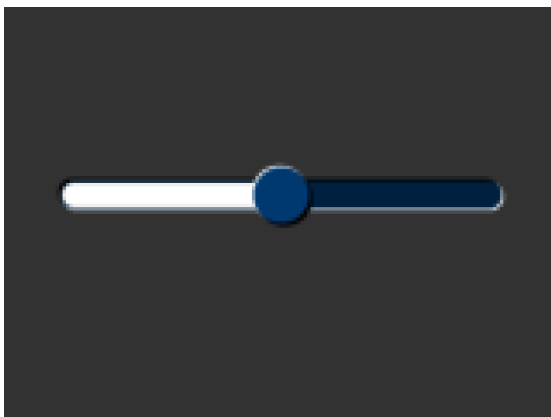

```
uint16_t val = 0x8000;
cmd_track(20, 50, 120, 8, 34);
while (1) {
...
cmd(TAG(34));
cmd_slider(20, 50, 120, 8, val, 65535);
...
uint32_t tracker = rd32(REG_TRACKER);
if ((tracker & 0xff) == 33)
val = tracker >> 16;
...
}
```

5.54 CMD_SNAPSHOT - take a snapshot of the current screen

This command causes the co-processor engine to take a snapshot of the current screen, and write the result into RAM_G as a ARGB4 bitmap. The size of the bitmap is the size of the screen, given by the REG_HSIZE and REG_VSIZE registers.

During the snapshot process, the display should be disabled by setting REG_PCLK to 0 to avoid display glitch.

Because co-processor engine needs to write the result into the destination address, the destination address must be never used or referenced by graphics engine.

C prototype

```
void cmd_snapshot( uint32_t ptr );
```

Parameters

ptr

Snapshot destination address, in RAM_G

Command layout

+0	CMD_SNAPSHOT(0xffffffff)
+4	ptr

Examples

To take a snapshot of the current 160 x 120 screen, then use it as a bitmap in the new display list:

```
wr(REG_PCLK,0); //Turn off the PCLK
wr16(REG_HSIZE,120);
wr16(REG_WSIZE,160);

cmd_snapshot(0); //Taking snapshot.

wr(REG_PCLK,5); //Turn on the PCLK
wr16(REG_HSIZE,272);
wr16(REG_WSIZE,480);

cmd_dlstart();
cmd(CLEAR(1,1,1));
cmd(BITMAP_SOURCE(0));
cmd(BITMAP_LAYOUT(ARGB4, 2 * 160, 120));
cmd(BITMAP_SIZE(NEAREST, BORDER, BORDER, 160, 120));
cmd(BEGIN(BITMAPS));
cmd(VERTEX2II(10, 10, 0, 0));
```

Code snippet 18 CMD_SNAPSHOT 160x120-screen

5.55 CMD_LOGO - play FTDI logo animation



The logo command causes the co-processor engine to play back a short animation of the FTDI logo. During logo playback the MCU should not access any FT800 resources. After 2.5 seconds have elapsed, the co-processor engine writes zero to REG_CMD_READ and REG_CMD_WRITE, and starts waiting for commands. After this command is complete, the MCU shall write the next command to the starting address of RAM_CMD.

C prototype

```
void cmd_logo( );
```

Command layout

+0	CMD_LOGO(0xfffff31)
----	---------------------

Examples

To play back the logo animation:

```
cmd_logo();
delay(3000); // Optional to wait
While( (0 != rd16(REG_CMD_WRITE)) &&
        (rd16(REG_CMD_WRITE) != rd16(REG_CMD_READ) )); //Wait till both
read & write pointer register are equal to zero
```

Code snippet 19 CMD_LOGO command example

6.4 Register summary

Table 13 Touch Registers map table

FT801- C Mode	FT801 – E Mode	Default Value (C Mode)	Default Value (Extend Mode)	FT800	Default Value	Address	Bit width
REG_CTOUCH_EXTEND	REG_CTOUCH_EXTEND	0x1	0x0	REG_TOUCH_ADC_MODE	0x01	1058036	4 bytes
REG_CTOUCH_TOUCH0_XY	REG_CTOUCH_TOUCH0_XY	0x80008000	0x80008000	REG_TOUCH_SCREEN_XY	0x80008000	1058064	4 bytes
REG_CTOUCH_RAW_XY	REG_CTOUCH_TOUCH1_XY	0xFFFFFFFF	0x80008000	REG_TOUCH_RAW_XY	0xFFFFFFFF	1058056	4 bytes
NA	REG_CTOUCH_TOUCH2_XY	0x0	0x80008000	REG_TOUCH_DIRECT_XY	0x0	1058164	4 bytes
NA	REG_CTOUCH_TOUCH3_XY	NA	0x80008000	REG_TOUCH_DIRECT_Z1Z2	NA	1058168	4 bytes
NA	REG_CTOUCH_TOUCH4_X	0x0	0x8000	REG_ANALOG	0x0	1058104	2 bytes
NA	REG_CTOUCH_TOUCH4_Y	0x7FFF	0x8000	REG_TOUCH_RZ	0x7FFF	1058060	2 bytes
REG_CTOUCH_TRANSFORM_A	REG_CTOUCH_TRANSFORM_A	0x10000	0x10000	REG_TOUCH_TRANSFORM_M_A	0x10000	1058076	4 bytes
REG_CTOUCH_TRANSFORM_B	REG_CTOUCH_TRANSFORM_B	0x0	0x0	REG_TOUCH_TRANSFORM_M_B	0x0	1058080	4 bytes
REG_CTOUCH_TRANSFORM_C	REG_CTOUCH_TRANSFORM_C	0x0	0x0	REG_TOUCH_TRANSFORM_M_C	0x0	1058084	4 bytes
REG_CTOUCH_TRANSFORM_D	REG_CTOUCH_TRANSFORM_D	0x0	0x0	REG_TOUCH_TRANSFORM_M_D	0x0	1058088	4 bytes
REG_CTOUCH_TRANSFORM_E	REG_CTOUCH_TRANSFORM_E	0x10000	0x10000	REG_TOUCH_TRANSFORM_M_E	0x10000	1058092	4 bytes
REG_CTOUCH_TRANSFORM_F	REG_CTOUCH_TRANSFORM_F	0x0	0x0	REG_TOUCH_TRANSFORM_M_F	0x0	1058096	4 bytes
REG_CTOUCH_TAG	REG_CTOUCH_TAG	0x0	0x0	REG_TOUCH_TAG	0x0	1058072	4 bytes
Note: C Mode: Compatibility Mode, default mode after FT801 reset E Mode: Extended Mode							

6.5 Calibration

Calibration process initiated by CMD_CALIBRATE is only available in the compatibility mode. However, the results of calibration process are applicable to both compatibility mode and extended mode. As such, users are recommended to finish the calibration process before entering into extended mode.

After calibration process is done, the registers REG_CTOUCH_TRANSFORM_A~F will be updated as coefficient of transformation matrix.

6.6 CMD_CSKETCH – Capacitive touch specific sketch

This command has the same functionality as CMD_SKETCH except it has done the optimization for a capacitive touch panel. Because capacitive touch panels have lower sampling frequencies (around 100Hz) to report the coordinates, the sketch functionality updates less frequently compared to resistive touch. CMD_CSKETCH introduces a linear interpolation algorithm to provide a smoother effect when drawing the output line.

Please note this command is not applicable to FT800 silicon.

C prototype

```
void cmd_cs sketch( int16_t x,
                  int16_t y,
                  uint16_t w,
                  uint16_t h,
                  uint32_t ptr,
                  uint16_t format,
                  uint16_t freq);
```

Command layout

+0	CMD_CSKETCH(0xfffff35)
+4	X
+6	Y
+8	W
+10	H
+12	Ptr
+16	Format
+18	Freq

Parameters

- x**
x-coordinate of sketch area top-left, in pixels
- y**
y-coordinate of sketch area top-left, in pixels
- w**

Width of sketch area, in pixels

h

Height of sketch area, in pixels

ptr

Base address of sketch bitmap

format

Format of sketch bitmap, either L1 or L8

freq

The oversampling frequency. The typical value is 1500 to make sure the lines are connected smoothly. The value zero means no oversampling operation.

Description

This command is only valid for FT801 silicon. FT801 co-processor will oversample the coordinates reported by the capacitive touch panel in the frequency of 'freq' and forms the lines with a smoother effect.

Examples

Check the CMD_SKETCH example

7 Contact Information

Head Quarters – Singapore

Bridgetek Pte Ltd
178 Paya Lebar Road, #07-03
Singapore 409030
Tel: +65 6547 4827
Fax: +65 6841 6071

E-mail (Sales) sales.apac@brtchip.com
E-mail (Support) support.apac@brtchip.com

Branch Office – Taipei, Taiwan

Bridgetek Pte Ltd, Taiwan Branch
2 Floor, No. 516, Sec. 1, Nei Hu Road, Nei Hu District
Taipei 114
Taiwan, R.O.C.
Tel: +886 (2) 8797 5691
Fax: +886 (2) 8751 9737

E-mail (Sales) sales.apac@brtchip.com
E-mail (Support) support.apac@brtchip.com

Branch Office - Glasgow, United Kingdom

Bridgetek Pte. Ltd.
Unit 1, 2 Seaward Place, Centurion Business Park
Glasgow G41 1HH
United Kingdom
Tel: +44 (0) 141 429 2777
Fax: +44 (0) 141 429 2758

E-mail (Sales) sales.emea@brtchip.com
E-mail (Support) support.emea@brtchip.com

Branch Office – Vietnam

Bridgetek VietNam Company Limited
Lutaco Tower Building, 5th Floor, 173A Nguyen Van
Troï,
Ward 11, Phu Nhuan District,
Ho Chi Minh City, Vietnam
Tel : 08 38453222
Fax : 08 38455222

E-mail (Sales) sales.apac@brtchip.com
E-mail (Support) support.apac@brtchip.com

Web Site

<http://brtchip.com/>

Distributor and Sales Representatives

Please visit the Sales Network page of the [Bridgetek Web site](#) for the contact details of our distributor(s) and sales representative(s) in your country.

System and equipment manufacturers and designers are responsible to ensure that their systems, and any Future Technology Devices International Ltd (FTDI) devices incorporated in their systems, meet all applicable safety, regulatory and system-level performance requirements. All application-related information in this document (including application descriptions, suggested FTDI devices and other materials) is provided for reference only. While FTDI has taken care to assure it is accurate, this information is subject to customer confirmation, and FTDI disclaims all liability for system designs and for any applications assistance provided by FTDI. Use of FTDI devices in life support and/or safety applications is entirely at the user's risk, and the user agrees to defend, indemnify and hold harmless FTDI from any and all damages, claims, suits or expense resulting from such use. This document is subject to change without notice. No freedom to use patents or other intellectual property rights is implied by the publication of this document. Neither the whole nor any part of the information contained in, or the product described in this document, may be adapted or reproduced in any material or electronic form without the prior written consent of the copyright holder. Future Technology Devices International Ltd, Unit 1, 2 Seaward Place, Centurion Business Park, Glasgow G41 1HH, United Kingdom. Scotland Registered Company Number: SC136640

Appendix A – References

Document References

- 1) FT800 Datasheet: [DS_FT800 Embedded Video Engine](#)
- 2) OpenGL Reference Manual: The Official Reference Document to OpenGL, Version 1.4
- 3) FT801 Datasheet: DS_FT801
- 4) Application note of FT800 FT801 Internal Clock Trimming:
AN_299_FT800_FT801_Internal_Clock_Trimming

Acronyms & Abbreviations

Terms	Description
CS	Chip select
DL/dl	Display list
EVE	Embedded Video Engine
GPIO	General Purpose Input/output
Hz/KHz/MHz	Hertz/Kilo Hertz/Mega Hertz
I ² C	Inter-Integrated Circuit
LSB	least significant bit
MCU	Micro controller unit
MSB	most significant bit
OS	operating system
PWM	Pulse-width modulation
PWR	Power
RAM	Random access memory
RGB	Red Blue Green
SPI	Serial Peripheral Interface
USB	Universal Serial Bus
USB-IF	USB Implementers Forum
RO	Read only
fps	Frame per second

Appendix B – List of Figures & Tables

List of Figures

Figure 1: Software Architecture	12
Figure 2: Horizontal Timing	13
Figure 3: Vertical Timing	14
Figure 4: Pixel clocking with no CSPREAD	14
Figure 5: Pixel clocking with CSPREAD	14
Figure 7: Getting Start Example Image.....	19
Figure 6: FT800 graphics coordinates plane in pixel precision	20
Figure 8: The constants of ALPHA_FUNC	85
Figure 9: Pixel format for L1/L4/L8.....	92
Figure 10: Pixel format for ARGB2/1555	92
Figure 11: Pixel format for ARGB4, RGB332, RGB565 and Palette	93
Figure 12: STENCIL_OP constants definition.....	138

List of Tables

Table 1 Bitmap rendering performance	31
Table 2 REG_SWIZZLE and RGB pins mapping table.....	34
Table 3 Graphics Context	81
Table 4 FT800 Graphics Primitives list.....	82
Table 5 Graphics Bitmap Format table	83
Table 6 FT800 graphics primitive operation definition	86
Table 7 BITMAP_LAYOUT format list	89
Table 8 BLEND_FUNC constant value definition	107
Table 9 FT800 Font metrics block format.....	148
Table 10 Widgets color setup table.....	150
Table 11 Co-processor engine graphics state	150
Table 12 Parameter OPTION definition	151
Table 13 Touch Registers map table	253

Appendix C – Memory Map

Start Address	End Address	Size	NAME	Description
00 0000h	03 FFFFh	256 kB	RAM_G	Main graphics RAM
0C 0000h	0C 0003h	4 B	ROM_CHIPID	FT800 chip identification and revision information: Byte [0:1] Chip ID: "0800" Byte [2:3] Version ID: "0100" FT801 chip identification and revision information: Byte [0:1] Chip ID: "0801" Byte [2:3] Version ID: "0100"
0B B23Ch	0F FFFBh	275 kB	ROM_FONT	Font table and bitmap
0F FFFCh	0F FFFFh	4 B	ROM_FONT_ADDR	Font table pointer address
10 0000h	10 1FFFh	8 kB	RAM_DL	Display List RAM
10 2000h	10 23FFh	1 kB	RAM_PAL	Palette RAM
10 2400h	10 257Fh	380 B	REG_*	Registers
10 8000 h	10 8FFFh	4 kB	RAM_CMD	Graphics Engine Command Buffer
1C 2000 h	1C 27FFh	2 kB	RAM_SCREENSHOT	Screenshot readout buffer

Note 1: The addresses beyond this table are reserved and shall not be read or written unless otherwise specified.

Note 2: The ROM_CHIPID utilizes a part of shadow address from ROM_FONT address space.

Appendix D - List of Code Snippet

Code snippet 1 Initialization sequence	16
Code snippet 2 sound synthesizer play C8 on the xylophone.....	17
Code snippet 3 sound synthesizer check the status of sound playing	17
Code snippet 4 sound synthesizer stop playing sound	17
Code snippet 5 Audio playback	18
Code snippet 6 Check the status of audio playback.....	18
Code snippet 7 Stop the audio playback.....	18
Code snippet 8 Getting Started	19
Code snippet 9 dl function definition	26
Code snippet 10 color and transparency.....	27
Code snippet 11 negative screen coordinates example.....	29
Code Snippet 12 Screenshot with full pixel value	30
Code snippet 13 CMD_GETPTR command example	223
Code snippet 14 CMD_CALIBRATE example	231
Code snippet 15 CMD_SCREENSAVER example	236
Code snippet 16 CMD_SKETCH example	238
Code snippet 17 CMD_SETFONT example.....	240
Code snippet 18 CMD_SNAPSHOT 160x120-screen	245
Code snippet 19 CMD_LOGO command example	246

Appendix E - List of Registers

Register Definition 1	REG_PCLK Definition	32
Register Definition 2	REG_PCLK_POL Definition	33
Register Definition 3	REG_CSPREAD Definition	33
Register Definition 4	REG_SWIZZLE Definition	34
Register Definition 5	REG_DITHER Definition	35
Register Definition 6	REG_OUTBITS Definition	35
Register Definition 7	REG_ROTATE Definition	37
Register Definition 8	REG_VSYNC1 Definition	37
Register Definition 9	REG_VSYNC0 Definition	38
Register Definition 10	REG_VSIZE Definition	38
Register Definition 11	REG_VOFFSET Definition	39
Register Definition 12	REG_VCYCLE Definition	39
Register Definition 13	REG_HSYNC1 Definition	40
Register Definition 14	REG_HSYNC0 Definition	40
Register Definition 15	REG_HSIZE Definition	41
Register Definition 16	REG_HOFFSET Definition	41
Register Definition 17	REG_HCYCLE	42
Register Definition 18	REG_TAP_MASK	42
Register Definition 19	REG_TAP_CRC Definition	43
Register Definition 20	REG_DLSWAP Definition	44
Register Definition 21	REG_TAG Definition	45
Register Definition 22	REG_TAG_Y Definition	45
Register Definition 23	REG_TAG_X Definition	46
Register Definition 24	REG_TOUCH_DIRECT_Z1Z2 Definition	47
Register Definition 25	REG_TOUCH_DIRECT_XY	48
Register Definition 26	REG_TOUCH_TRANSFORM_F Definition	49
Register Definition 27	REG_TOUCH_TRANSFORM_E Definition	50
Register Definition 28	REG_TOUCH_TRANSFORM_D Definition	51
Register Definition 29	REG_TOUCH_TRANSFORM_C Definition	52
Register Definition 30	REG_TOUCH_TRANSFORM_B Definition	53
Register Definition 31	REG_TOUCH_TRANSFORM_A Definition	54
Register Definition 32	REG_TOUCH_TAG Definition	55
Register Definition 33	REG_TOUCH_TAG_XY Definition	56
Register Definition 34	REG_TOUCH_SCREEN_XY Definition	57
Register Definition 35	REG_TOUCH_RZ Definition	58
Register Definition 36	REG_TOUCH_RAW_XY Definition	58
Register Definition 37	REG_TOUCH_RZTHRESH Definition	59
Register Definition 38	REG_TOUCH_OVERSAMPLE Definition	59
Register Definition 39	REG_TOUCH_SETTLE Definition	60
Register Definition 40	REG_TOUCH_CHARGE Definition	60
Register Definition 41	REG_TOUCH_ADC_MODE Definition	61
Register Definition 42	REG_TOUCH_MODE Definition	61
Register Definition 43	REG_PLAY Definition	62
Register Definition 44	REG_SOUND Definition	62
Register Definition 45	REG_VOL_SOUND Definition	63
Register Definition 46	REG_VOL_PB Definition	63
Register Definition 47	REG_PLAYBACK_PLAY Definition	64
Register Definition 48	REG_PLAYBACK_LOOP Definition	65
Register Definition 49	REG_PLAYBACK_FORMAT Definition	65
Register Definition 50	REG_PLAYBACK_FREQ Definition	66
Register Definition 51	REG_PLAYBACK_READPTR Definition	66
Register Definition 52	REG_PLAYBACK_LENGTH Definition	67

Register Definition 53	REG_PLAYBACK_START Definition	67
Register Definition 54	REG_CMD_DL Definition	68
Register Definition 55	REG_CMD_WRITE Definition	68
Register Definition 56	REG_CMD_READ Definition	69
Register Definition 57	REG_TRACKER Definition	69
Register Definition 58	REG_PWM_DUTY Definition	70
Register Definition 59	REG_PWM_HZ Definition	72
Register Definition 60	REG_INT_MASK Definition	72
Register Definition 61	REG_INT_EN Definition	73
Register Definition 62	REG_INT_FLAGS Definition	74
Register Definition 63	REG_GPIO Definition	74
Register Definition 64	REG_GPIO_DIR Definition	75
Register Definition 65	REG_CPURESET Definition	75
Register Definition 66	REG_SCREENSHOT_READ Definition	76
Register Definition 67	REG_SCREENSHOT_BUSY Definition	76
Register Definition 68	REG_SCREENSHOT_START Definition	77
Register Definition 69	REG_SCREENSHOT_Y Definition	77
Register Definition 70	REG_SCREENSHOT_EN Definition	77
Register Definition 71	REG_FREQUENCY Definition	78
Register Definition 72	REG_CLOCK Definition	78
Register Definition 73	REG_FRAMES Definition	79
Register Definition 74	REG_ID Definition	79
Register Definition 75	REG_TRIM Definition	80
Register Definition 76	REG_CTOUCH_MODE Definition	247
Register Definition 77	REG_CTOUCH_EXTENDED Definition	248
Register Definition 78	REG_CTOUCH_TOUCH0_XY Definition	248
Register Definition 79	REG_CTOUCH_TOUCH1_XY Definition	249
Register Definition 80	REG_CTOUCH_TOUCH2_XY Definition	249
Register Definition 81	REG_CTOUCH_TOUCH3_XY Definition	250
Register Definition 82	REG_CTOUCH_TOUCH4_X Definition	250
Register Definition 83	REG_CTOUCH_TOUCH4_Y Definition	251

Appendix F – Revision History

Document Title: FT800 Series Programmer Guide
 Document Reference No.: BRT_000030
 Clearance No.: BRT#037
 Product Page: <http://brtchip.com/product>
 Document Feedback: [Send Feedback](#)

Revision	Changes	Date
0.1	Initial Draft Release	2012-08-01
2.0	FT801 content added	2014-08-01
2.1	Updated section 5.37 dimensions Dual branding to reflect the migration of the product to the Bridgetek name – logo changed, copyright changed	2016-09-19